

UG0693
User Guide
Image Edge Detection



a  **MICROCHIP** company



a  MICROCHIP company

Microsemi Headquarters

One Enterprise, Aliso Viejo,
CA 92656 USA

Within the USA: +1 (800) 713-4113

Outside the USA: +1 (949) 380-6100

Sales: +1 (949) 380-6136

Fax: +1 (949) 215-4996

Email: sales.support@microsemi.com

www.microsemi.com

©2019 Microsemi, a wholly owned subsidiary of Microchip Technology Inc. All rights reserved. Microsemi and the Microsemi logo are registered trademarks of Microsemi Corporation. All other trademarks and service marks are the property of their respective owners.

Microsemi makes no warranty, representation, or guarantee regarding the information contained herein or the suitability of its products and services for any particular purpose, nor does Microsemi assume any liability whatsoever arising out of the application or use of any product or circuit. The products sold hereunder and any other products sold by Microsemi have been subject to limited testing and should not be used in conjunction with mission-critical equipment or applications. Any performance specifications are believed to be reliable but are not verified, and Buyer must conduct and complete all performance and other testing of the products, alone and together with, or installed in, any end-products. Buyer shall not rely on any data and performance specifications or parameters provided by Microsemi. It is the Buyer's responsibility to independently determine suitability of any products and to test and verify the same. The information provided by Microsemi hereunder is provided "as is, where is" and with all faults, and the entire risk associated with such information is entirely with the Buyer. Microsemi does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other IP rights, whether with regard to such information itself or anything described by such information. Information provided in this document is proprietary to Microsemi, and Microsemi reserves the right to make any changes to the information in this document or to any products and services at any time without notice.

About Microsemi

Microsemi, a wholly owned subsidiary of Microchip Technology Inc. (Nasdaq: MCHP), offers a comprehensive portfolio of semiconductor and system solutions for aerospace & defense, communications, data center and industrial markets. Products include high-performance and radiation-hardened analog mixed-signal integrated circuits, FPGAs, SoCs and ASICs; power management products; timing and synchronization devices and precise time solutions, setting the world's standard for time; voice processing devices; RF solutions; discrete components; enterprise storage and communication solutions, security technologies and scalable anti-tamper products; Ethernet solutions; Power-over-Ethernet ICs and midspans; as well as custom design capabilities and services. Learn more at www.microsemi.com.

Contents

1	Revision History	1
1.1	Revision 4.0	1
1.2	Revision 3.0	1
1.3	Revision 2.0	1
1.4	Revision 1.0	1
2	Image Edge Detection	2
3	Hardware Implementation	3
3.1	Write LSRAM	3
3.2	Read LSRAM	3
3.3	Sobel Filter	3
4	Interfaces	4
4.1	Ports	4
4.2	Configuration Parameters	4
5	Timing Diagram	5
6	Testbench	6
6.1	Simulation Steps	6
7	Simulation Result	10
8	Resource Utilization	11

Figures

Figure 1	Sobel Operator Horizontal and Vertical Kernels	2
Figure 2	Image Edge Detection Block Diagram	3
Figure 3	Timing Diagram of Edge Detection Showing Valid Input and Output Data	5
Figure 4	Opening New SmartDesign TestBench	6
Figure 5	Naming the Testbench	6
Figure 6	IP Location	7
Figure 7	Instantiation of the IP	7
Figure 8	Promote the Ports to Top Level	7
Figure 9	Ports Promoted to Top-level	8
Figure 10	Generate Component Button	8
Figure 11	The Import Files Option	8
Figure 12	Imported File	8
Figure 13	Simulating Pre-Synthesis Design	9
Figure 14	ModelSim Simulation Window	9
Figure 15	Input Image	10
Figure 16	Output Image	10

Tables

Table 1	Input and Output Ports	4
Table 2	Configuration Parameters	4
Table 3	Testbench Configuration Parameters	6
Table 4	Resource Utilization on PolarFire	11
Table 5	Resource Utilization on SmartFusion2	11

1 Revision History

The revision history describes the changes that were implemented in the document. The changes are listed by revision, starting with the most current publication.

1.1 Revision 4.0

The following is a summary of the changes made in this revision.

- Updated the block diagram and timing diagrams, see [Figure 2](#), page 3, [Figure 3](#), page 5.
- Updated the tables in [Interfaces](#), page 4, [Resource Utilization](#), page 11.
- Updated [Testbench](#), page 6.
- Updated the input and output image of simulation, see [Simulation Result](#), page 10.

1.2 Revision 3.0

Updated the resource utilization report.

1.3 Revision 2.0

Added the steps to simulate the core using the testbench.

1.4 Revision 1.0

The first publication of this document.

2 Image Edge Detection

Image Edge Detection is an image processing method for feature detection and extraction. This method is used to identify points in a digital image where the brightness changes sharply and discontinues. The edge detection method reduces the amount of data in an image and preserves the structural properties for further processing. In a gray level image, the edge is a local feature with in a neighborhood separate regions. The gray level is more or less uniform with in different values on the two sides of the edge. For a noisy image, it is difficult to detect edges as both edge and noise contains high frequency contents, which results in blurred and distorted images.

Microsemi offers the Image Edge Detection IP that enables designers to use the edge detection for image processing.

The Image Edge Detection IP implements Sobel filter, which is a classical algorithm in the field of image and video processing for the extraction of object edges. Sobel filter works on the premise of computing an estimate of the first derivative of an image to extract the edge information. By computing the x and y direction derivatives of a specific pixel against a neighborhood of surrounding pixels, it is possible to extract the boundary between two distinct elements in an image. Due to the computational load of calculating derivatives using the squaring and square root operators, fixed coefficient masks are adopted as a suitable approximation in computing the derivative at a specific point. In the case of Sobel, the masks used are shown in the following figure.

Figure 1 • Sobel Operator Horizontal and Vertical Kernels

Vertical Mask			Horizontal Mask		
-1	0	1	1	2	1
-2	0	2	0	0	0
-1	0	1	-1	-2	1

These kernels can be combined together to find the absolute magnitude of the gradient at each point. The gradient magnitude is computed using:

$$G = \sqrt{G_x^2 + G_y^2}$$

Typically an approximate magnitude is computed using:


$$|G| = |G_x| + |G_y|$$

This is much faster to compute. The Sobel operator has the advantage of simplicity in calculation.

3 Hardware Implementation

The following figure shows the Image Edge Detection block diagram.

Figure 2 • Image Edge Detection Block Diagram

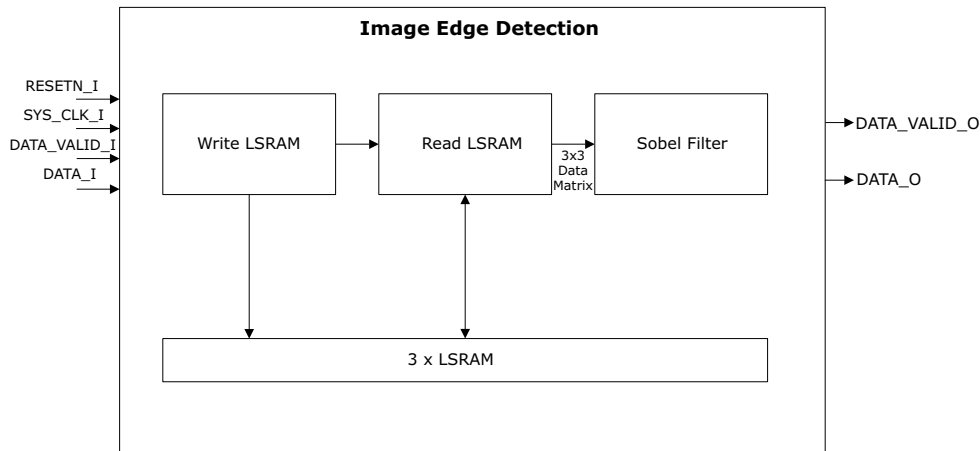

As shown in Figure 2, page 3, the Image Edge Detection IP consists of the following subsystems:

3.1 Write LSRAM

The data input to the edge detection IP is written into 3 different LSRAM. The 1st, 4th, 7th..... line of the frame are written to LSRAM1, the 2nd, 5th, 8th line of the frame are written into LSRAM2 and the 3rd, 6th, 9th ... line of the frame are written into LSRAM3. The LSRAM addresses and write enable signals are generated by write LSRAM submodule.

3.2 Read LSRAM

The read submodule generates the read enable signals and the addresses to read from LSRAM. It also has the 3x3 window logic which reads the 3x3 window from LSRAMs and feeds to the Sobel filter interpolation block. The pixel at which the edge must be computed is placed at the center of the 3x3 window. Then the window slides right to compute the value of the next pixel in the line.

For the first line of the frame, the first row of the 3x3 window is all zeros, the second row is LSRAM1 data and third row is LSRAM2 data. For the second line, the first row is LSRAM1 data, second row is LSRAM2 data and third row is LSRAM3 data. For the third line, the first row is LSRAM2 data, second row is LSRAM3 data and third row is LSRAM1 data and so on.

3.3 Sobel Filter

The Sobel filter performs the Sobel operation (as described in section 2) on the 3x3 window data coming from Read LSRAM block to produce the edge detected image.

4 Interfaces

This section describes the input/output ports and the configuration parameters of the Image Edge Detection IP.

4.1 Ports

The following table lists the input and output ports.

Table 1 • Input and Output Ports

Port Name	Type	Width	Description
RESETN_I	Input	1bit	Active low asynchronous reset signal to design
SYS_CLK_I	Input	1bit	System clock
DATA_VALID_I	Input	1bit	Asserted high when input data is valid
DATA_I	Input	G_DATA_WIDTH bits	Input RGB data
DATA_VALID_O	Output	1bit	Asserted high when output data is valid
DATA_O	Output	G_DATA_WIDTH bits	Provides the edge detected output

4.2 Configuration Parameters

The following table lists the configuration parameters of the Image Edge Detection IP. These are generic parameters and can vary based on the application requirements.


Table 2 • Configuration Parameters

Name	Description
G_DATA_WIDTH	Width of each pixel
G_RAM_SIZE	Size of the RAM to store one horizontal line Choose values which are powers of 2, such as 2048, and 4096.

5 Timing Diagram

The following figures show the timing diagram of the Image Edge Detection IP.

 Figure 3 • Timing Diagram of Edge Detection Showing Valid Input and Output Data



6 Testbench

A testbench is provided to check the functionality of the Image Edge Detection IP. The following table lists the parameters that can be configured according to the application.

Table 3 • Testbench Configuration Parameters


Name	Description
CLKPERIOD	Clock Period
HEIGHT	Height of the image
WIDTH	Width of the image
WAIT	Amount of delay after each line of input image
DATAWIDTH	Width of each pixel
IMAGE_FILE_NAME	Input image name

6.1 Simulation Steps

The following steps describe how to simulate the core using the testbench.


1. On the Design Flow window, expand Create Design and open Create SmartDesign testbench as shown in the following figure.

Figure 4 • Opening New SmartDesign TestBench

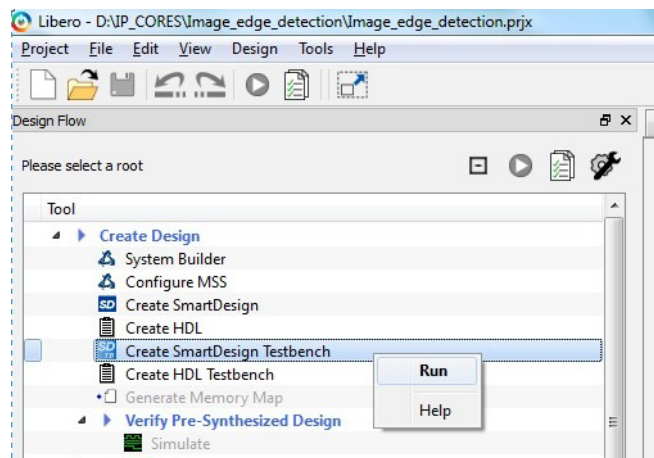

2. Enter a name for the SmartDesign testbench as shown in the following figure.

Figure 5 • Naming the Testbench

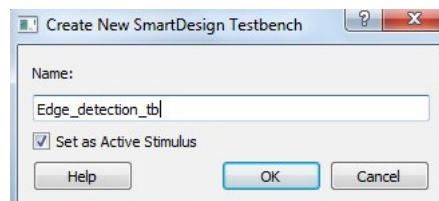


- Go to the Catalog tab and expand Solutions-Video. After that, drag the Image Edge Detection IP to the testbench canvas. The Image Edge Detection IP is highlighted in the following figure.

Figure 6 • IP Location

Name	Version
Arithmetic	
Bus Interfaces	
Clock & Management	
DSP	
I/O	
Macro Library	
Memory & Controllers	
Peripherals	
PolarFire Features	
Processors	
Solutions-FIL-HSP-IP	
Solutions-Video	
Alpha Blending	2.0.0
BAYER_TO_RGB	2.0.0
Bayer Interpolation	2.0.0
Display Controller	2.0.0
Image Edge Detection	3.0.0
Image Edge Detection	2.0.0
Image Enhancement	2.0.0


- After dragging the IP to the testbench canvas, the IP appears as shown in the following figure.

Figure 7 • Instantiation of the IP

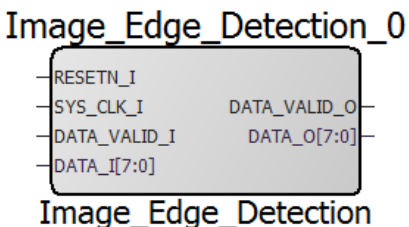


- Select all of the ports and promote them to top level using the Promote to Top Level option, as shown in the following figure.

Figure 8 • Promote the Ports to Top Level

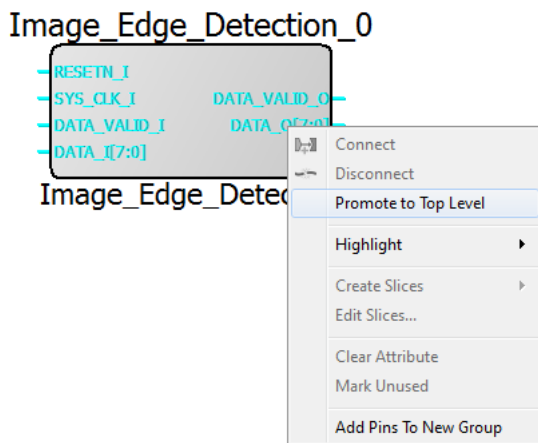


- The ports are promoted to the top level, as shown in the following figure.

Figure 9 • Ports Promoted to Top-level

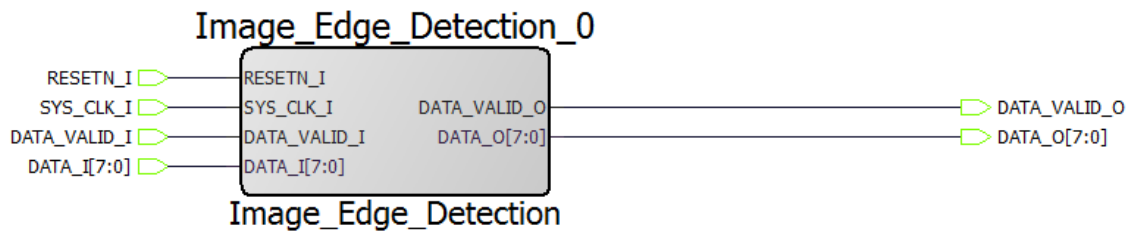


7. Click Generate Component to generate the testbench component. Generate Component is highlighted in the following figure.

Figure 10 • Generate Component Button

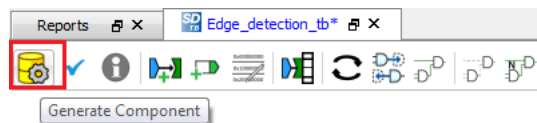

8. Go to the **Files** tab and select **simulation > Import Files** as shown in the following figure.


Figure 11 • The Import Files Option

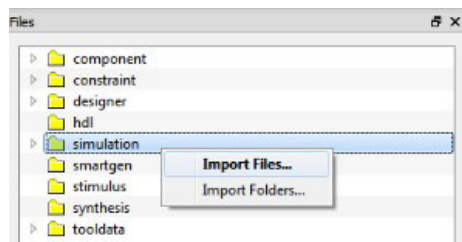

9. Import the RGB file from the following path:
`..\<Project_name>\component\Microsemi\SolutionCore\
Image_Edge_Detection\3.0.0\Stimulus`


The imported file is listed under simulation as shown in [Figure 12](#), page 8.

Figure 12 • Imported File

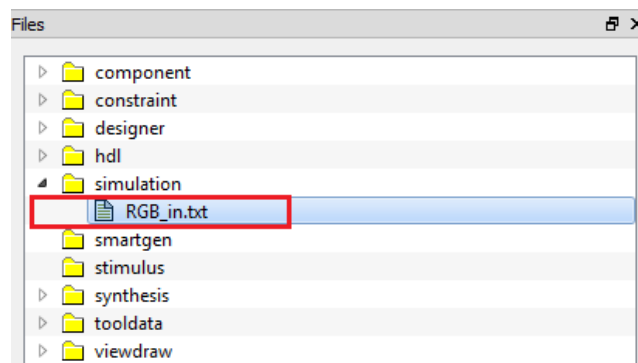


Note: To import a different file, browse the folder that contains the required file, and click **Open**.

10. Go to the **Stimulus Hierarchy** tab and select **edge_detection_test (edge_detection_tb.v) > Simulate Pre-Synth Design > Open Interactively**. The core is simulated for one frame.

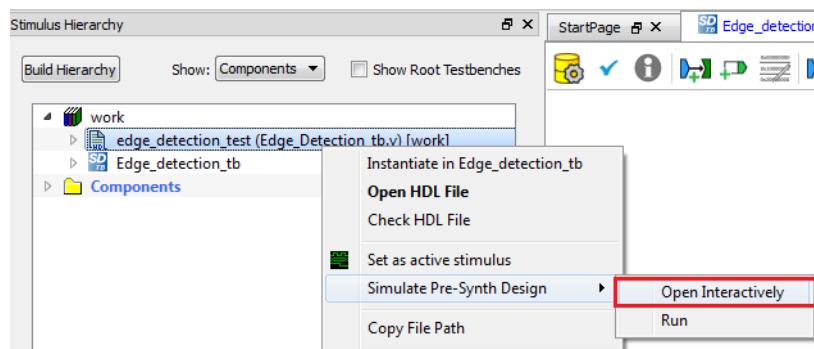Figure 13 • Simulating Pre-Synthesis Design

11. ModelSim opens with the testbench file as shown in the following figure.

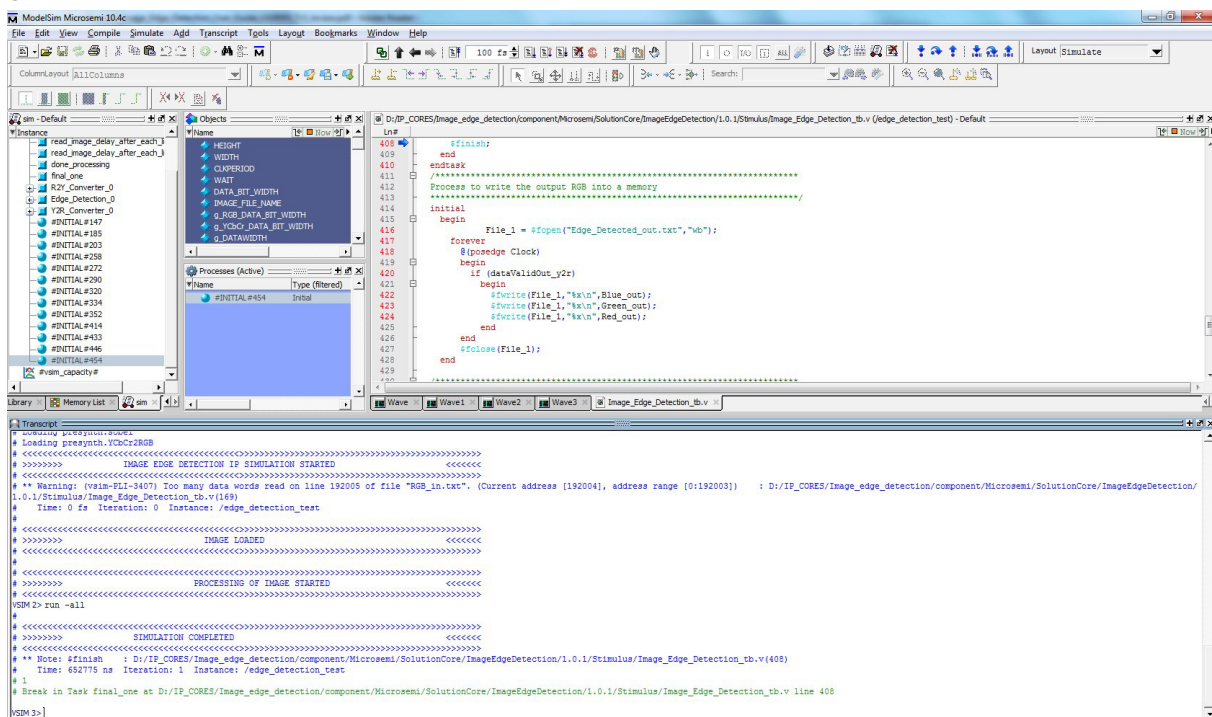Figure 14 • ModelSim Simulation Window


If the simulation is interrupted due to the runtime limit specified in the DO file, use the `run -all` command to complete the simulation.

The testbench output image file appears in the `Files/simulation` folder after the simulation completes.

7 Simulation Result


This section shows an image before and after being processed using the Image Edge Detection IP.
The following figure shows the input image.

Figure 15 • Input Image

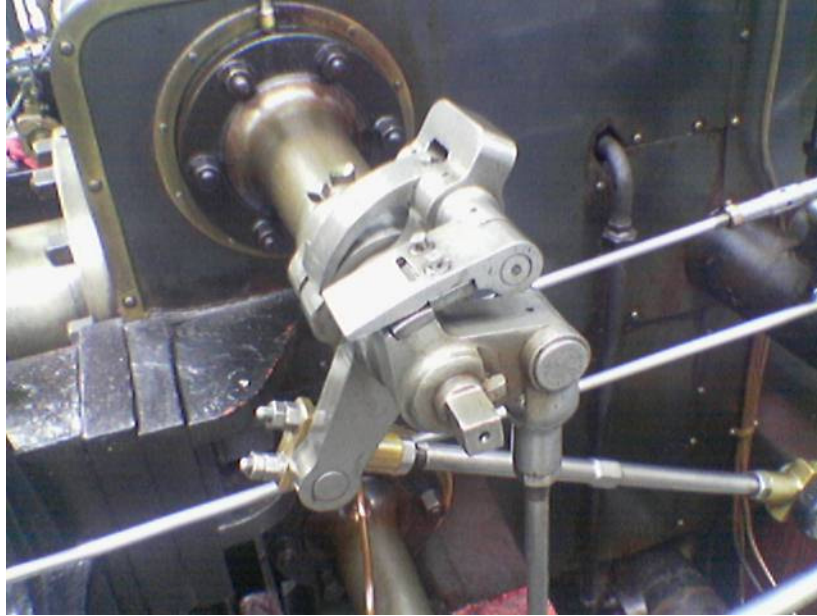

The following figure shows the output image after being processed using the Image Edge Detection IP.

Figure 16 • Output Image

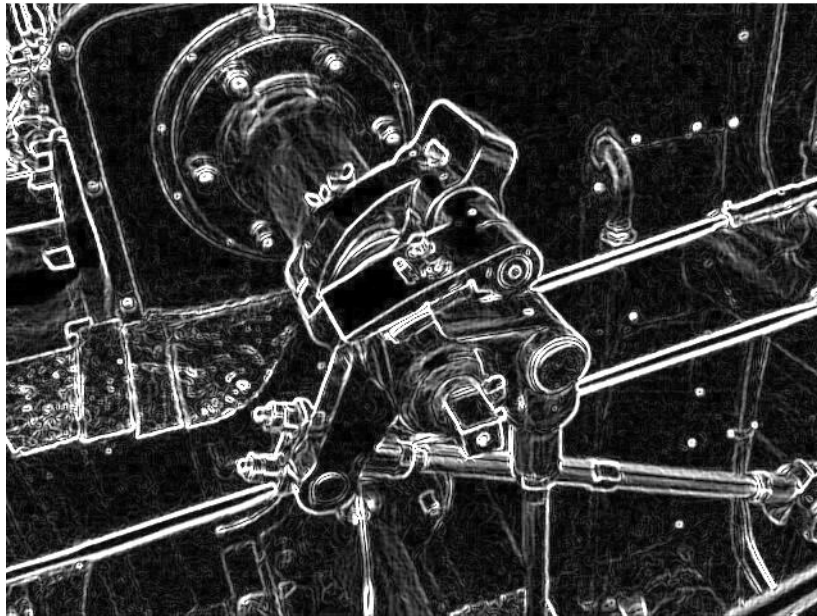

8 Resource Utilization

Image Edge Detection is implemented on the SmartFusion[®]2 system-on-chip (SoC) field programmable gate array (FPGA) device (M2S150T-1152 FC package) and PolarFire[®] FPGA (MPF300TS- 1FCG1152E package). The following figure shows the resource utilization report after synthesis.

Table 4 • Resource Utilization on PolarFire¹

Resource	Usage
DFFs	384
4LUTs	671
LSRAM	3
MACC	0

1. For G_DATA_WIDTH = 8 and
G_RAM_SIZE = 2048.

Table 5 • Resource Utilization on SmartFusion2¹

Resource	Usage
DFFs	400
4LUTs	713
RAM1K18	3
RAM64x18	0
MACC	0

1. For G_DATA_WIDTH = 8 and
G_RAM_SIZE = 2048.