# CorePWM v4.3

Handbook



#### Microsemi Corporation, Mountain View, CA 94043

© 2015 Microsemi Corporation. All rights reserved.

Printed in the United States of America

Part Number: 50200113-7

Release: January 2015 Revision 7

No part of this document may be copied or reproduced in any form or by any means without prior written consent of Microsemi.

Microsemi makes no warranties with respect to this documentation and disclaims any implied warranties of merchantability or fitness for a particular purpose. Information in this document is subject to change without notice. Microsemi assumes no responsibility for any errors that may appear in this document.

This document contains confidential proprietary information that is not to be disclosed to any unauthorized person without prior written consent of Microsemi Corporation.

#### Trademarks

Microsemi, IGLOO, Microsemi Fusion, ProASIC, SmartFusion, SmartFusion2, IGLOO2, RTG4, Libero, Pigeon Point and the associated logos are trademarks or registered trademarks of Microsemi Corporation. All other trademarks and service marks are the property of their respective owners.



# Table of Contents

	Introduction       4         Core Overview       4         Core Version       5         Supported Interfaces       5         Utilization and Performance       5
1	Design Description11Functional Blocks11I/O Signals12Register Map16Configuration Example21APB Interface Timing24
2	Tool Flows25SmartDesign25Importing into Libero IDE27Simulation Flows27Synthesis in the Libero IDE28Place-and-Route in Libero IDE28
3	Example Applications       29         General Purpose PWM Application – Temperature Monitor       29         DAC       29
4	Software Driver
A	List of Document Changes
В	Product Support34Customer Service34Customer Technical Support Center34Technical Support34Website34Contacting the Customer Technical Support Center34ITAR Technical Support35
С	Index



## Introduction

## Core Overview

### **Intended Use**

CorePWM is a general purpose, multi-channel pulse width modulator (PWM) module for motor control, tone generation, battery charging, heating elements, and more.

In General Purpose PWM mode, duty cycle updates can be performed asynchronously or synchronously, based on parameter selection. In synchronous mode, all channels are updated at the beginning of the PWM period, which is useful for motor control and can be used to keep a constant dead band space between channel waveforms. Asynchronous mode is relevant to applications such as LED control, where synchronous updates are not required. Asynchronous mode lowers the area size, reducing shadow register requirements.

In addition to the general purpose PWM modes, there is a "Low Ripple DAC" mode that creates a minimum period pulse train whose High/Low average is that of the chosen duty cycle. When used with a low-pass filter (such as a simple RC circuit), a DAC can be created with far better bandwidth and ripple performance than a standard PWM algorithm can achieve. This type of DAC is ideally suited for fine tuning of power supply output levels.

CorePWM also provides support for tachometer monitoring of 3- and 4-wire fans. Incoming tachometer data is read by the firmware through the APB interface to calculate fan speed.

#### **Key Features**

- Configuration updates for all channels can be synchronized to the beginning of the PWM period, allowing precise updates and maintaining phase alignments between channels
- · Configurable resolution based on the APB bus width
- · Low-cost PWM solution with up to 16 separate PWM digital outputs, configurable via a register interface
- For DAC applications: Optional, per-channel Low Ripple DAC mode, allowing for greater resolution output of a given filter
- Low-cost TACHOMETER solution with up to 16 separate TACH digital inputs, configurable via a register interface
- All PWM outputs are double-edge-controlled
- · Per-channel fixed register option for lower tile count
- · Edge control based on a configurable PWM period with prescaler value and 0% to 100% duty cycle capability
- · Set High, set Low, and Toggle Edge-Control modes
- Can be programmed on-the-fly from a microcontroller, such as Core8051s, CoreABC, or the Fusion backbone
- · Can be used to perform open or closed-loop margining of power supplies

CorePWM v4.3



## Supported Families

- IGLOO®/e
- ProASIC®3/E/L
- Fusion
- ProASIC<sup>PLUS®</sup>
- Axcelerator®
- RTAX-S
- RTAX-DSP
- SmartFusion<sup>®</sup>
- SmartFusion®2
- IGLOO®2
- RTG4™

## Core Version

This handbook supports CorePWM version 4.3.

## Supported Interfaces

CorePWM is available with an APB interface, which is described in the "APB Interface Timing" section on page 24.

## Utilization and Performance

CorePWM has been implemented in several of Microsemi's device families. A summary of various implementation data is listed in the following tables (using standard speed grades).

As shown in Table 1 through Table 8 on page 10, it is recommended to fix all registers that are not used, via parameters, to ensure optimal synthesis tile reduction.

Family	Tiles			Utilization		Performance
ranniy	Sequential	Combinatorial	Total	Device	Total	(MHz)
IGLOO/e	20	96	116	AGLE600	1.0%	72
ProASIC3/E	20	76	96	A3P250	2.0%	96
Fusion	20	76	96	AFS600	1.0%	101
ProASIC <sup>PLUS</sup>	20	102	122	APA300	1.0%	101
Axcelerator	20	31	51	AX250	1.0%	252
RTAX-S	20	31	51	RTAX250S	1.0%	223
SmartFusion	20	78	98	A2F500M3G	0.85%	180

Table 1 · CorePWM Device Utilization and Performance (one 8-bit DAC channel configuration)

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 1, APB\_DWIDTH = 8; DAC\_MODE1 = 1 (DAC mode), FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 0, FIXED\_PERIOD\_EN = 1, FIXED\_PERIOD = 1, SHADOW\_REG\_EN1 = 0.



Introduction

Table 1 · CorePWM Device Utilization and Performance	(and Q hit DAC	abannal configuration) (continued)
Table 1 · ColeP with Device Utilization and Performance	tone o-bit DAC	channel configuration) (continued)

SmartFusion2	20	30	50	M2S150T	0.03%	450
IGLOO2	20	30	50	M2GL150T	0.03%	450
RTG4	20	40	60	RT4G150	0.04%	300

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 1, APB\_DWIDTH = 8; DAC\_MODE1 = 1 (DAC mode), FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 0, FIXED\_PERIOD\_EN = 1, FIXED\_PERIOD = 1, SHADOW\_REG\_EN1 = 0.

Family	Tiles			Utilization		Performance
Family	Sequential	Combinatorial	Total	Device	Total	(MHz)
IGLOO/e	54	147	201	AGLE600V2	2.0%	59
ProASIC3/E	54	111	165	A3P250	3.0%	85
Fusion	54	111	165	AFS600	1.0%	94
ProASIC <sup>PLUS</sup>	55	209	264	APA200	3.0%	74
Axcelerator	57	53	110	AX250	2.0%	210
RTAX-S	57	53	110	RTAX250S	1.0%	176
SmartFusion	86	140	226	A2F500M3G	2.0%	132
SmartFusion2	53	68	121	M2S150T	0.09%	245
IGLOO2	53	68	121	M2GL150T	0.09%	245
RTG4	69	75	144	RT4G150	0.1%	227

 Table 2 · CorePWM Device Utilization and Performance
 (one 16-bit DAC channel configuration)

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 1, APB\_DWIDTH = 16; DAC\_MODE1 = 1 (DAC mode), FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 0, FIXED\_PERIOD\_EN = 1, FIXED\_PERIOD = 1, SHADOW\_REG\_EN1 = 1.

Table 3 · CorePWM Device Utilization and Performance (one 8-bit general purpose PWM channel configuration)

Family	Tiles			Utilizatio	Performance	
1 anni y	Sequential	Combinatorial	Total	Device	Total	(MHz)
IGLOO/e	15	55	70	AGLE600V2	1.0%	82
ProASIC3/E	15	55	70	A3P250	1.0%	130

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 1, APB\_DWIDTH = 8; DAC\_MODE1 = 0 (general purpose PWM mode), FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 0, FIXED\_PERIOD\_EN = 1, FIXED\_PERIOD = 8, FIXED\_PWM\_POS\_EN1 = 1, FIXED\_PWM\_POSEDGE1 = 0, FIXED\_PWM\_NEG\_EN1 = 0, FIXED\_PWM\_NEGEDGE1 = 0, SHADOW\_REG\_EN1 = 0



Fusion	15	55	70	AFS600	1.0%	144
ProASIC <sup>PLUS</sup>	15	58	73	APA300	1.0%	141
Axcelerator	16	40	56	AX250	1.0%	181
RTAX-S	16	40	56	RTAX250S	1.0%	187
SmartFusion	15	60	75	A2F500M3G	0.65%	211
SmartFusion2	23	45	68	M2S150T	0.05%	319
IGLOO2	23	45	68	M2GL150T	0.05%	319
RTG4	21	58	79	RT4G150	0.05%	238

## Table 3 · CorePWM Device Utilization and Performance (one 8-bit general purpose PWM channel configuration) (continued)

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 1, APB\_DWIDTH = 8; DAC\_MODE1 = 0 (general purpose PWM mode), FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 0, FIXED\_PERIOD\_EN = 1, FIXED\_PERIOD = 8, FIXED\_PWM\_POS\_EN1 = 1, FIXED\_PWM\_POSEDGE1 = 0, FIXED\_PWM\_NEG\_EN1 = 0, FIXED\_PWM\_NEGEDGE1 = 0, SHADOW\_REG\_EN1 = 0

Table 4 · CorePWM Device Utilization and Performance (one 16-bit general purpose PWM channel configuration)

Family	Tiles			Utilization		Performance
T anny	Sequential	Combinatorial	Total	Device	Total	(MHz)
IGLOO/e	91	272	363	AGLE600V2	3.0%	46
ProASIC3/E	91	275	366	A3P250	6.0%	72
Fusion	91	275	366	AFS600	3.0%	79
ProASIC <sup>PLUS</sup>	127	482	609	APA300	6.0%	59
Axcelerator	93	145	238	AX250	6.0%	110
RTAX-S	93	145	238	RTAX250S	6.0%	88
SmartFusion	90	324	414	A2F500M3G	3.6%	110
SmartFusion2	100	150	350	M2S150T	0.17%	170
IGLOO2	100	150	350	M2GL150T	0.17%	170
RTG4	134	166	300	RT4G150	0.2%	182

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 1, APB\_DWIDTH = 16; DAC\_MODE1 = 0 (General Purpose PWM mode); SHADOW\_REG\_EN1 = 1, FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 64.



Family		Tiles		Utilizati		
	Sequential	Combinatorial	Total	Device	Total	Performance (MHz)
IGLOO/e	58	208	266	AGLE600V2	2.0%	76
ProASIC3/E	58	150	208	A3P250	3.0%	101
Fusion	58	150	208	AFS600	2.0%	109
ProASIC <sup>PLUS</sup>	58	280	338	APA300	4.0%	101
Axcelerator	58	66	124	AX250	2.0%	250
RTAX-S	58	66	124	RTAX250S	2.0%	217
SmartFusion	66	159	225	A2F500M3G	2.0%	157
SmartFusion2	66	72	138	M2S150T	0.1%	467
IGLOO2	66	72	138	M2GL150T	0.1%	467
RTG4	66	77	143	RT4G150	0.09%	300

 Table 5 · CorePWM Device Utilization and Performance (8-bit multiple-output configuration example: 3 DAC mode outputs without shadow update register)

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 3, APB\_DWIDTH = 8; DAC\_MODE1, DAC\_MODE2, and DAC\_MODE3 = 1 (DAC Mode) FIXED\_PERIOD\_EN = 1, FIXED\_PERIOD = 1, FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 0, SHADOW\_REG\_EN1 = 0, SHADOW\_REG\_EN2 = 0, SHADOW\_REG\_EN3 = 0.

Table 6 · CorePWM Device Utilization and Performance (12-bit multiple-output configuration example: 3 DAC mode
outputs, 3 general purpose PWM mode outputs)

Family	Tiles			Utilization		Performance
Failiny	Sequential	Combinatorial	Total	Device	Total	(MHz)
IGLOO/e	212	723	935	AGLE600V2	7.0%	45
ProASIC3/E	212	694	906	A3P250	15.0%	74
Fusion	212	694	906	AFS600	7.0%	82
ProASIC <sup>PLUS</sup>	229	1054	1,283	APA300	16.0%	67
Axcelerator	216	307	523	AX250	12.0%	103
RTAX-S	216	307	523	RTAX250S	12.0%	87
SmartFusion	148	396	552	A2F500M3G	4.8%	132

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 6, APB\_DWIDTH = 16; DAC\_MODE1, DAC\_MODE2, and DAC\_MODE3 = 1 (DAC mode), DAC\_MODE4, DAC\_MODE5, and DAC\_MODE6 = 0 (general purpose PWM mode), FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 8, SHADOW\_REG\_EN1 = 0, SHADOW\_REG\_EN2 = 0, SHADOW\_REG\_EN3 = 0, SHADOW\_REG\_EN3 = 0, SHADOW\_REG\_EN4 = 0, SHADOW\_REG\_EN5 = 0, SHADOW\_REG\_EN6 = 0,.



Family	Tiles			Utilizati	Performance	
T annry	Sequential	Combinatorial	Total	Device	Total	(MHz)
SmartFusion2	176	274	450	M2S150T	0.31%	215
IGLOO2	176	274	450	M2GL150T	0.31%	215
RTG4	254	339	593	RT4G150	0.39%	114

 Table 6 · CorePWM Device Utilization and Performance (12-bit multiple-output configuration example: 3 DAC mode outputs, 3 general purpose PWM mode outputs) (continued)

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: PWM\_NUM = 6, APB\_DWIDTH = 16; DAC\_MODE1, DAC\_MODE2, and DAC\_MODE3 = 1 (DAC mode), DAC\_MODE4, DAC\_MODE5, and DAC\_MODE6 = 0 (general purpose PWM mode), FIXED\_PRESCALE\_EN = 1, FIXED\_PRESCALE = 8, SHADOW\_REG\_EN1 = 0, SHADOW\_REG\_EN2 = 0, SHADOW\_REG\_EN3 = 0, SHADOW\_REG\_EN3 = 0, SHADOW\_REG\_EN4 = 0, SHADOW\_REG\_EN5 = 0, SHADOW\_REG\_EN6 = 0,.

Table 7 · CorePWM Device Utilization and Performance (one 16-bit general purpose PWM channel and one TACH input
configuration)

Family		Tiles		Utilizati	on	Performance
Fainity	Sequential	Combinatorial	Total	Device	Total	(MHz)
IGLOO/e	314	768	082	AGLE600V2	8.0%	47
ProASIC3/E	314	768	082	A3P250	18.0%	75
Fusion	314	768	1,082	AF600	8.0%	83
ProASIC <sup>PLUS</sup>	328	1,043	1,371	APA300	17.0%	70
Axcelerator	319	483	802	AX250	19.0%	103
RTAX-S	319	483	802	RTAX250S	19.0%	87
SmartFusion	197	613	810	A2F500M3G	7.1%	115
SmartFusion2	252	416	668	M2S150T	0.45%	137
IGLOO2	252	416	668	M2GL150T	0.45%	137
RTG4	329	436	765	RT4G150	0.51%	164

Note: Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: CONFIG\_MODE = 1, PWM\_NUM=3, TACH\_NUM=3,APB\_DWIDTH=16; DAC\_MODE1=0 (General Purpose PWM mode), FIXED\_PRESCALE\_EN=1, FIXED\_PRESCALE=8, FIXED\_PERIOD\_EN=0, FIXED\_PWM\_POS\_EN1=1, FIXED\_PWM\_POSEDGE1=0, FIXED\_PWM\_NEG\_EN1=0, FIXED\_PWM\_NEGEDGE1=0, SHADOW\_REG\_EN1=0, FIXED\_PWM\_POS\_EN2=1, FIXED\_PWM\_POSEDGE2=0, FIXED\_PWM\_NEG\_EN2=0, FIXED\_PWM\_NEGEDGE2=0, SHADOW\_REG\_EN2=0, FIXED\_PWM\_NEG\_EN3=1, FIXED\_PWM\_POSEDGE3=0, FIXED\_PWM\_NEG\_EN3=0, FIXED\_PWM\_NEGEDGE3=0, SHADOW\_REG\_EN3=0

#### Introduction



Family		Tiles		Utilizati	on	Performance
Family	Sequential	Combinatorial	Total	Device	Total	(MHz)
IGLOO/e	207	389	596	AGLE600V2	4.0%	52
ProASIC3/E	207	383	590	A3P250	10.0%	89
Fusion	207	383	590	AF600	4.0%	98
ProASIC <sup>PLUS</sup>	207	506	713	APA300	9.0%	92
Axcelerator	209	269	478	AX250	5%	114
RTAX-S	209	269	478	RTAX250S	11%	101
SmartFusion	204	469	673	A2F500M3G	5.8%	132
SmartFusion2	156	248	404	M2S150T	0.28	210
IGLOO2	156	248	404	M2GL150T	0.28	210
RTG4	204	243	447	RT4G150	0.29%	172

Table 8 · CorePWM Device Utilization and Performance (one TACH input configuration with 16-bit APB data width)

*Note:* Data in this table were achieved using typical synthesis and layout settings. Top-level parameters/generics were set as follows: CONFIG\_MODE = 2, TACH\_NUM=3, APB\_DWIDTH=16.



## Functional Blocks

The CorePWM (pulse width modulation) macro generates up to 16 general purpose PWM signals, as shown in Figure 1-1. CorePWM includes a Register Interface block, Timebase Generation block, TACK INF block, and PWM Generation block.

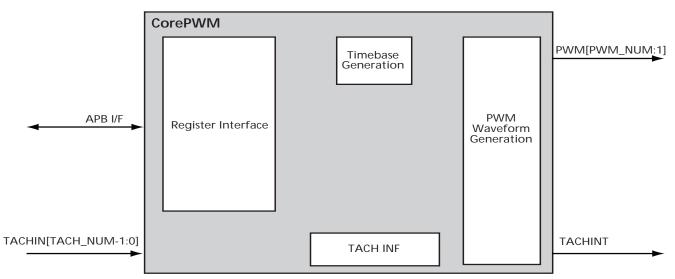


Figure 1-1 · CorePWM Block Diagram

The **Register Interface** block connects to an APB bus for PWM register configuration and updating. Descriptions for all registers are given in Table 1-3 on page 16. A Shadow Register may be used so that PWM waveform updates occur only at the beginning of a PWM period. A shadow register holds all values and writes them when the SYNC\_UPDATE register is set to 1. In other words, for all channel synchronous updates, write a "1" to the SYNC\_UPDATE register after writing to all the channel registers.

The **Timebase Generation** block accepts PRESCALE and PERIOD register values and produces a PERIOD count. The number of system clocks between PERIOD counts is equal to the PRESCALE value.

The PWM Waveform Generation block has two modes:

General Purpose PWM mode takes input Period\_cnt counter values and compares them with the register values for all the PWM positive and negative edge locations. When a comparison is met, each respective output waveform is set to the correct high/low/toggle value. An example General Purpose PWM waveform configuration is demonstrated in Figure 1-3 on page 21. The example explains the relationship between the Prescale and Period register values, and how to configure the PWM waveforms with a given Prescale/Period timebase.

Low Ripple DAC mode is intended to drive a low-pass filter, typically a single-pole RC filter. Narrow pulses of constant width are spread evenly over time such that the average voltage is equal to the duty cycle. The output of the filter is then a DC voltage directly proportional to the duty cycle. This type of pulse train allows for much lower ripple at the output of the filter, and benefits from either higher bandwidth and/or smaller R and C values.

In the Tach interface module, the width of the decrementing counter is configured to 16 bits. The Tach interface module is used to measure the period of the TACHIN[x] signal by measuring between two successive positive or negative edges of TACHIN[x]. The measured value will be stored in the corresponding input's TACHPULSEDUR register. The measured value will be read by the firmware through the APB interface. The access to the control and status registers of the Tach interface module is through the APB interface. The stored value in TACHPULSEDUR will correspond to the count for half of a revolution of a four pole fan. When determining the speed for other than four pole fans, the algorithm



that converts the counter value to RPMs must be adjusted by the firmware. TACH INF supports 16- and 32-bit APB interface, but it does not support 8-bit interfaces.

To accurately measure the speed of 3-wire fans, you must turn on the fan periodically and long enough to get a complete tach measurement, often referred to as PWM pulse stretching. The PWM\_STRETCH register allows you to set the desired PWMx signals to the level specified by PWM\_STRETCH\_VALUE. The following algorithm can be used to measure the speed of 3-wire fans. This algorithm assumes that the TACHMODEy bit is set to '1' (one-shot mode):

- Software enables pulse stretching by writing a '1' to PWM\_STRETCHx, which forces PWMx to PWM\_STRETCH\_VALUEx. This requirement is not enforced by the hardware.
- Software can add a delay to ensure the fan tachometer circuitry is operational before enabling fan speed measurement.
- Software clears the TACHSTATUSy bit, enabling a one-time Tach measurement on the input signal TACHINy corresponding to one of the fans controlled by PWMx
- Software receives an interrupt and verifies that the Tach measurement for TACHINy has been completed (via TACHSTATUSy bit)
- Software disables pulse stretching by writing a '0' to PWM\_STRETCHx.

## I/O Signals

The port signals for the CorePWM macro are defined in Table 1-1 on page 13 and illustrated in Figure 1-2. All signals are either Input (input only) or Output (output only).

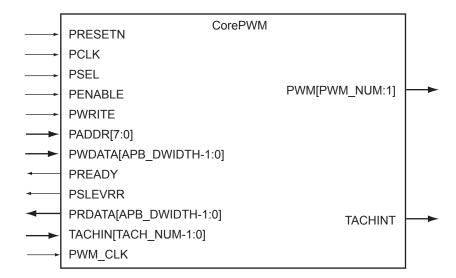


Figure 1-2 · CorePWM I/O Signal Diagram



Name	Туре	Description			
System Signals					
PRESETN	Input	Active low asynchronous reset			
PCLK	Input	System clock – all operations and status shall be synchronous to the rising edge of this clock signal			
Microcontroller Signals					
PSEL	Input	Select line for CorePWM			
PENABLE	Input	Read output enable			
PWRITE	Input	Write enable			
PADDR[7:0]	Input	Register address			
PWDATA[APB_DWIDTH-1:0]	Input	Write address/data input			
PREADY	Output	Ready signal, tied High			
PSLVERR	Output	Transfer error signal, tied Low			
PRDATA[APB_DWIDTH-1:0]	Output	Read data output			
PWM Signals					
PWM[PWM_NUM:1]	Output	Pulse width modulation output			
TACH Signals					
TACHIN[TACH_NUM -1:0]	Input	TACH input			
TACHINT	Output	Interrupt output for the tachometer. This signal indicates a TACHSTATUS register bit has been set to one. The polarity of this signal is controlled by the TACHINT_ACT_LEVEL configurable option.			
PWM_CLK	Input	PWM clock - This clock used if the required frequency for PWM generation is greater/less than PCLK. This signal is only enabled when SEPERATE_PWM_CLK = 1			

Table 1-1 · CorePWM I/O Signal Descriptions

Note: All signals active-High (logic 1) unless otherwise noted.



## Verilog/VHDL Parameters

CorePWM has parameters (Verilog) and generics (VHDL) for configuring the RTL code, described in Table 1-2. All parameters and generics are integer types.

Name	Description
	Selects the Target family. Must be set to match the supported FPGA family:
	11 - Axcelerator
	12 - RTAX-S
	14 - ProASICPLUS
	15 - ProASIC3
	16 - ProASIC3E
TA MILL X7	17 - Fusion
FAMILY	18 - SmartFusion
	19 - SmartFusion2
	20 - IGLOO
	21 - IGLOOe
	22 - ProASIC3L
	24 - IGLOO2
	25 - RTG4
	When 0, supports PWM only (legacy with dead banding support)
CONFIG_MODE	When 1, supports both PWM and TACH
	When 2, supports TACH only
PWM_NUM	Number of PWM outputs from 1 to 16. This parameter is used only when CONFIG_MODE is set to 0 or 1.
APB_DWIDTH	PWM resolution and APB bus width from 8 to 32. This parameter must be set to either 16 or 32 when CONFIG_MODE is either 1 or 2.
FIXED_PRESCALE_EN	Fixed Prescale Enable. FIXED_PRESCALE_EN hardwires the register, disallowing APB write-access, and reducing tile count. This parameter is used only when CONFIG_MODE set to 0 or 1.
FIXED_PRESCALE	Hardwired PRESCALE[APB_DWIDTH -1:0] register value. This parameter is used only when CONFIG_MODE set to 0 or 1.
FIXED_PERIOD_EN	Fixed Period Enable. FIXED_PERIOD_EN hardwires the register, disallowing APB write-access, and reducing tile count. This parameter is used only when CONFIG_MODE set to 0 or 1.
FIXED_PERIOD	Hardwired PERIOD[APB_DWIDTH -1:0] register value. This parameter is used only when CONFIG_MODE set to 0 or 1.
SHADOW_REG_ENx	Shadow Register Enable. Synchronizes all register modification changes to the beginning of the PWM cycle; that is, when PERIOD Count = 0. This parameter is used only when CONFIG_MODE set to 0 or 1.
	DAC mode. 1 = Low ripple DAC mode; 0 = General purpose PWM mode.
DAC_MODE <i>x</i>	Note: x refers to each channel, from 1 to 16.
	This parameter is used only when CONFIG_MODE set to 0 or 1.

Table 1-2 · CorePWM Parameters/Generics Descriptions

CorePWM v4.3



Table 1-2         CorePWM Parameters/Generics Descriptions (continued)
--

	Fixed per channel Positive Edge Enable.
	<i>Note:</i> x refers to each channel, from 1 to 16. FIXED_PWM_POS_ENx hardwires the register, disallowing APB write-access, and reducing tile count.
FIXED_PWM_POS_ENx	In a typical PWM application, either the FIXED_PWM_POS_ENx or the FIXED_PWM_NEG_ENx could be set if one of those edges do not need to be software controlled with APB write-accesses. Fixing both edges would result in static output.
	This parameter is used only when CONFIG_MODE set to 0 or 1.
	Hardwired POSEDGE[APB_DWIDTH -1:0] register value.
FIXED_PWM_POSEDGEx	Note: x refers to each channel, from 1 to 16.
	This parameter is used only when CONFIG_MODE set to 0 or 1.
	Fixed per channel Negative Edge Enable.
	<i>Note: x</i> refers to each channel, from 1 to 16. FIXED_PWM_NEG_ENx hardwires the register, disallowing APB write-access, and reducing tile count.
FIXED_PWM_NEG_EN <i>x</i> FIXED_DAC_OUT_ENx	In a typical PWM application, either the FIXED_PWM_NEG_ENx or the FIXED_PWM_POS_ENx could be set if one of those edges do not need to be software-controlled with APB write-accesses. Fixing both edges would result in static output.
	For DAC applications, the FIXED_PWM_POS_ENx value is unconnected while the FIXED_DAC_OUT_ENx value would typically be disabled, as using it would result in static output.
	This parameter is used only when CONFIG_MODE set to 0 or 1.
FIXED_PWM_NEGEDGE <i>x</i> FIXED_DAC_LEVELOUTx	Hardwired NEGEDGE[APB_DWIDTH -1:0] register value. When in DAC Mode, this parameter also fixes DACx_LEVELOUT, which is typically not fixed in DAC applications, as it would only create a static duty cycle output. Note: x refers to each channel, from 1 to 16.
TIALD_DIAC_LLVLLOUIX	This parameter is used only when CONFIG_MODE set to 0 or 1.
	Defines PWMx level when PWM_STRETCHx is set to 1.
PWM_STRETCH_VALUEx	When 0, PWMx is set to 0 if PWM_STRETCHx is set to 1.
r wwwi_51KE1CI1_vALUEx	When 1, PWMx is set to 1 if PWM_STRETCHx is set to 1 (default).
	This parameter is used only when CONFIG_MODE set to 1.
TACH_NUM	Number of Tachometer inputs from 1 to 16. This parameter is used only when CONFIG_MODE set to 1 or 2.
TACH_EDGEy	Fixed per Tachometer input edge select. Selects the edge used to capture the counter value for the $TACH[x]$ input signals. 0, capture counter value on falling edge of $TACH[x]$ (default); 1, capture counter value on rising edge of $TACH[x]$ . This parameter is used only when CONFIG_MODE set to 1 or 2.
TACHINT_ACT_LEVEL	Selects active Low or active High TACHINT interrupt: 0, active Low interrupt (default); 1, active High interrupt. This parameter is used only when CONFIG_MODE set to 1 or 2.
SEPERATE_PWM_CLK	Separate PWM Clock - If the clock frequency required for PWM generation is greater/less than PCLK this signal should be enabled. When enabled (1) input PWM_CLK can be used for PWM_CLK generation. If PCLK is at the desired clock frequency this parameter/generic should be disabled (0).
Note: APB_DWIDTH must alw	ays be greater than or equal to PWM_NUM for all APB read and write operations to be successful.



## Register Map

All registers are based on APB width parameter selection; default is 8 bits.

Table 1-3 · CorePWM Register Definitions	Definitions	Register	· CorePWM	Table 1-3
--	-------------	----------	-----------	-----------

Register Name	Paddr[7:0]	Description	Type	Default
PRESCALE	0x00	PWM MODE: The system clock cycle is multiplied with the PRESCALE value resulting in the minimum PERIOD count timebase. DAC MODE: The Prescale and Period Registers could be used in conjunction with the shadow register to synchronize DAC LEVELOUT.	R/W	0x08
PERIOD	0x04	PWM MODE: The PRESCALE value is multiplied with the PERIOD value yielding the PWM waveform cycle.	R/W	0x08
PWM_ENABLE_0_7	0x08	Bitwise channel enables for PWM/DAC channels 1 through 8.	R/W	0x00
PWM_ENABLE_8_15	0x0C	Bitwise channel enables for PWM/DAC channels 9 through 16.	R/W	0x00
SYNC_UPDATE	0xE4	SYNC_UPDATE: When this bit is set to "1" and SHADOW_REG_EN is selected, all POSEDGE and NEGEDGE registers are updated synchronously. Synchronous updates to the PWM waveform occur only when SHADOW_REG_EN is asserted and SYNC_UPDATE is set to "1". When this bit is set to "0", all the POSEDGE and NEGEDGE registers are updated asynchronously.	R/W	0x00
PWM1_POSEDGE	0x10	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution. When APB writes to this register, all the channels are updated.	R/W	0x00
PWM1_NEGEDGE DAC1_LEVELOUT	0x14	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM2_POSEDGE	0x18	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM2_NEGEDGE DAC2_LEVELOUT	0x1C	PWM MODE: Sets the negative edge of the output with respect to thePERIOD resolution.DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM3_POSEDGE	0x20	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM3_NEGEDGE DAC3_LEVELOUT	0x24	PWM MODE: Sets the negative edge of the output with respect to thePERIOD resolution.DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM4_POSEDGE	0x28	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM4_NEGEDGE DAC4_LEVELOUT	0x2C	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM5_POSEDGE	0x30	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM5_NEGEDGE DAC5_LEVELOUT	0x34	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00





Register Name	Paddr[7:0]	Description	Туре	Default
PWM6_POSEDGE	0x38	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM6_NEGEDGE DAC6_LEVELOUT	0x3C	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM7_POSEDGE	0x40	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM7_NEGEDGE DAC7_LEVELOUT	0x44	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM8_POSEDGE	0x48	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM8_NEGEDGE DAC8_LEVELOUT	0x4C	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM9_POSEDGE	0x50	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM9_NEGEDGE DAC9_LEVELOUT	0x54	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM10_POSEDGE	0x58	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM10_NEGEDGE DAC10_LEVELOUT	0x5C	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM11_POSEDGE	0x60	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM11_NEGEDGE DAC11_LEVELOUT	0x64	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM12_POSEDGE	0x68	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM12_NEGEDGE DAC12_LEVELOUT	0x6C	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM13_POSEDGE	0x70	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM13_NEGEDGE DAC13_LEVELOUT	0x74	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM14_POSEDGE	0x78	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00



Register Name	Paddr[7:0]	Description	Туре	Default
PWM14_NEGEDGE DAC14_LEVELOUT	0x7C	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution.	R/W	0x00
2.1.di /_112/112001		DAC MODE: Sets the desired output level, from 0-100%.		
PWM15_POSEDGE	0x80	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM15_NEGEDGE DAC15_LEVELOUT	0x84	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM16_POSEDGE	0x88	PWM MODE: Sets the positive edge of the output with respect to the PERIOD resolution.	R/W	0x00
PWM16_NEGEDGE DAC16_LEVELOUT	0x8C	PWM MODE: Sets the negative edge of the output with respect to the PERIOD resolution. DAC MODE: Sets the desired output level, from 0-100%.	R/W	0x00
PWM_STRETCH	0x90	When 0, the state of PWMx is determined by PWMx_POSEDGE/ NEGEDGE register settings. When 1, PWMx is set to PWM_STRETCH_VALUEx.	R/W	0x0000
TACHPRESCALE	0x94	Clock prescale setting. Determines effective clock rate for the counter based on PCLK: 0000 = divide by 1 (default) 0001 = divide by 2 0010 = divide by 4 0011 = divide by 8 0100 = divide by 16 0101 = divide by 32 0110 = divide by 4 0111 = divide by 4 0111 = divide by 128 1000 = divide by 256 1001 = divide by 512 1010 = divide by 1,024 1011 = divide by 2,048 Others = divide by 2,048	R/W	0x0
TACHSTATUS	0x98	TACH status register which contains one bit per TACH input, indicating whether the respective TACHPULSEDUR register has been updated at least once since the bit was cleared. The bits in this register gets cleared by writing "1", "0" does not have any effect.	R/ W1C	0x0000
TACHIRQMASK	0x9C	TACH interrupt mask register with one bit per tachometer signal, indicating whether CorePWM needs to assert an interrupt if the respective bit in TACHSTATUS register is asserted.	R/W	0x0000
TACHMODE	0xA0	TACH Mode. Sets the measurement mode used for each TACH input. When 0: TACH input is continuously measured and stored in the respective TACHPULSEDUR register. When 1: A one-time measurement is performed only if the respective bit in TACHSTATUS register is cleared.	R/W	0x0000

Table 1-3 · CorePWM Register Definitions (cont	inued)
--	--------

#### CorePWM v4.3



Register Name	Paddr[7:0]	Paddr[7:0] Description		Default
TACHPULSEDUR_0	0xA4	Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[0]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.	R	0x0000
TACHPULSEDUR_1	0xA8	Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[1]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.	R	0x0000
TACHPULSEDUR_2	0xAC	Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[2]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.	R	0x0000
TACHPULSEDUR_3	0xB0	Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[3]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.	R	0x0000
TACHPULSEDUR_4	0xB4	Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[4]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.	R	0x0000
TACHPULSEDUR_5	0xB8       Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[5]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		R	0x0000
TACHPULSEDUR_6	UR_6 0xBC Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[6]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		R	0x0000
TACHPULSEDUR_7	ACHPULSEDUR_7 0xC0 Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[7]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		R	0x0000
TACHPULSEDUR_80xC4Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[8]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		R	0x0000	
TACHPULSEDUR_9	0xC8	xC8 Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[9]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		0x0000
TACHPULSEDUR_10	0xCC	Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[10]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		0x0000
TACHPULSEDUR_11	0xD0	0xD0 Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[11]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		0x0000

Table 1-3 · CorePWM Register Definitions (continued)
--



Register Name	Paddr[7:0]	Description		Default
TACHPULSEDUR_12       0xD4       Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[12]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		R	0x0000	
TACHPULSEDUR_13	0xD8	Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[13]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.	R	0x0000
TACHPULSEDUR_140xDCStores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[14]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.		R	0x0000	
TACHPULSEDUR_15 0xE0		Stores the number of timer ticks between two successive positive (or negative) edges from the TACHIN[15]. The edge to be used is configurable. If the number of timer ticks exceeds the maximum register value, the value of 0 shall be stored instead.	R	0x0000

#### Table 1-3 · CorePWM Register Definitions (continued)

Notes:

1. Od = decimal; Ox = hexidecimal; Ob = binary.

 If DAC mode for all active channels is configured as "Low ripple DAC mode" (DAC\_MODEx = 1) and shadow register are disabled (SHADOW\_REG\_ENx = 0) for all active channels register PRESCALE and PERIOD become read only because they are not used in Low ripple DAC mode. CorePWM v4.3



## **Configuration Example**

Figure 1-3 demonstrates how several register configurations affect General Purpose and Low Ripple DAC PWM output waveform generation.

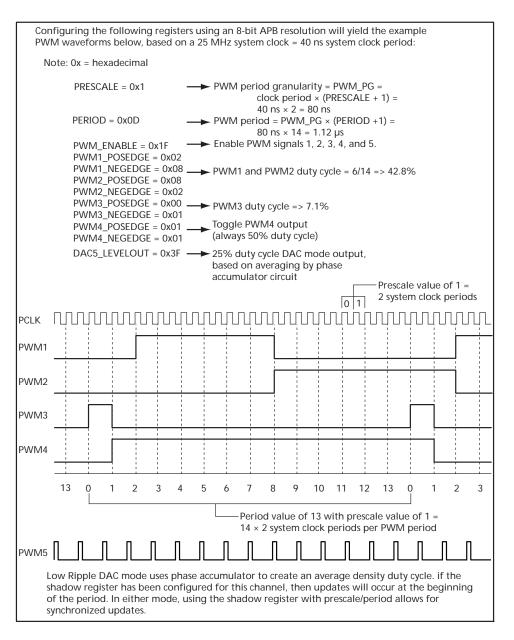


Figure 1-3 · CorePWM Waveform Generation Example

Note: If SEPERATE\_PWM\_CLK is enabled (1) then replace PCLK with PWM\_CLK in above timing diagram.



APB Write APB Write PWM2\_POSEDGE = 0x03 PWM1\_POSEDGE = 0x01 APB Write APB Write PWM1\_POSEDGE = 0x02 PWM2\_POSEDGE = 0x02 PCLK PWM1 PWM2 Dead Band Space Dead Band Space 13 13 0 1 2 3 4 5 6 7 8 9 10 11 12 0 1 2 3 Period Value of 13 with Prescale Value of 1 = 14 × 2 system clock periods per PWM period

Figure 1-4 to Figure 1-7 on page 24 demonstrate how to avoid overlapping of the dead banding issue using the register configurations of channel 1 and channel 2 as a pair. Both channel 1(PWM1) and channel 2(PWM2) are updated after writing a "1" to the SYNC\_UPDATE configuration register to avoid overlapping of dead band space.

Figure 1-4 · Dead Band Space Example

Note: If SEPERATE\_PWM\_CLK is enabled (1) then replace PCLK with PWM\_CLK in above timing diagram.





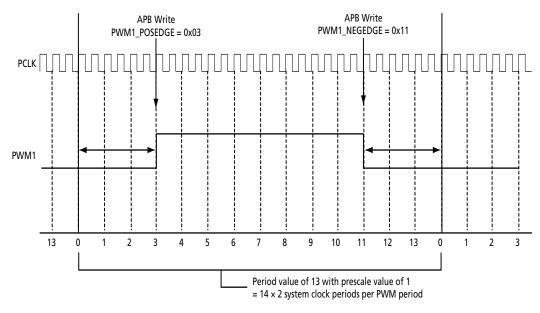



Figure 1-5 · Center-Aligned PWM Waveform Example

 

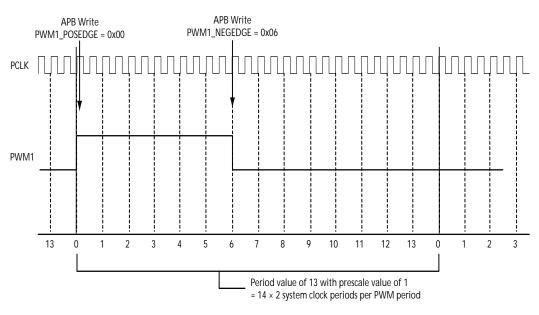


Figure 1-6 · Left-Aligned PWM Waveform Example

Note: If SEPERATE\_PWM\_CLK is enabled (1) then replace PCLK with PWM\_CLK in above timing diagram.



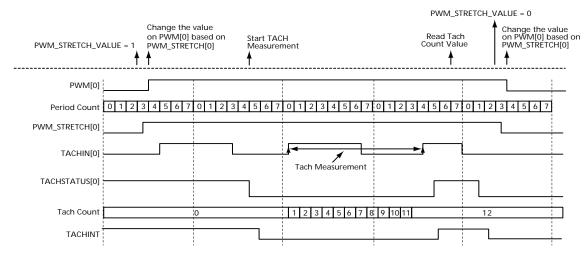


Figure 1-7 · Tach Measurement

## **APB** Interface Timing

Figure 1-8 and Figure 1-9 depict typical write cycle and read cycle timing relationships relative to the system clock.

PCLK		
PSEL		
PWRITE		L
PENABLE		
PADDR	Register Address	
PWDATA	Register Write Data	

Figure 1-8 · Data Write Cycle

PCLK	
PSEL	
PWRITE	
PENABLE	
PADDR	Register Address
PRDATA	Register Read Data

Figure 1-9 · Data Read Cycle



## **Tool Flows**

CorePWM is license free.

### RTL

Complete RTL source code is provided for the core and testbenches.

## SmartDesign

The core can be configured using the configuration GUI within SmartDesign. An example of configuring one channel for PWM mode operation is shown in Figure 2-1 on page 26. Note the following in this example:

- Number of PWM Channels is 1.
- APB bit width and corresponding PWM resolution is 8 bits.
- The Prescale value (the number of clock ticks between Period ticks) is selected to be Fixed at 64, reducing the tile count, as no registers are used.
- The Period value is not Fixed and hence software-controlled.
- The Shadow Update Register is enabled, allowing for synchronized PWM updates at the beginning of the Period count.
- The Positive edge of the PWM is not Fixed and hence software-controlled.
- The Negative edge of the PWM waveform is Fixed at Period count 0.
- The User Testbench is selected to be generated.



🔀 Conf	iguring corepwm			
Confi	guration Global Configuration:			E
		Configuration Mode: Number of PWM Channels:	0 - PWM Only Mode	
		APB Data Bus Width / Resolution		
	Global PWM Mode Configuration:			
	Fixed Presc	ale: 🔽	Fixed Value: 64	
	Fixed Period	d: 🔲	Fixed Value: 1	
	Seperate P\			
	Channel 1 Configuration:			
	Low Ripple DAC mode:		Shadow Update Register:	
	Fixed PWM PosEdge:		Fixed PWM PosEdge Value: 0	
	Fixed PWM NegEdge / DAC	LevelOut:	Fixed PWM NegEdge Value: 0	
н	elp			OK Cancel

Figure 2-1 · CorePWM Configuration within SmartDesign – PWM Mode

An example of configuring one Channel for low ripple DAC operation is shown in Figure 2-2 on page 27. Note the following in this example:

- Number of PWM Channels is 1.
- APB bit width and corresponding PWM/DAC resolution is 8 bits.
- The Prescale and Period Values can be used in conjunction with the Shadow Update Register to update DAC1\_LEVELOUT values at a given period. For example, 3 DACs could be updated simultaneously based on the Prescale and Period values if the Shadow Update Register is enabled. In this example, the DAC1\_LEVELOUT value is updated whenever the APB bus updates the DAC1\_LEVELOUT register.
- The DAC LevelOut value is not Fixed and hence software-controlled. Note the DAC1\_LEVELOUT value is synonymous with a Duty Cycle value; i.e., an 8-bit DAC1\_LEVELOUT hex value of 7F is equal to an average duty cycle of 50% and will yield half of the full analog value after RC filtering.
- Note the "Fixed PWM PosEdge" value does not apply to DAC mode channel.
- The User Testbench is selected to be generated.

Microsemi. Importing into Libero IDE

CorePWM v4.3

🔊 Config	guring corepwm						• X
Config	guration Global Configuration:						×
		Configuration Mode: Number of PWM Chan	nels:	0 - PWM Only Mode			
		APB Data Bus Width	Resolution:	8			
	Global PWM Mode Configuration:						
	Fixed Press	ale:		Fixed Value: 0			
	Fixed Period	d: 🔲		Fixed Value: 1			
	Seperate P\	WM CLK					
	Channel 1 Configuration:						
	Low Ripple DAC mode:		<b>V</b>	Shadow Update Register:			
	Fixed PWM PosEdge:			Fixed PWM PosEdge Value:	0		
	Fixed PWM NegEdge / DAC	LevelOut:		Fixed PWM NegEdge Value:	0		Ŧ
He	lp					ОК	Cancel

Figure 2-2 · CorePWM Configuration within SmartDesign – DAC Mode

## Importing into Libero IDE

CorePWM is available for download to the SmartDesign IP Catalog, via the Libero IDE web repository. For information on using SmartDesign to instantiate, configure, connect, and generate cores, refer to the Libero IDE online help.

## Simulation Flows

To run simulations, select the user testbench within the SmartDesign CorePWM configuration GUI, right-click, and select **Generate Design**. When SmartDesign generates the design files, it will install the appropriate testbench files. Set the design root to the CorePWM instantiation in the Libero IDE design hierarchy pane, and click the **Simulation** icon in the Libero IDE Design Flow window. This will invoke ModelSim® and automatically run simulation.



A simplified block diagram of the User Testbench is shown in Figure 2-3. The user testbench instantiates the CorePWM macro and provides a Register Write Stimulus process, Register Read process, and a PWM output duty cycle check process.

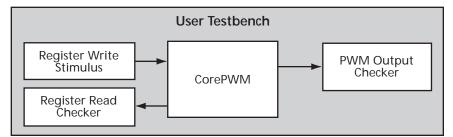


Figure 2-3 · CorePWM Verification Testbench

## Synthesis in the Libero IDE

Having set the design route appropriately, click the **Synthesis** icon in Libero IDE. The Synthesis window appears, displaying the Synplicity<sup>®</sup> project. Set Synplicity to use the Verilog 2001 standard if Verilog is being used. To run Synthesis, select the **Run** icon.

## Place-and-Route in Libero IDE

Having set the design route appropriately and run Synthesis, click on the Layout icon in Libero IDE to invoke Designer. CorePWM requires no special place-and-route settings.



# **Example Applications**

For General Purpose PWM applications, a duty cycle calculator is available online to assist in calculating the PWM POSEDGE and NEGEDGE register values, given a requested duty cycle. This is provided on the Microsemi website as a downloadable Excel spreadsheet:

http://www.microsemi.com/documents/duty\_cycle\_calc.zip

For DAC applications, a low ripple DAC calculator is also available online:

http://www.microsemi.com/documents/low\_ripple\_dac\_calc.zip

## General Purpose PWM Application - Temperature Monitor

A typical temperature monitor application using CorePWM is shown in Figure 3-1. In this example, fan speed is controlled by fluctuations in the NTC thermistor's resistive value. As shown, changes in the input voltage to the voltage monitor port will be converted to a digital value via the ADC and forwarded to an on-chip microcontroller (such as Core8051s). The microcontroller algorithm will periodically configure/reconfigure CorePWM registers based on the thermistor value and/or the fan's tachometer value.

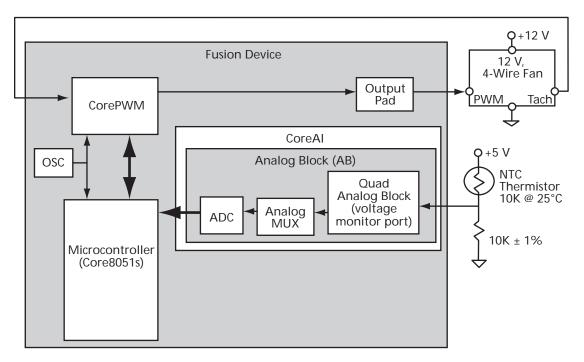



Figure 3-1 · Temperature/Voltage Monitor Application Using CorePWM in a Fusion Device

## DAC

A typical DAC application using CorePWM is shown in Figure 3-2 on page 30. In this example, PWM output is averaged to a varying DC voltage. At reset, the PWM duty cycle, or level out value, is 100% and the voltage increases to the rail of 12 volts. The PWM duty cycle / level out value changes to 75% and then 50%, and the output of the RC filter follows this by dropping to 8 volts and then 6 volts. The generated ripple voltage is a function of the RC circuit values, the APB system clock period, and the PWM duty cycle.



As shown, a field-effect transistor (FET) is used to increase and decouple the output voltage/current from the Fusion device. The load is monitored and changes to the PWM output are processed via a microcontroller (Core8051s, CoreABC, etc.).

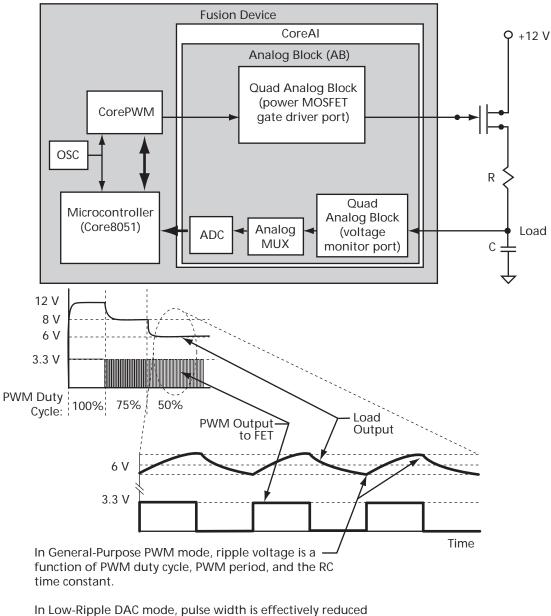

In Low-Ripple DAC mode, pulse width is effectively reduced to 1 clock cycle period, significantly reducing the ripple at the output of a low pass filter.

Figure 3-2 · DAC Application Using CorePWM in Fusion Device



The FET, in this case, is used to illustrate the ability to extend the DAC's output to 12 V. For most applications, 3.3 V is sufficient. Higher clock speeds (and therefore lower ripple) can be achieved by driving the RC filter with a general purpose TTL output.

Using Low Ripple DAC mode has the added benefit of requiring a smaller time constant for the filter, which allows for smaller R and C components to be used. A Low Ripple DAC calculator is available to assist in determining the ideal values for R and C.



# **Software Driver**

Drivers for CorePWM are available via the Firmware Catalog tool provided with Libero IDE. For more information on the Firmware Catalog, refer to www.microsemi.com/products/software/firmwarecat/default.aspx.



# **List of Document Changes**

The following table lists critical changes that were made in the current version of the document.

Previous Version	Changes in Current Version (5020113-7)	Page
5020113-7	Updated Table 1-2 (SAR 63930).	14
5020113-7	Updated "Tool Flows" section (SAR 64045).	25
5020113-6	Added RTG4 information in "Supported Families" and "Utilization and Performance" Tables.	5-10
3020113-0	Updated core version to 4.3 in "Core Version".	5
5020113-5	Added SmartFusion, SmartFusion2, and IGLOO2 families in "Supported Families" section (SAR 57616).	5
5020115-5	Changed core version from 4.1 to 4.2 in "Core Version" section (SAR 57616).	5
5020113-4	Updated Figure 1-2 and Table 1-2 (SAR 57175).	12, 14
5020113-3	Updated core version to v4.2.	N/A
5020113-1	Updated core version to v4.1.	N/A
	Updated "Utilization and Performance" tables.	5-10
	Added low-cost TACHOMETER solution with up to 16 digital inputs.	N/A
	Added center-aligned PWM support.	22
5020113-0	Updated tool flow to support Libero IDE v8.5 and SmartDesign.	25
	Updated Figure 1-3, Figure 1-5, and Figure 1-6 in the "Configuration Example" section.	21, 23, 23
	Updated Figure 3-2.	30
	Updated the "Software Driver" section.	32



# **Product Support**

Microsemi SoC Products Group backs its products with various support services, including Customer Service, Customer Technical Support Center, a website, electronic mail, and worldwide sales offices. This appendix contains information about contacting Microsemi SoC Products Group and using these support services.

### **Customer Service**

Contact Customer Service for non-technical product support, such as product pricing, product upgrades, update information, order status, and authorization.

From North America, call 800.262.1060 From the rest of the world, call 650.318.4460 Fax, from anywhere in the world, 650.318.8044

## Customer Technical Support Center

Microsemi SoC Products Group staffs its Customer Technical Support Center with highly skilled engineers who can help answer your hardware, software, and design questions about Microsemi SoC Products. The Customer Technical Support Center spends a great deal of time creating application notes, answers to common design cycle questions, documentation of known issues, and various FAQs. So, before you contact us, please visit our online resources. It is very likely we have already answered your questions.

## **Technical Support**

Visit the Customer Support website (www.microsemi.com/soc/support/search/default.aspx) for more information and support. Many answers available on the searchable web resource include diagrams, illustrations, and links to other resources on the website.

### Website

You can browse a variety of technical and non-technical information on the SoC home page, at www.microsemi.com/soc.

## Contacting the Customer Technical Support Center

Highly skilled engineers staff the Technical Support Center. The Technical Support Center can be contacted by email or through the Microsemi SoC Products Group website.

### Email

You can communicate your technical questions to our email address and receive answers back by email, fax, or phone. Also, if you have design problems, you can email your design files to receive assistance. We constantly monitor the email account throughout the day. When sending your request to us, please be sure to include your full name, company name, and your contact information for efficient processing of your request. The technical support email address is soc tech@microsemi.com.

### **My Cases**

Microsemi SoC Products Group customers may submit and track technical cases online by going to My Cases.

CorePWM v4.3



#### Outside the U.S.

Customers needing assistance outside the US time zones can either contact technical support via email (soc\_tech@microsemi.com) or contact a local sales office. Sales office listings can be found at www.microsemi.com/soc/company/contact/default.aspx.

## ITAR Technical Support

For technical support on RH and RT FPGAs that are regulated by International Traffic in Arms Regulations (ITAR), contact us via soc\_tech\_itar@microsemi.com. Alternatively, within My Cases, select **Yes** in the ITAR drop-down list. For a complete list of ITAR-regulated Microsemi FPGAs, visit the ITAR web page.



# Index

### A

APB interface timing 24 applications 29

### C

configuration examples 21 contacting Microsemi SoC Products Group customer service 34 email 34 web-based technical support 34 CorePWM key features 4 version 5 customer service 34

### D

DAC 29

### E

example 1 channel for low ripple DAC 26 DAC application 30 temperature monitor 29

### F

functional blocks 11

### Ι

importing into Libero IDE 27

### M

Microsemi SoC Products Group email 34 web-based technical support 34 website 34 modes General Purpose PWM 11 Low Ripple DAC 11

### 0

overview 4

### Р

parameters, Verilog and VHDL 14 place-and-route 28 port signals 12 product support 34–?? customer service 34 email 34 My Cases 35 outside the U.S. 35 technical support 34 website 34

### R

register map 16

### S

simulation 27 simulation flows 27 SmartDesign 25 software driver 32 supported interfaces 5 synthesis 28

### Т

tech support ITAR 35 My Cases 35 outside the U.S. 35 technical support 34 tool flows 25 importing into Libero IDE 27 simulation 27 SmartDesign 25

### U

utilization and performance 5

### W

web-based technical support 34



#### Microsemi Corporate Headquarters One Enterprise, Aliso Viejo, CA 92656 USA

Within the USA: +1 (800) 713-4113 Outside the USA: +1 (949) 380-6100 Sales: +1 (949) 380-6136 Fax: +1 (949) 215-4996

#### E-mail: sales.support@microsemi.com

© 2015 Microsemi Corporation. All rights reserved. Microsemi and the Microsemi logo are trademarks of Microsemi Corporation. All other trademarks and service marks are the property of their respective owners.

Microsemi Corporation (Nasdaq: MSCC) offers a comprehensive portfolio of semiconductor and system solutions for communications, defense & security, aerospace and industrial markets. Products include high-performance and radiation-hardened analog mixed-signal integrated circuits, FPGAs, SoCs and ASICs; power management products; timing and synchronization devices and precise time solutions, setting the world's standard for time; voice processing devices; RF solutions; discrete components; security technologies and scalable anti-tamper products; Power-over-Ethernet ICs and midspans; as well as custom design capabilities and services. Microsemi is headquartered in Aliso Viejo, Calif., and has approximately 3,400 employees globally. Learn more at **www.microsemi.com**.

Microsemi makes no warranty, representation, or guarantee regarding the information contained herein or the suitability of its products and services for any particular purpose, nor does Microsemi assume any liability whatsoever arising out of the application or use of any product or circuit. The products sold hereunder and any other products sold by Microsemi have been subject to limited testing and should not be used in conjunction with mission-critical equipment or applications. Any performance specifications are believed to be reliable but are not verified, and Buyer must conduct and complete all performance and other testing of the products, alone and together with, or installed in, any end-products. Buyer shall not rely on any data and performance specifications or parameters provided by Microsemi. It is the Buyer's responsibility to independently determine suitability of any products and to test and verify the same. The information provided by Microsemi hereunder is provided "as is, where is" and with all faults, and the entire risk associated with such information is entirely with the Buyer. Microsemi does not grant, explicitly or implicitly, to any party any patent rights, licenses, or any other IP rights, whether with regard to such information itself or anything described by such information. Information provided in this document is proprietary to Microsemi, and Microsemi reserves the right to make any changes to the information in this document or to any products and services at any time without notice.