

Figure 1 • Flash*Freeze Shutdown

```

1. Flash*Freeze
2. Write to SRAM
3. Read from SRAM
4. RTC Wake-Up
1
Requesting Flash*Freeze shutdown.

-----
!!!!!!!!!!!!!!!!!!!!!!!!!!!! Flash*Freeze shutdown. !!!!!!!!!!!!!!!!!!!!!!!!!!!!!
-----


Flash*Freeze system service request success.
-----

```

6. Press “4” to exit Flash*Freeze.

Note: You can also use the dip slide switches, or press the SW1 push button on the board to exit Flash*Freeze. Set the dip slide switches as shown in the following figure to exit Flash*Freeze. For more information, see [Figure 7](#), page 9.

Figure 2 • Dip Slide Switches Setting for FlashFreeze Exit

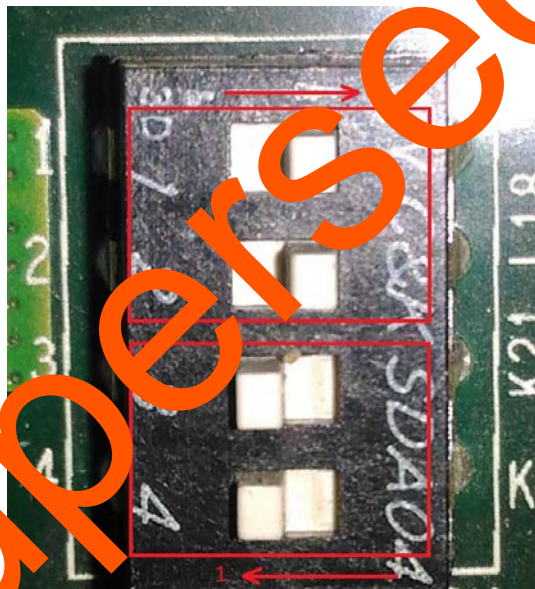

The device exits Flash*Freeze and the H5, H6, J6, and H7 LEDs start blinking. The serial console shows the “Flash*Freeze Exited” message as shown in [Figure 3](#), page 5.

