
Accessing Serial Flash Memory Using SPI Interface

***Libero SoC and IAR Embedded Workbench Flow
Tutorial for SmartFusion2 SoC FPGA***

Superseded

Table of Contents

Accessing Serial Flash Memory using SPI Interface - Libero SoC and IAR Embedded Workbench Flow Tutorial for SmartFusion2 SoC FPGA	3
Introduction	3
Tutorial Requirements	3
Associated Project Files	4
Target Board	4
Design Overview	4
Step 1: Creating a Libero SoC Project	5
Launching Libero SoC	5
Connecting Components in SPI_Flash_top SmartDesign	14
Configuring and Generating Firmware	14
Step 2: Generating the Program File	16
Step 3: Programming the SmartFusion2 Board Using FlashPro	17
Step 4: Building the Software Application using IAR Embedded Workbench	19
Step 5: Configuring Serial Terminal Emulation Program	35
Step 6: Debugging the Application Project using IAR Workbench	37
Conclusion	43
Appendix A - Board Setup for Programming the Tutorial	44
Appendix B- Board Setup for Running the IAR Tutorial	45
Appendix C - SmartFusion2 Development Kit Board Jumper Locations	46
Product Support	47
Customer Service	47
Customer Technical Support Center	47
Technical Support	47
Website	47
Contacting the Customer Technical Support Center	47
Email	47
My Cases	48
Outside the U.S.	48
ITAR Technical Support	48

Accessing Serial Flash Memory using SPI Interface - Libero SoC and IAR Embedded Workbench Flow Tutorial for SmartFusion2 SoC FPGA

Introduction

The Libero® System-on-Chip (SoC) software generates firmware projects using IAR, Keil, and SoftConsole tools. This tutorial describes the process to build an IAR application that can be implemented and validated using the SmartFusion®2 system-on-chip (SoC) field programmable gate array (FPGA) Development Kit.

The same firmware project can be built using SoftConsole and Keil tools. Refer to the respective tutorials (links given below):

- [Accessing Serial Flash Memory using SPI Interface - Libero SoC and SoftConsole Flow Tutorial for SmartFusion2 SoC FPGA](#)
- [Accessing Serial Flash Memory Using SPI Interface - Libero SoC and Keil uVision Flow Tutorial for SmartFusion2 SoC FPGA](#)

After completing this tutorial, you will be able to perform the following tasks:

- Create a Libero SoC project using System Builder
- Generate the programming file to program the SmartFusion2 device
- Open the project in IAR Embedded Workbench from Libero SoC
- Compile application code
- Debug and run code using IAR Embedded Workbench

Tutorial Requirements

Table 1 • Reference Design Requirements and Details

Reference Design Requirements and Details	Description
Hardware Requirements	
• SmartFusion2 Development Kit – FlashPro4 programmer – J-Link programmer – USB A to Micro-B cable – 12 V adapter	Rev C or later
Host PC or Laptop	Any 64-bit Windows Operating System
Software Requirements	
Libero SoC • FlashPro programming software v11.3	11.3
IAR Embedded Workbench for ARM	6.40

Table 1 • Reference Design Requirements and Details (continued)

Reference Design Requirements and Details	Description
USB to UART drivers	-
One of the following serial terminal emulation programs: • HyperTerminal • TeraTerm • PuTTY	-

Associated Project Files

Download the associated project files for this tutorial from the Microsemi® website:
www.microsemi.com/soc/download/rsc/?f=SF2_SPI_Flash_IAR_Tutorial_DF

The demo design files include:

- Libero project
- Programming files
- Source files
- Flash drivers
- Readme file

Refer to the Readme.txt file provided in the design files for the complete directory structure.

Target Board

SmartFusion2 Development Kit board (SF2_DEV_KIT) Rev C (or later).

Design Overview

This design example demonstrates the execution of basic read and write operations on the SPI flash present on the SmartFusion2 Development Kit board. This kit has a built-in Atmel SPI flash memory AT25DF641, which is connected to the SmartFusion2 microcontroller subsystem (MSS) through dedicated MSS SPI_0 interface. The SPI flash memory transfers are performed using the peripheral direct memory access (PDMA).

Read and write data information is displayed using HyperTerminal which communicates to the SmartFusion2 MSS using the MMUART_1 interface.

For more information on SPI, refer to the [SmartFusion2 Microcontroller Subsystem User Guide](#).

Figure 1 shows interfacing the external SPI flash to MSS SPI_0.

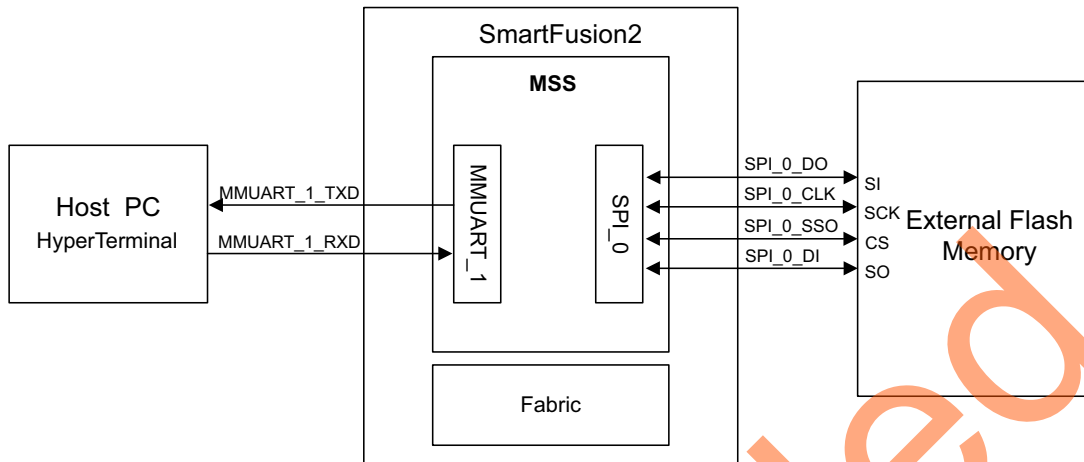


Figure 1 • SPI Flash Interfacing Block Diagram

Step 1: Creating a Libero SoC Project

Launching Libero SoC

1. Click **Start > Programs > Microsemi Libero SoC v11.3 > Libero SoC v11.3**, or click the shortcut on desktop to open the Libero SoC v11.3 Project Manager.
2. Create a new project by selecting **New** on the **Start Page** tab (highlighted in Figure 2), or by clicking **Project > New Project** from the Libero SoC menu.


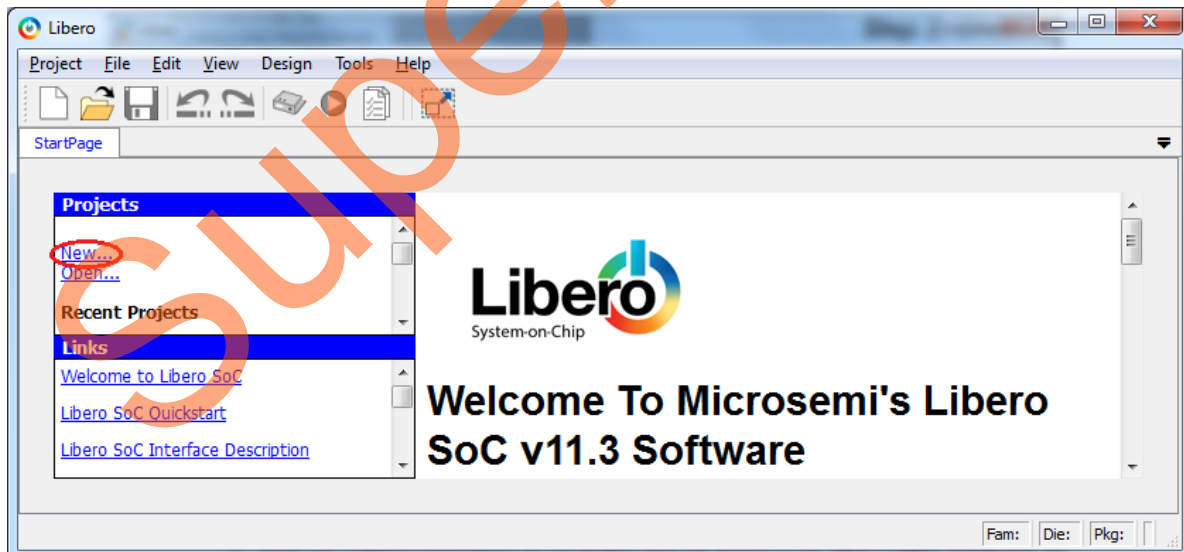


Figure 2 • Libero SoC Project Manager

3. Enter the information as required for the new project and the device in the **New Project** dialog box as shown in [Figure 3](#).
 - Project
 - Name: SPI_Flash
 - Location: Select an appropriate location (for example, D:/Microsemi_prj)
 - Preferred HDL type: Verilog
 - Device (select the following values using the drop-down list provided):
 - Family: SmartFusion2
 - Die: M2S050T
 - Package: 896 FBGA
 - Speed: STD
 - Core Voltage: 1.2
 - Operating conditions: COM

4. Check the **Use Design Tool** check box and select **Use System Builder** in the **Design Templates and Creators** section of the **New Project** window as shown in Figure 3.

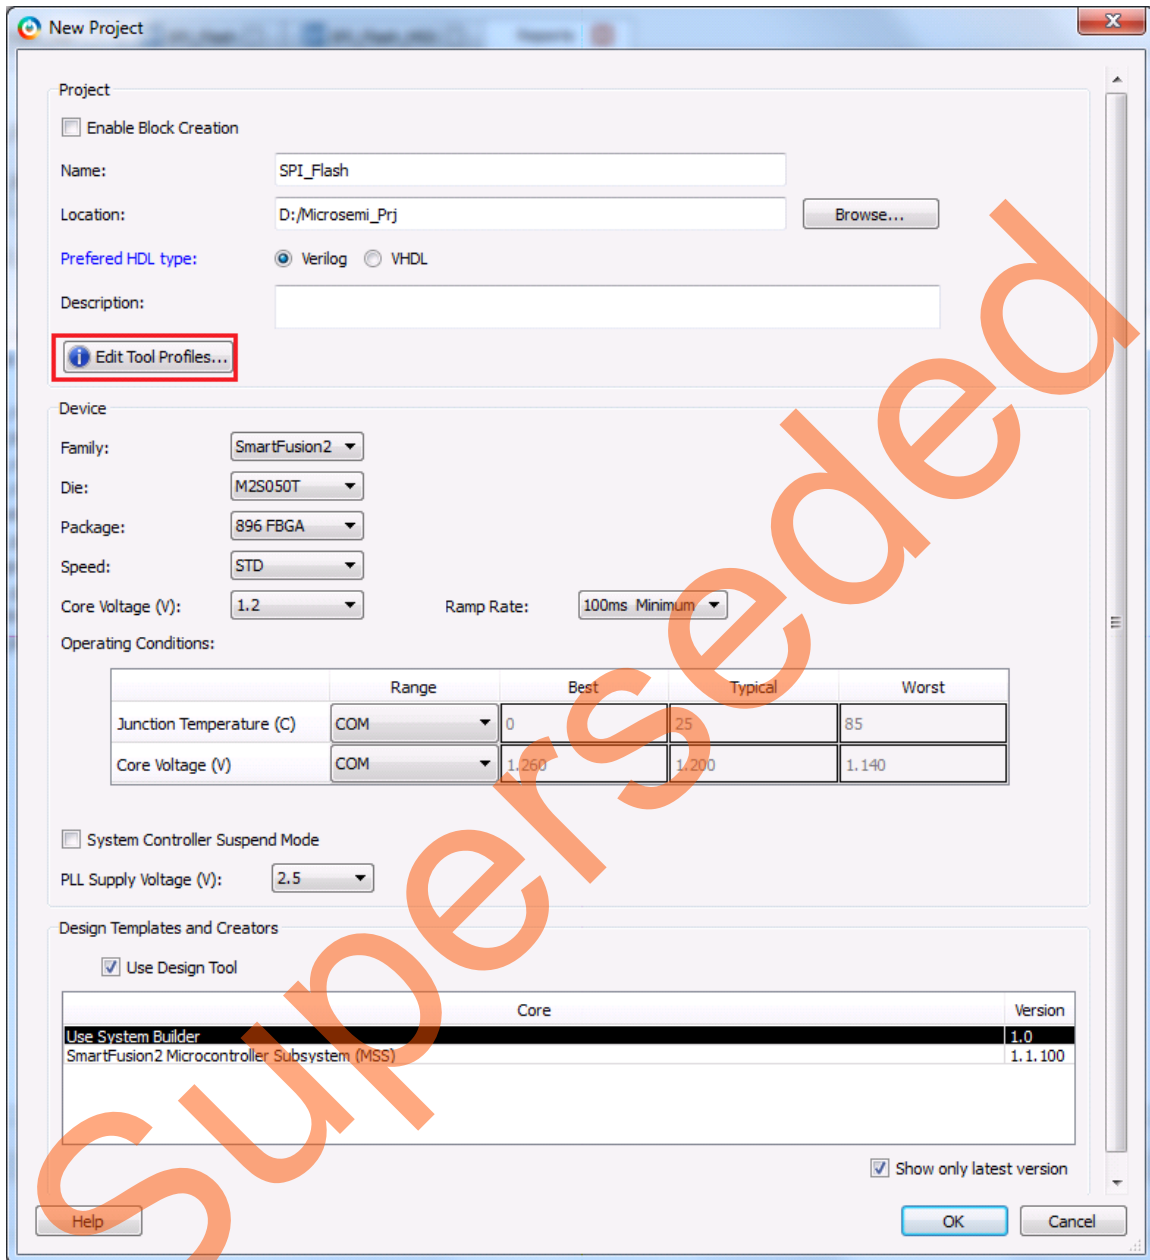

The image shows the 'New Project' dialog box in the Microsemi Libero IDE. The 'Project' section at the top includes fields for 'Name' (SPI_Flash), 'Location' (D:/Microsemi_Prj), 'Preferred HDL type' (Verilog), and 'Description'. A red box highlights the 'Edit Tool Profiles...' button. The 'Device' section includes dropdowns for 'Family' (SmartFusion2), 'Die' (M2S050T), 'Package' (896 FBGA), 'Speed' (STD), 'Core Voltage (V)' (1.2), and 'Ramp Rate' (100ms Minimum). Below this is a table for 'Operating Conditions'.

	Range	Best	Typical	Worst
Junction Temperature (C)	COM	0	25	85
Core Voltage (V)	COM	1.250	1.200	1.140

Below the table are checkboxes for 'System Controller Suspend Mode' and 'PLL Supply Voltage (V)' (2.5). The 'Design Templates and Creators' section has a checked 'Use Design Tool' checkbox and a table showing available templates.

Core	Version
Use System Builder	1.0
SmartFusion2 Microcontroller Subsystem (MSS)	1.1.100

At the bottom right, there is a 'Show only latest version' checkbox and 'OK' and 'Cancel' buttons.

Figure 3 • New Project Dialog Box

Note: System Builder is a graphical design wizard. It creates a design based on high-level design specifications by taking the user through a set of high-level questions that will define the intended system.

5. Clicking **Edit Tool Profiles** (highlighted in Figure 3 on page 7) displays the **Tool Profiles** window as shown in Figure 4. Check the following tool settings:
 - Software IDE: IAR
 - Synthesis: Synplify Pro ME I-2013.09M-SP1
 - Simulation: ModelSim ME 10.2c
 - Programming: FlashPro 11.3

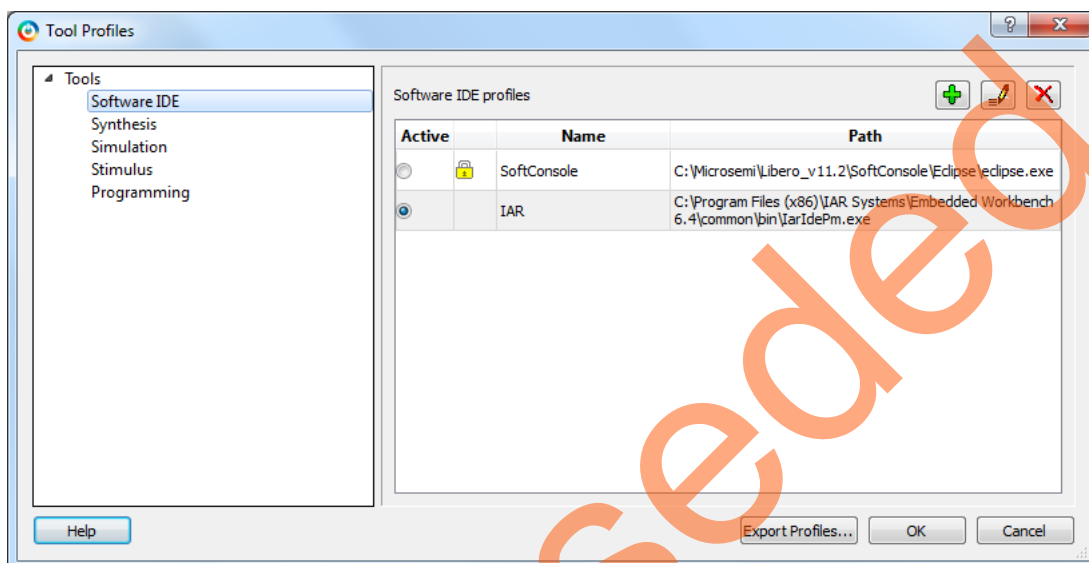


Figure 4 • Tool Profiles

6. Click **OK** on the **Tool Profiles** window.
7. Click **OK** on the **New Project** window. This displays the **System Builder** dialog box.
8. **Enter a name for your system**, enter **SPI_Flash** as the name of the system and click **OK**. The **System Builder** dialog box is displayed with the **Device Features** page open by default, as shown in Figure 5.

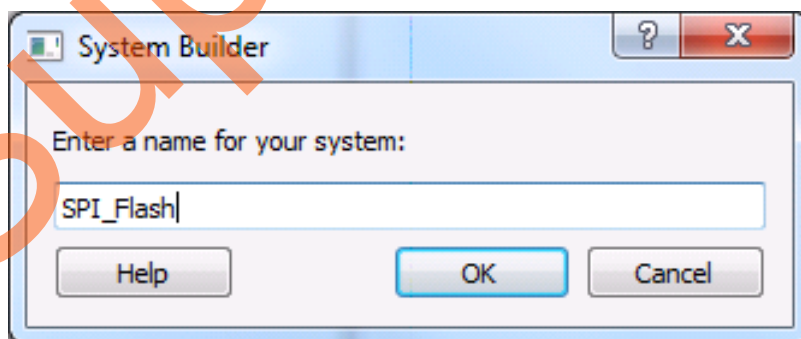


Figure 5 • Create New System Builder Dialog Box

- In the **System Builder – Device Features** page, check the **Peripheral DMA** check box under **Microcontroller Options** as shown in Figure 6.

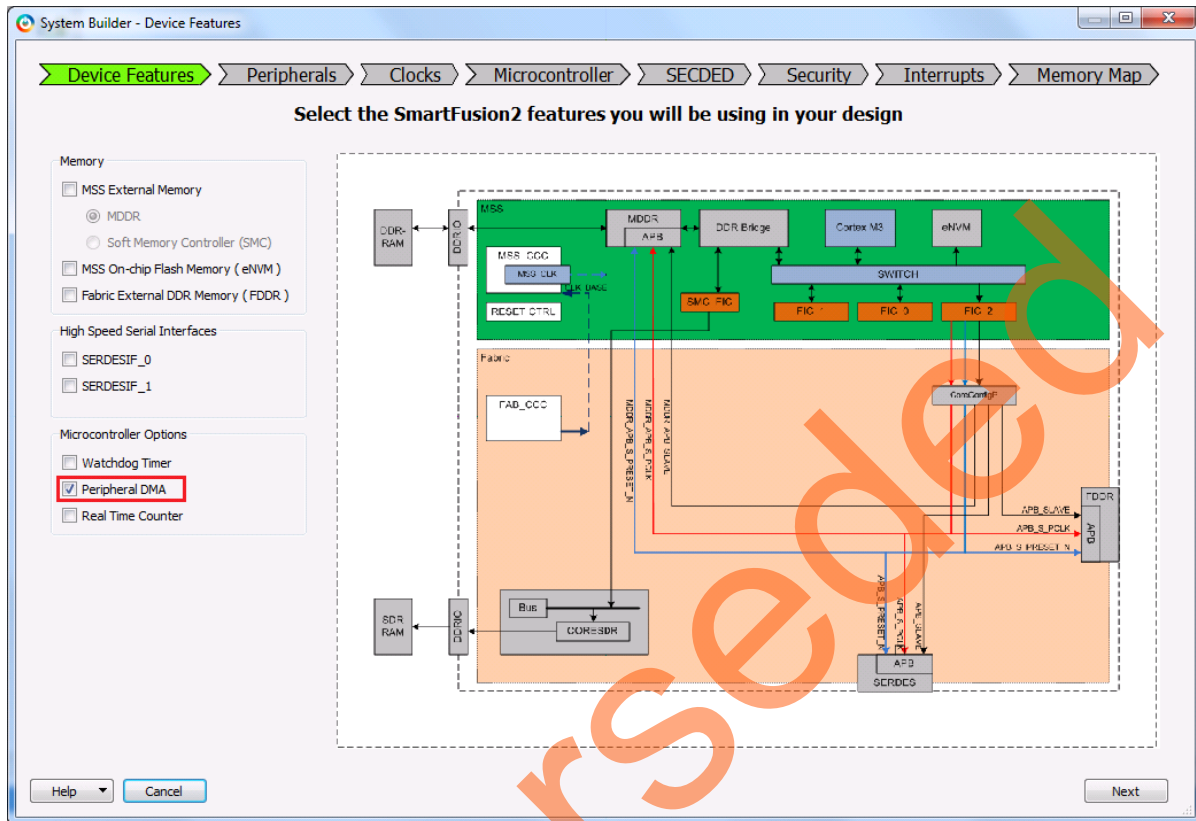


Figure 6 • System Builder – Device Features Page

10. Click **Next**. The **System Builder – Peripherals** page is displayed. Under the MSS Peripherals section, uncheck all the check boxes except **MM_UART_1** and **MSS_SPI_0**, as shown in Figure 7.

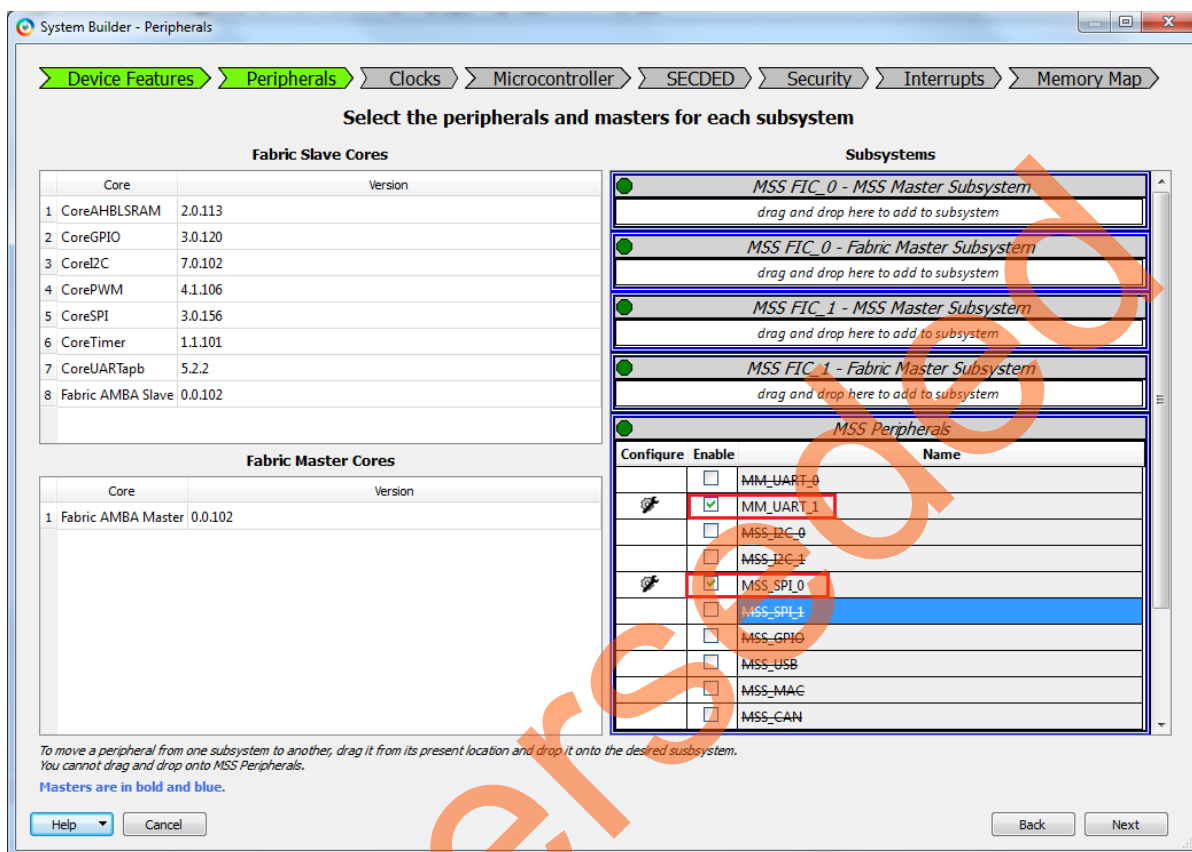


Figure 7 • System Builder Configurator – Peripherals Page

11. Configure **MMUART_1** for Fabric by clicking on the **MM_UART_1** configurator highlighted as shown in Figure 8.

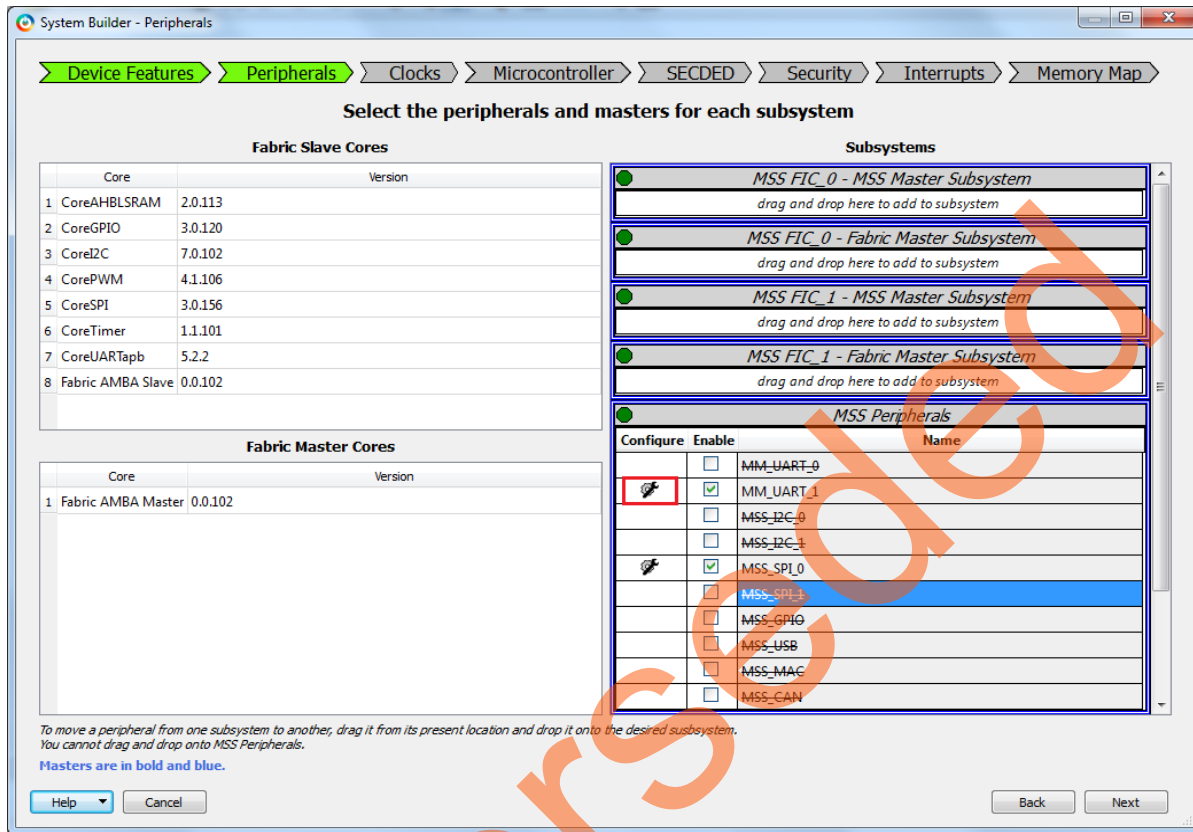


Figure 8 • System Builder – Peripherals Page

12. In the MM_UART_1 configurator window, select **Fabric** from the **Connect To** drop-down list, as shown in Figure 9.

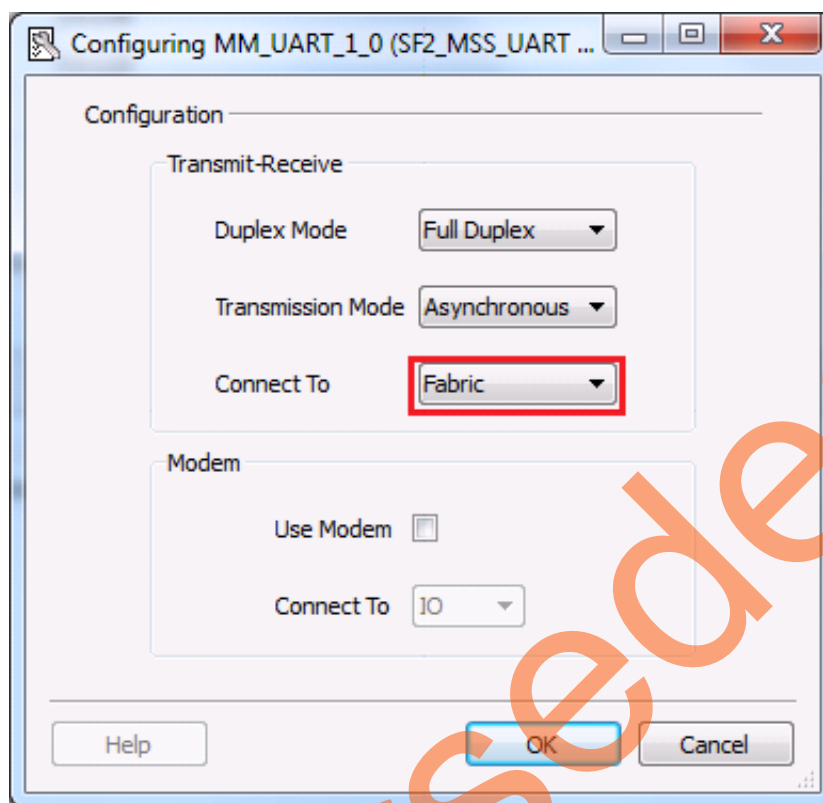


Figure 9 • Configuring MM_UART_1

13. Click **Next**. The **System Builder – Clocks** page is displayed, as shown in Figure 10. Select **System Clock** source as **On-chip 25/50 MHz RC Oscillator**. The M3_CLK is configured to 100 MHz by default.

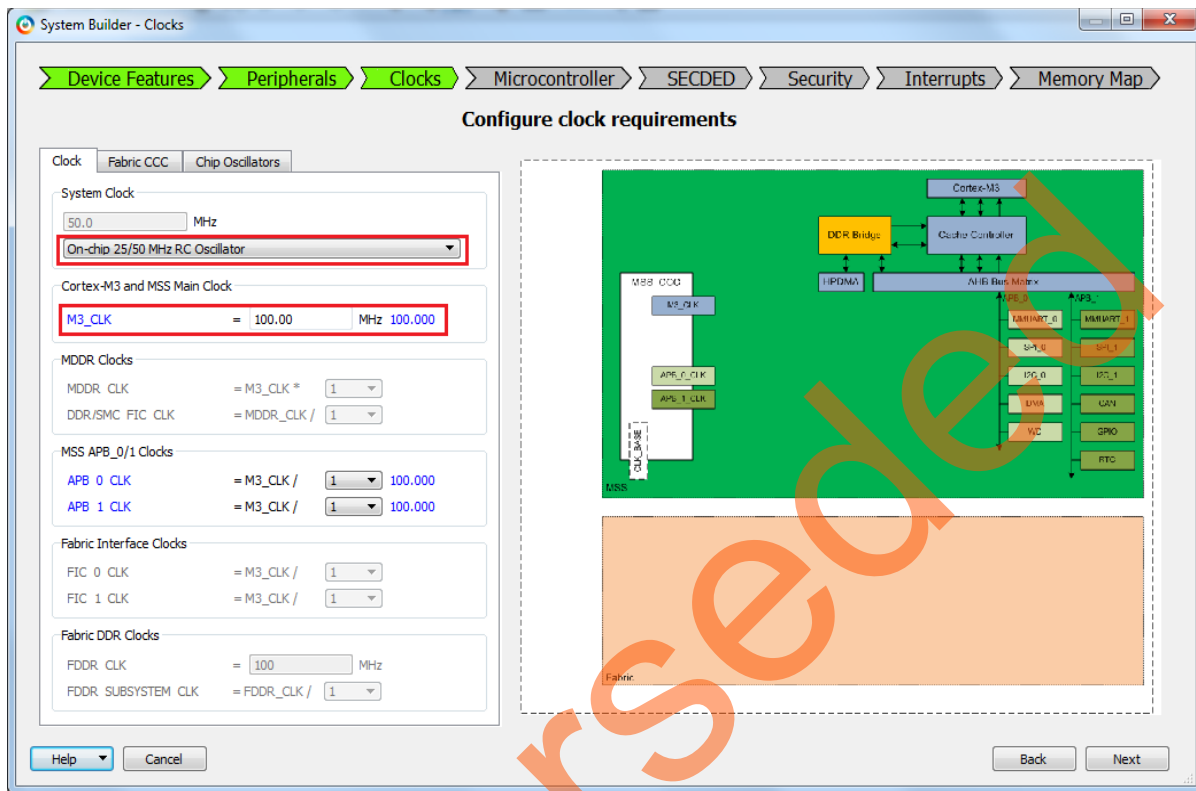


Figure 10 • System Builder – Clocks Page

14. Click **Next**. The **System Builder – Microcontroller** page is displayed. Leave all the default selections.
15. Click **Next**. The **System Builder – SECDDED** page is displayed. Leave all the default selections.
16. Click **Next**. The **System Builder – Security** page is displayed. Leave all the default selections.
17. Click **Next**. The **System Builder – Interrupts** page is displayed. Leave all the default selections.
18. Click **Next**. The **System Builder – Memory Map** page is displayed. Leave all the default selections.
19. Click **Finish**.

The **System Builder** generates the system based on the selected options. The System Builder block is created and added to the Libero SoC project automatically, as shown in Figure 11.

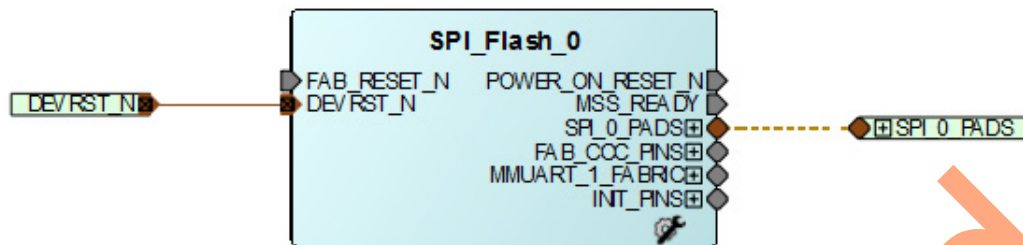


Figure 11 • System Builder Generated System

Connecting Components in SPI_Flash_top SmartDesign

Perform the following steps to connect the SmartDesign components:

1. Right-click **FAB_RESET_N** and select **Tie High**.
2. Right-click **POWER_ON_RESET_N** and select **Mark Unused**.
3. Right-click **MSS_READY** and select **Mark Unused**.
4. Right-click **MMUART_1_FABRIC** and select **Promote to Top Level**.
5. Expand **INIT_PINS**, right-click **INIT_DONE** and select **Mark Unused**.
6. Expand **FAB_CCC_PINS**, right-click **FAB_CCC_GL0** and select **Mark Unused**.
7. Click **File > Save**. The SPI_Flash_top design is displayed as shown in Figure 12.

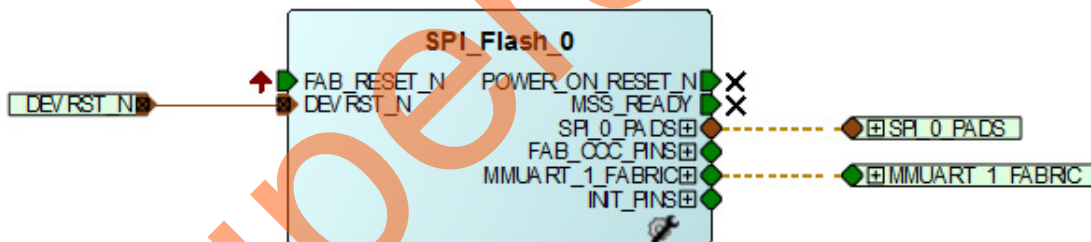


Figure 12 • SPI_Flash_top Design

Configuring and Generating Firmware

The Design Firmware window displays compatible firmware drivers based on peripherals configured in the design. Following drivers are used in this tutorial:

- CMSIS
 - MMUART
 - PDMA
 - SPI
1. To generate the required drivers, click **Design > Configure Firmware** and uncheck all drivers except CMSIS, MMUART, PDMA, and SPI as shown in Figure 13.

Note: Select the latest version of the drivers.

StartPage x SD SPI_Flash_top x SD DESIGN_FIRMWARE x					
	Generate	Instance Name	Core Type	Version	Compatible Hardware Instance
1	☒	SmartFusion2_CMSIS_0	SmartFusion2_CMSIS	2.1.101	SPI_Flash_MSS
2	☐	SmartFusion2_MSS_HPDMADriver_0	SmartFusion2_MSS_HPDMADriver	2.0.101	SPI_Flash_MSS
3	☒	SmartFusion2_MSS_MMUART_Driver_0	SmartFusion2_MSS_MMUART_Driver	2.0.101	SPI_Flash_MSS:MMUART_1
4	☐	SmartFusion2_MSS_NVM_Driver_0	SmartFusion2_MSS_NVM_Driver	2.0.103	SPI_Flash_MSS
5	☒	SmartFusion2_MSS_PDMA_Driver_0	SmartFusion2_MSS_PDMA_Driver	2.0.102	SPI_Flash_MSS:DMA
6	☒	SmartFusion2_MSS_SPI_Driver_0	SmartFusion2_MSS_SPI_Driver	2.0.103	SPI_Flash_MSS:SPI_0
7	☐	SmartFusion2_MSS_System_Services_Driver_0	SmartFusion2_MSS_System_Services_Driver	2.0.103	SPI_Flash_MSS
8	☐	SmartFusion2_MSS_Timer_Driver_0	SmartFusion2_MSS_Timer_Driver	2.0.101	SPI_Flash_MSS

Figure 13 • Configuring Firmware

- From the **SPI_Flash_top** tab, click **Generate Component**, as shown in Figure 14.

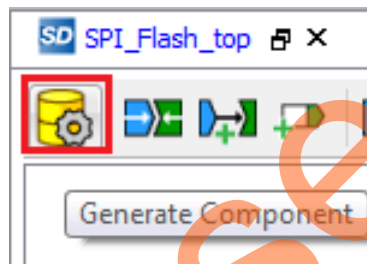


Figure 14 • Generate Component

If the design is generated without any errors, a message, '**SPI_Flash_top**' was generated is displayed on the Libero SoC Log window as shown in Figure 15.



Figure 15 • Log Window

Step 2: Generating the Program File

1. Double-click **I/O Constraints** in the **Design Flow** window as shown in Figure 16. The **I/O Editor** window is displayed after completing **Synthesize** and **Compile**.

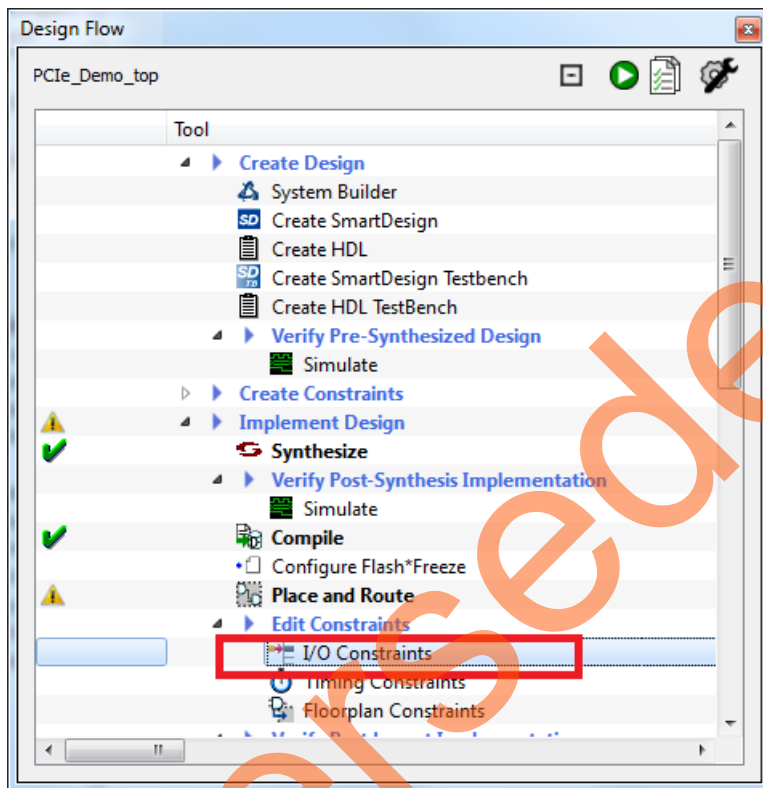


Figure 16 • I/O Constraints

2. In the **I/O Editor** window, make the pin assignments as shown in Table 2.

Table 2 • Port to Pin Mapping

Port Name	Pin Number
MMUART_1_RXD_F2M	R29
MMUART_1_TXD_M2F	R24

These pin assignments are for connecting MMUART_1 ports TX and RX to the mini-B USB through fabric I/Os. After the pins are assigned, the **I/O Editor** window is displayed as shown in Figure 17.

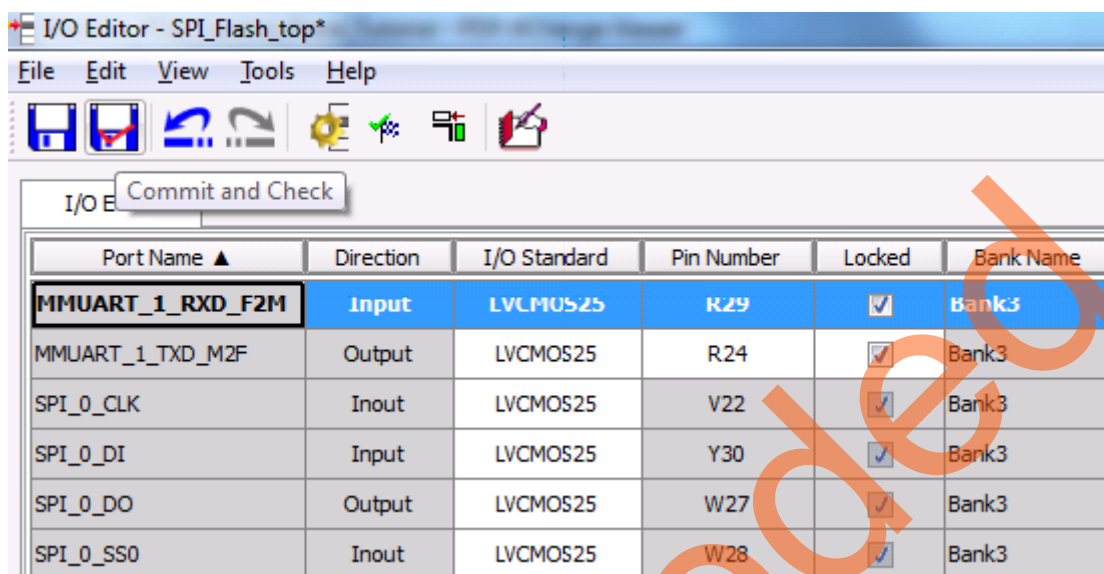


Figure 17 • I/O Editor

3. After updating the I/O Editor, click **Commit and Check**.
4. Close the **I/O Editor** window.
5. Click **Generate Programming Data** as shown in Figure 18 to complete place-and-route and generate the programming file.



Figure 18 • Generate Programming Data

Step 3: Programming the SmartFusion2 Board Using FlashPro

1. Connect the FlashPro4 programmer to the J59 connector of the SmartFusion2 Development Kit.
2. Connect the jumpers on the SmartFusion2 Development Kit board as listed in Table 3 on page 18.
For more information on jumper locations, refer [Appendix C - SmartFusion2 Development Kit Board Jumper Locations](#).

CAUTION: While making the jumper connections, the **SW7** power supply switch on the board must be in **OFF** position.

Table 3 • SmartFusion2 Development Kit Jumper Settings

Jumper Number	Settings	Notes
J70, J93, J94, J117, J123, J142, J157, J160, J167, J225, J226, J227	1-2 closed	These are the default jumper settings of the Development Kit. Ensure that these jumpers are set properly.
J2	1-3 closed	
J23	2-3 closed	
J121, J110, J119, J118	1-2 closed	To connect the SmartFusion2 SPI0 to the external flash.

3. Connect the power supply to the J18 connector.
4. Switch **ON** the SW7 power supply switch.
Refer to [Appendix A - Board Setup for Programming the Tutorial](#) for information on board setup for running the tutorial.
5. To program the SmartFusion2 device, double-click **Run PROGRAM Action** in the **Design Flow** window as shown in [Figure 19](#).

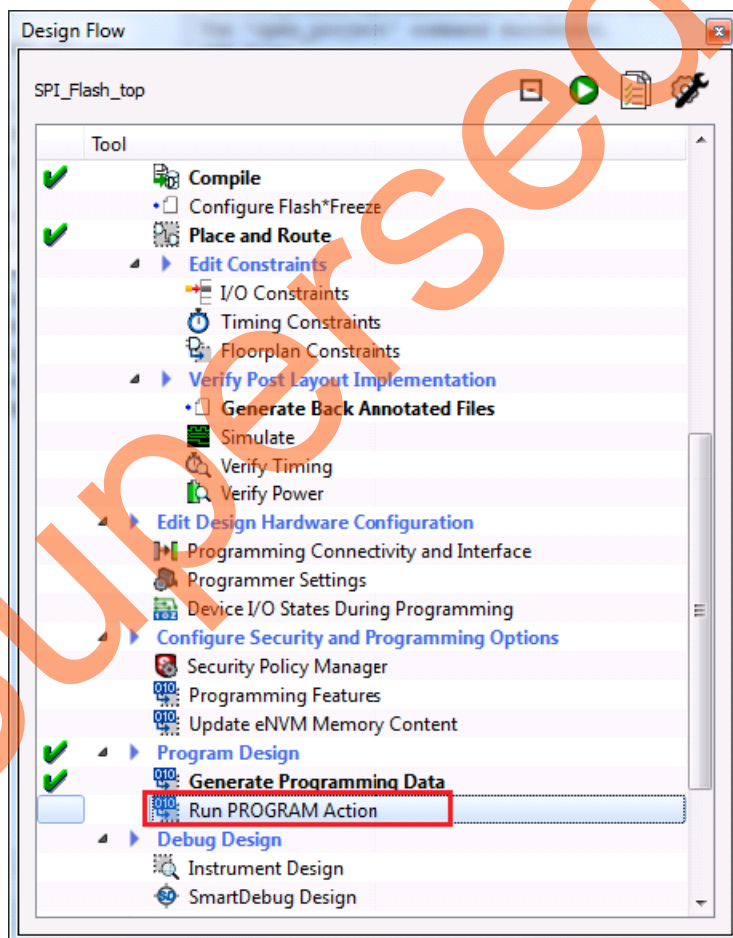


Figure 19 • Run Programming Action

After successful programming, the SmartFusion2 Development Kit is ready for running and debugging the IAR Embedded Workbench application through J-Link Debugger.

Step 4: Building the Software Application using IAR Embedded Workbench

1. Connect the J-Link programmer to **J34 connector** of SmartFusion2 Development Kit.
Refer to "[Appendix B- Board Setup for Running the IAR Tutorial](#)" on page 45 for information on the board setup for running and debugging the IAR software application.
Make sure that the SmartFusion2 Development Kit Jumper **J93** is in **2-3 closed** position for IAR Embedded Workbench and J-Link communication.
2. Open the IAR project by double-clicking **Write Application Code** under Develop Firmware in the **Design Flow** window as shown in Figure 20.

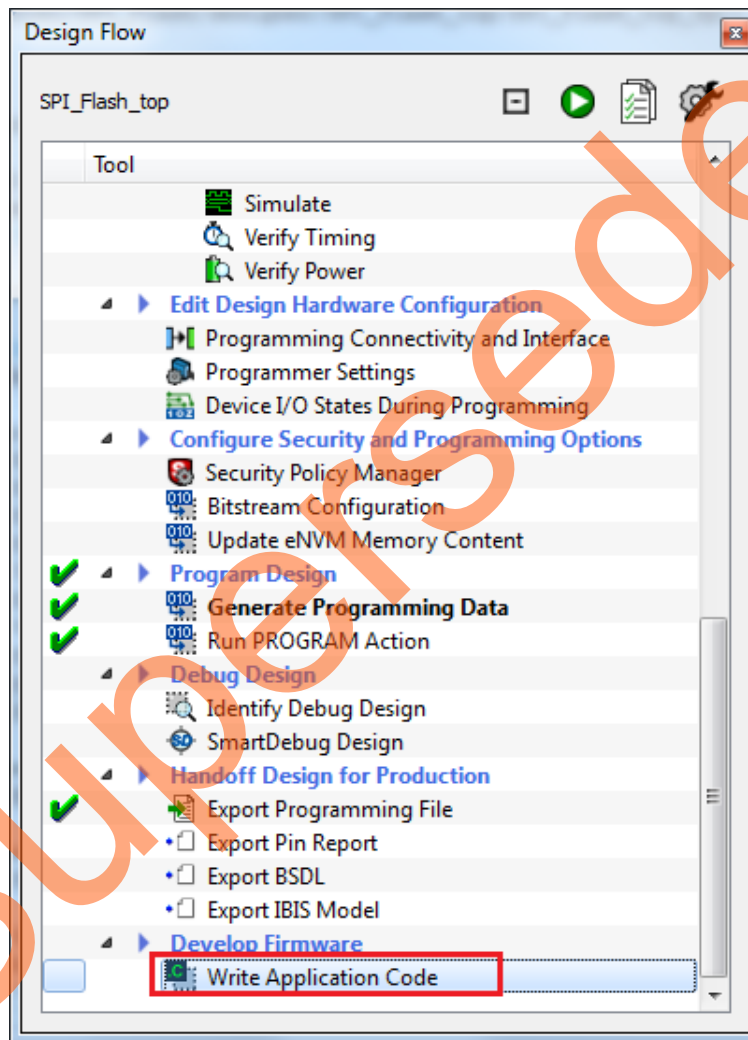


Figure 20 • Invoking IAR Embedded Workbench from the Libero SoC Software

The IAR workspace is displayed, as shown in [Figure 21](#).

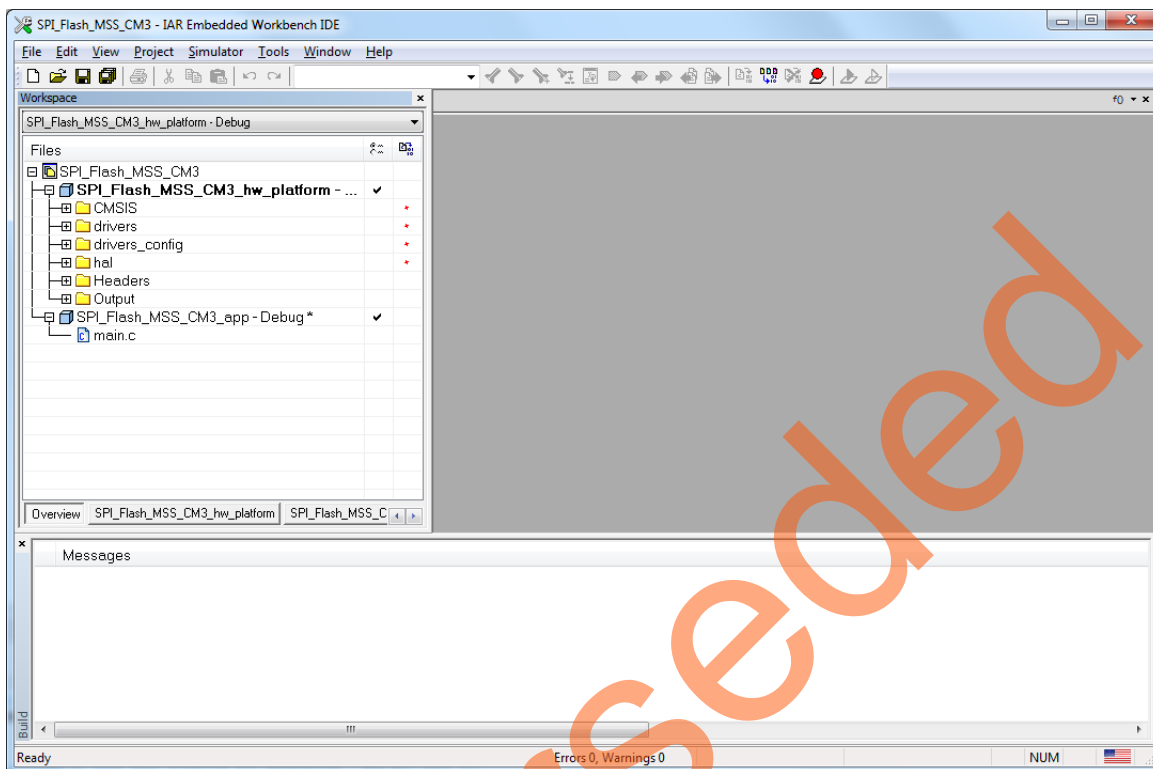


Figure 21 • IAR Workspace

3. Browse to the `main.c` file location in the design files folder:
`<download folder>\SF2_SPI_Flash_IAR_Tutorial_DF\SourceFiles`.
4. Copy the `main.c` file and replace the existing `main.c` file under `SPI_Flash_MSS_CM3_app` project in the IAR workspace.

The IAR window displays the `main.c` file, as shown in Figure 22.

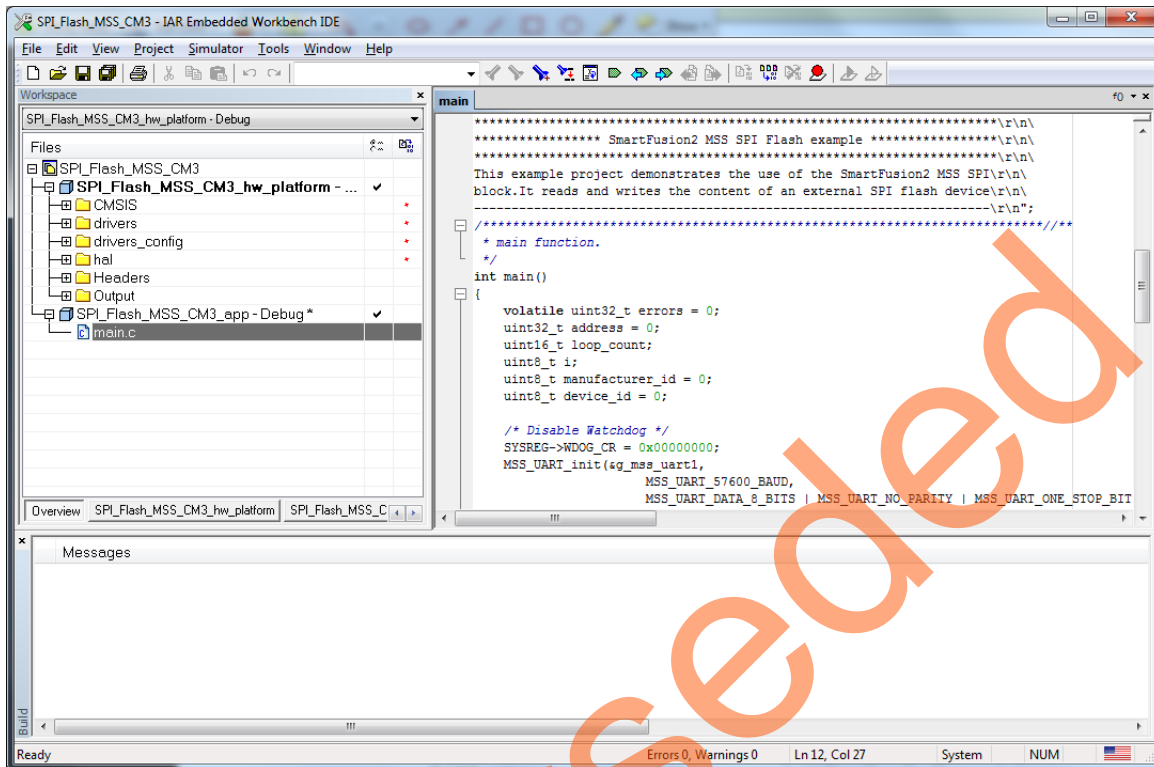


Figure 22 • IAR Workspace `main.c` file

5. `at25df641` SPI flash drivers are not included in the Libero generated IAR workspace. To include the drivers in the IAR workspace, browse to the location of the `at25df641` drivers in the design files folder: `<download_folder>\SF2_SPI_Flash_IAR_Tutorial_DF\SPI_Flash_Drivers`.
6. Copy the `at25df641` folder to the `drivers` folder of `SPI_Flash_MSS_CM3_hw_platform` project in the IAR workspace: `projectdirectory\IAR\drivers`.

7. Right-click and add the driver files (at25df641.c and at25df641.h) to the SPI_Flash_MSS_CM3_hw_platform project in the IAR workspace as shown in [Figure 23](#).

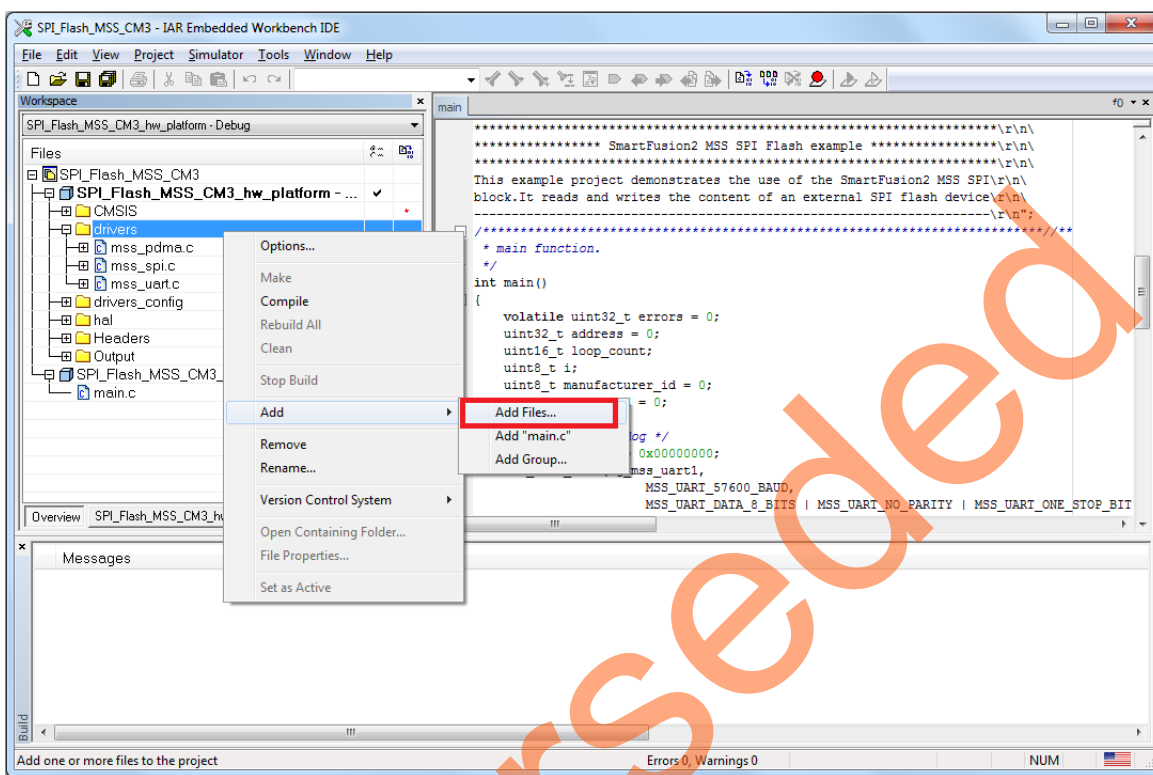


Figure 23 • IAR Workspace Window - Add at25df641 SPI Driver Files

Figure 24 shows the IAR workspace window displaying at25df641 SPI Driver Files.

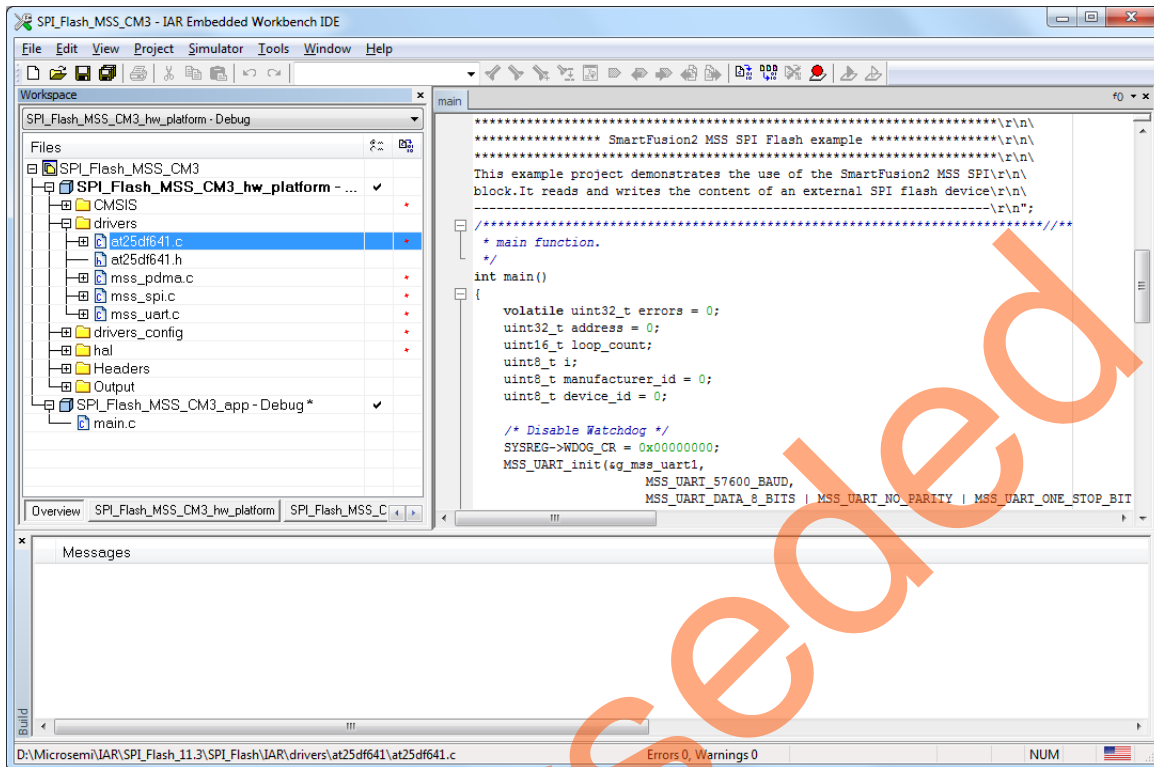


Figure 24 • IAR Workspace Window - Display at25df641 SPI Driver Files

8. To configure the project, right-click the project name (SPI_Flash_MSS_CM3_hw_platform) and click **Options** as shown in Figure 25.

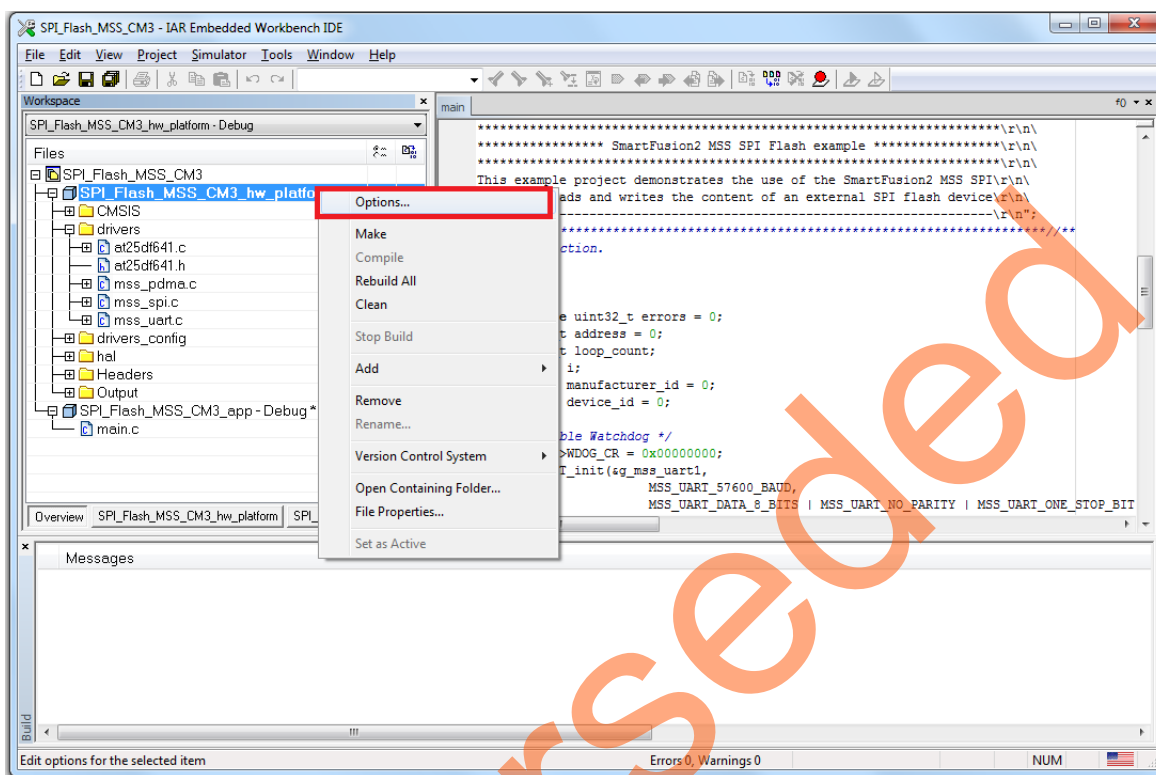


Figure 25 • IAR Workspace Window - Choose Options

This tutorial uses `printf` statements to display memory read data. Redirection of the output of `printf()` to a UART is enabled by adding the `MICROSEMI_STDIO_THRU_UART` symbol.

9. In Options window, click **C/C++ Compiler**.
10. Click **Preprocessor** tab.

11. Under **Defined symbols** enter MICROSEMI_STDIO_THRU_UART and click **OK**, as shown in Figure 26.

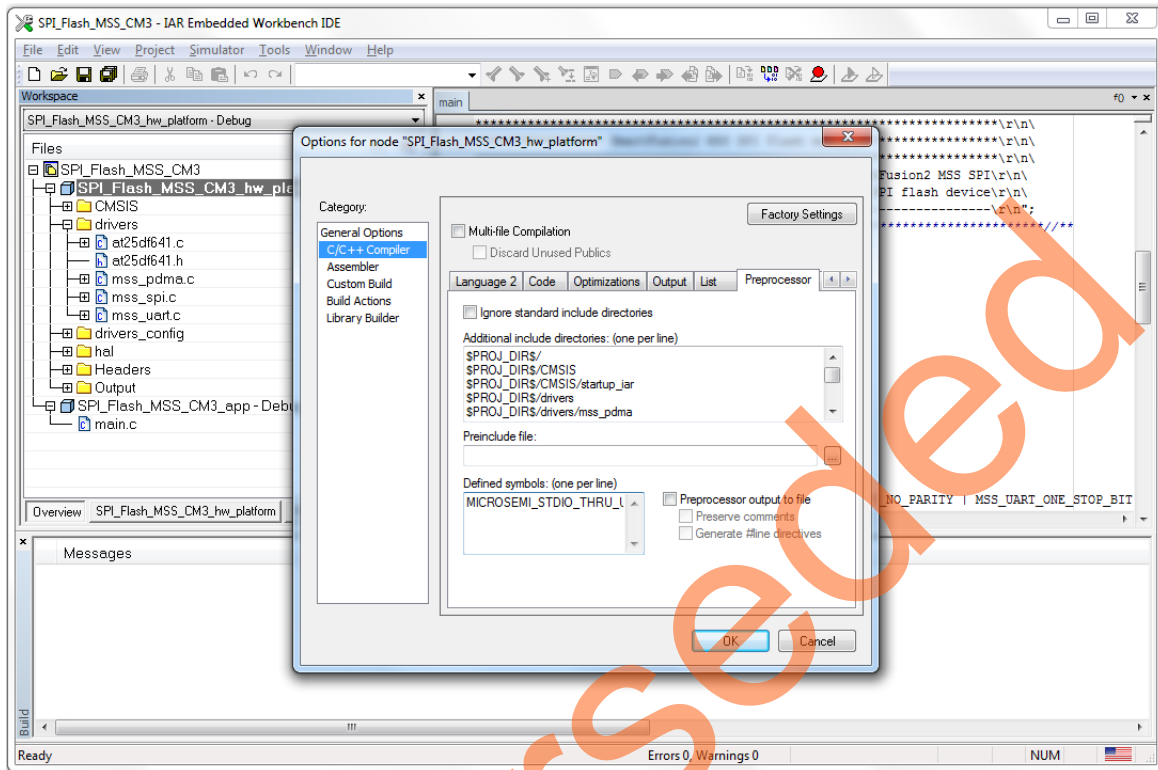


Figure 26 • IAR Workspace Window - Adding Symbol

12. To configure the project, right-click the project name (SPI_Flash_MSS_CM3_app) and click **Options** as shown in Figure 27.

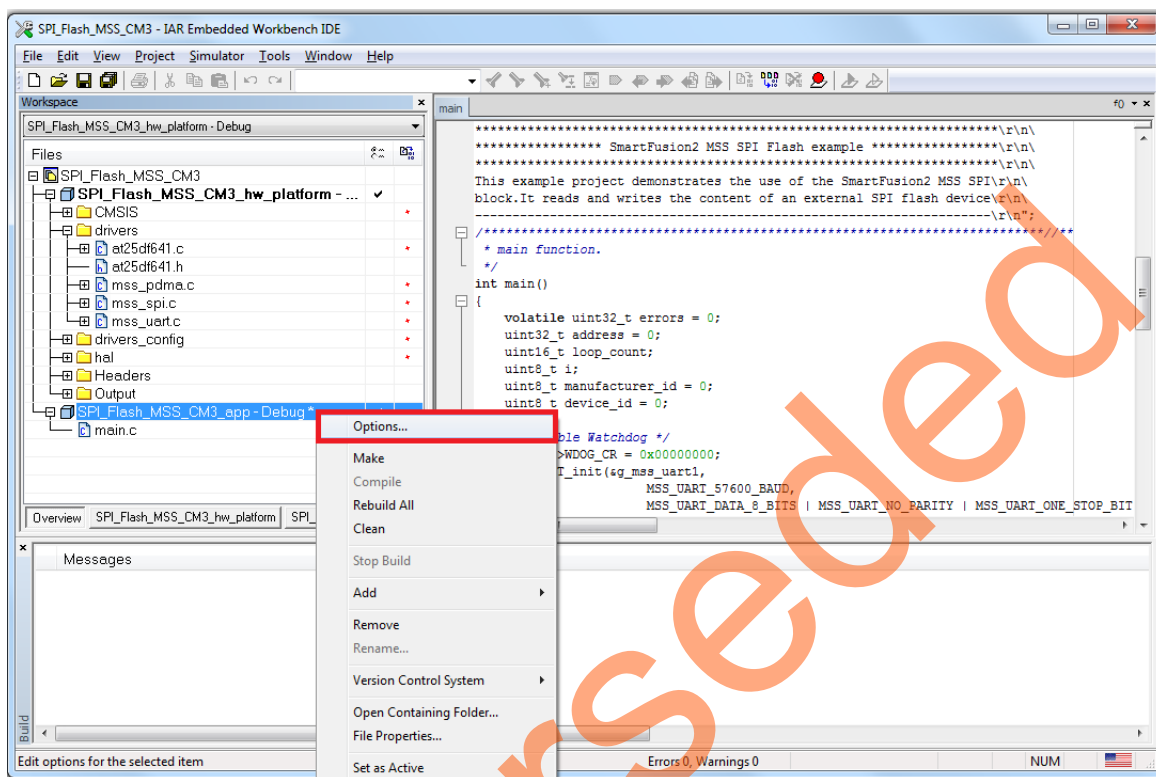


Figure 27 • IAR Workspace Window - Choose Options

13. The **Options for node SPI_Flash_MSS_CM3_app** window is displayed as shown in [Figure 28](#).

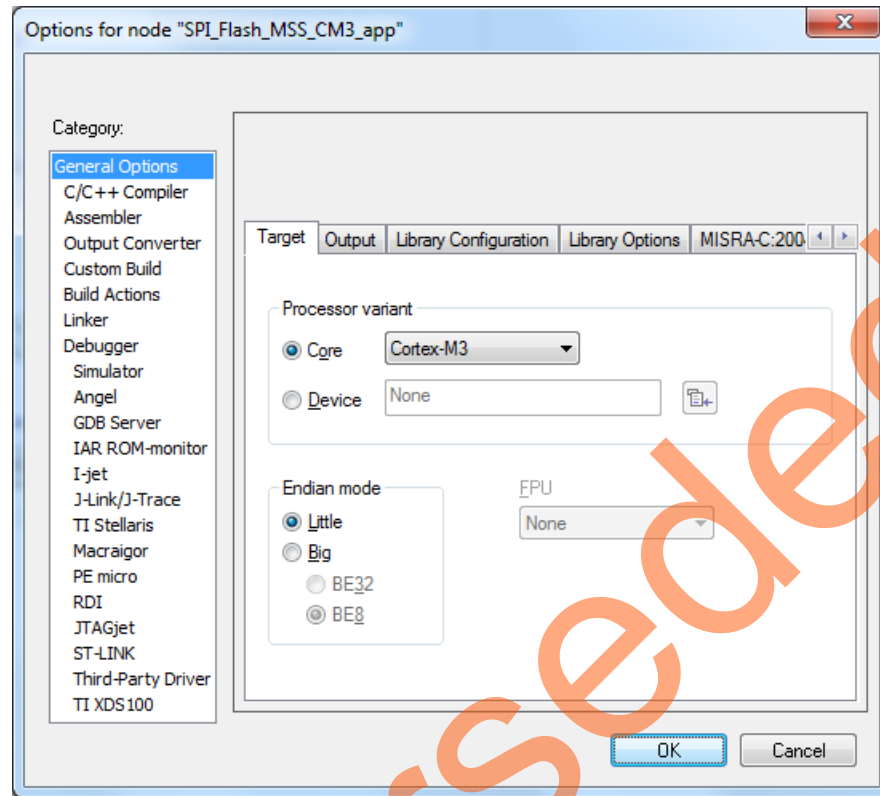


Figure 28 • IAR Node Options

14. Click **Debugger**. Under the **Setup** tab, select **J-Link/J-Trace** from the Driver the drop-down list (refer to [Figure 29](#)).

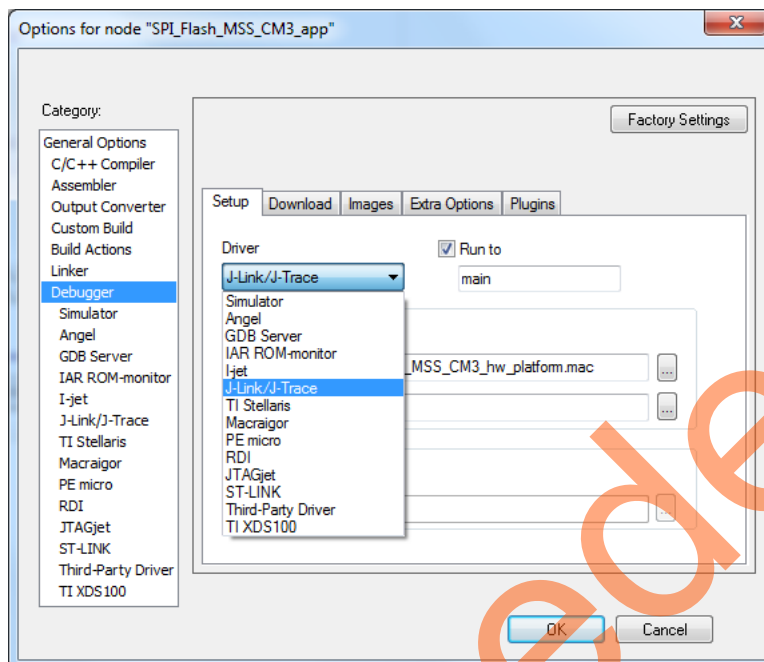


Figure 29 • IAR Debugger Options - Selecting Driver

15. Click **Download** tab and select the **Verify download** check box as shown in Figure 30.

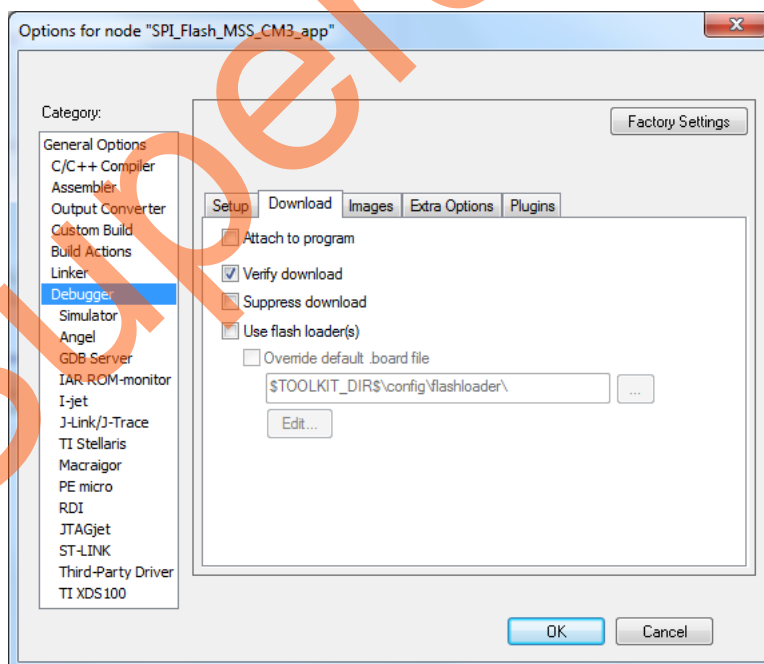


Figure 30 • IAR Debugger Options - Download

16. Click **OK** to close the Options window and build the project.

17. Right-click on **SPI_Flash_MSS_CM3_hw_platform - Debug** and select **Make** as shown in (Figure 31 and Figure 32 on page 30).

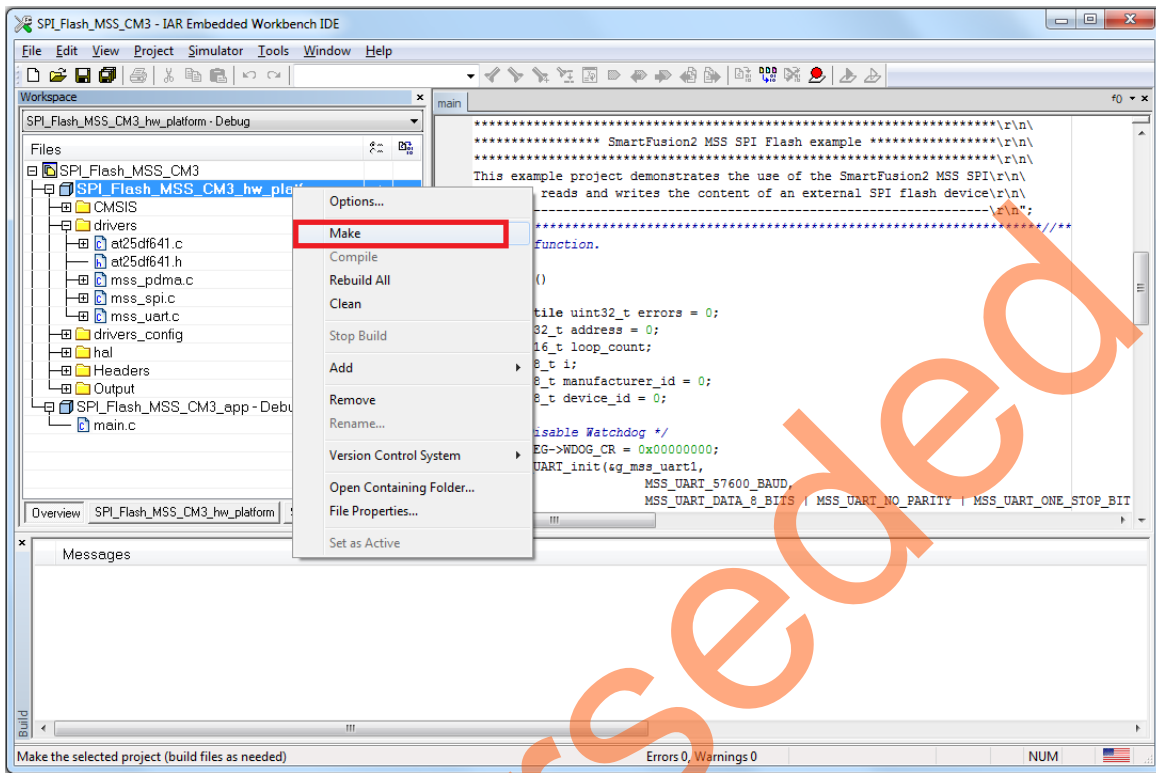


Figure 31 • IAR Workspace - Hardware Platform Code Compilation using Make



18. Right-click on the **SPI_Flash_MSS_CM3_app - Debug** project name and select **Set as Active** as shown in Figure 33.

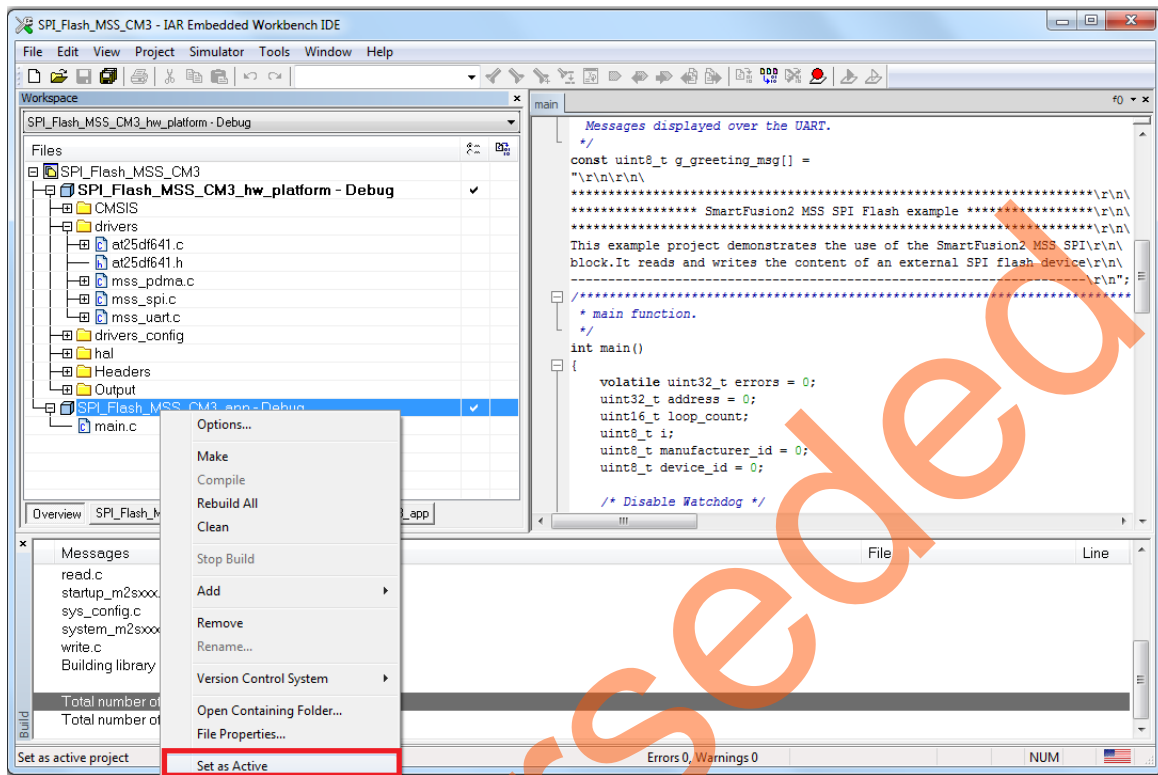


Figure 33 • IAR Workspace - SPI_Flash_MSS_CM3_app Set as Active

19. Right-click on the **SPI_Flash_MSS_CM3_app - Debug** project name and select **Clean** as shown in Figure 34.

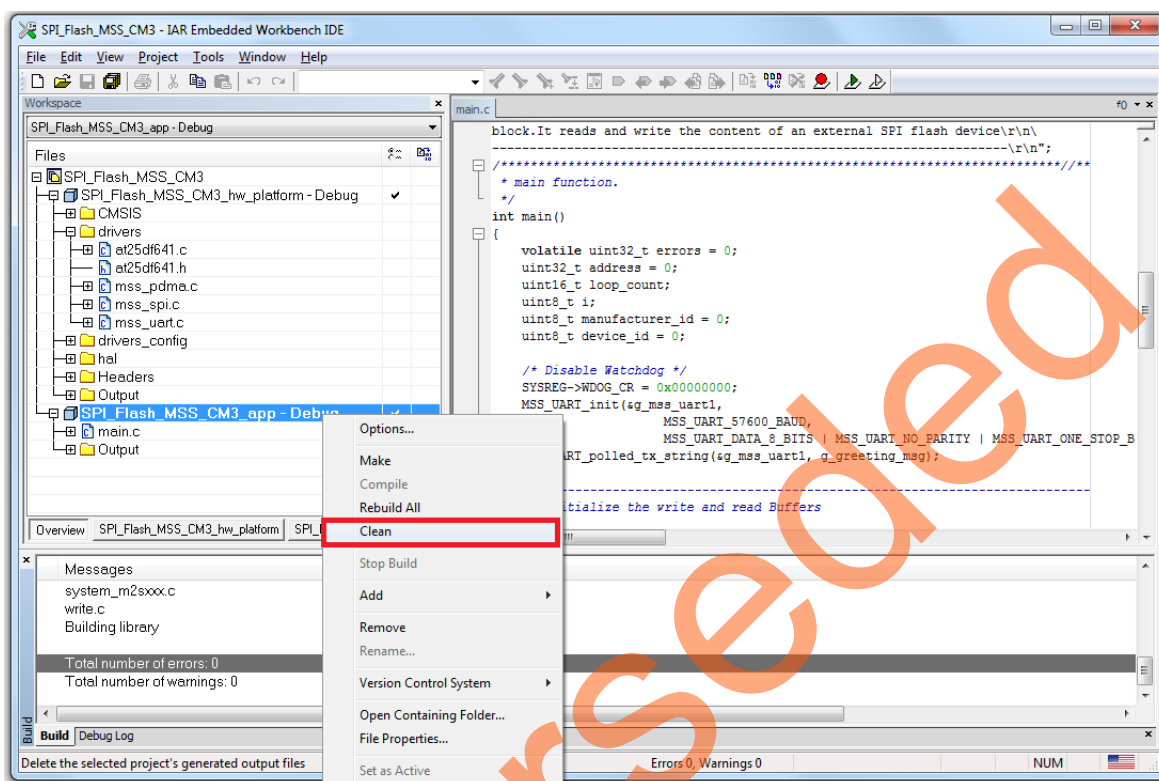


Figure 34 • IAR Workspace - Execute Clean on SPI_Flash_MSS_CM3_app Project

20. After cleaning the project, the **Messages** log section shows that some files are deleted as shown in Figure 35.

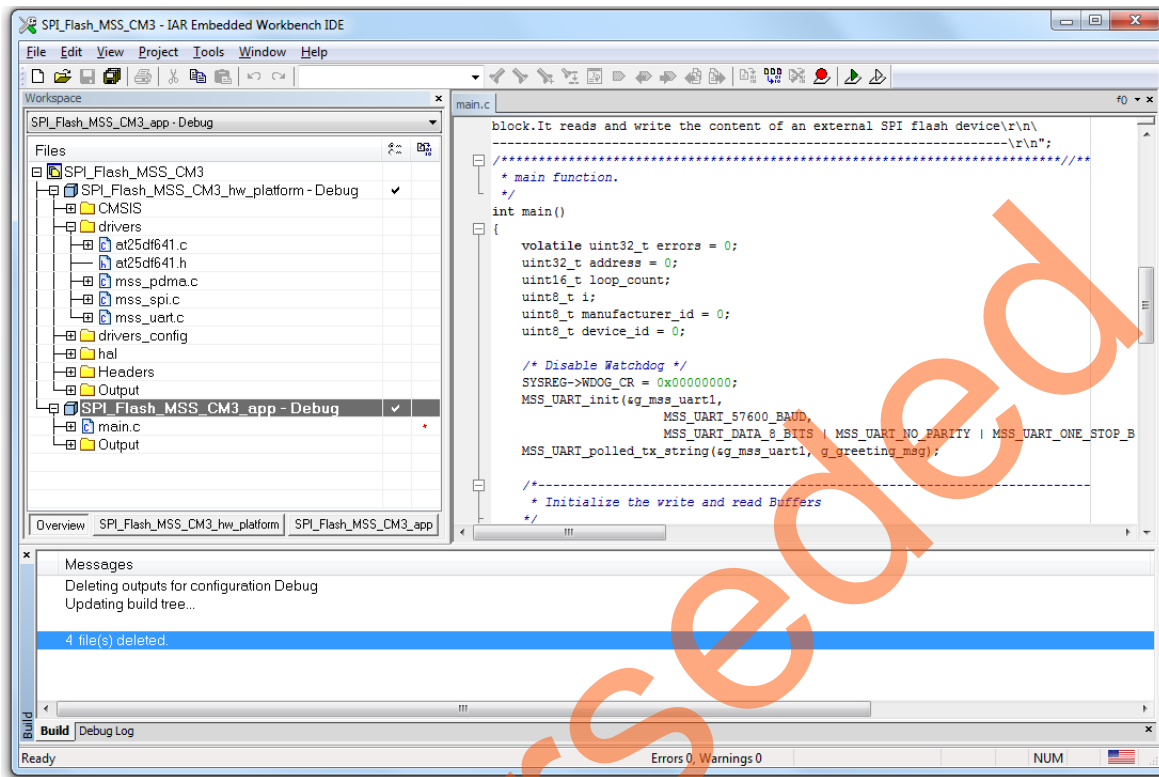


Figure 35 • IAR Workspace - Deleted Files

21. Right-click on the **SPI_Flash_MSS_CM3_app - Debug** project name and click **Rebuild All** as shown in [Figure 36](#).

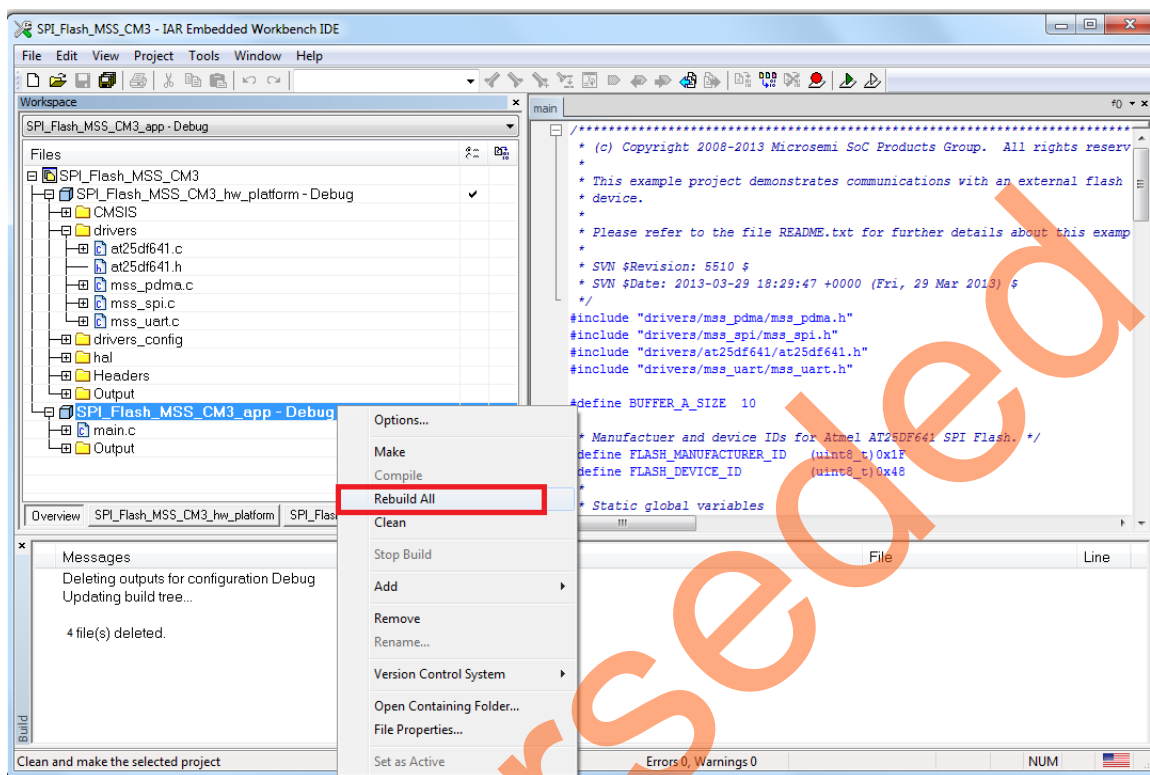


Figure 36 • IAR Workspace - Select Rebuild All

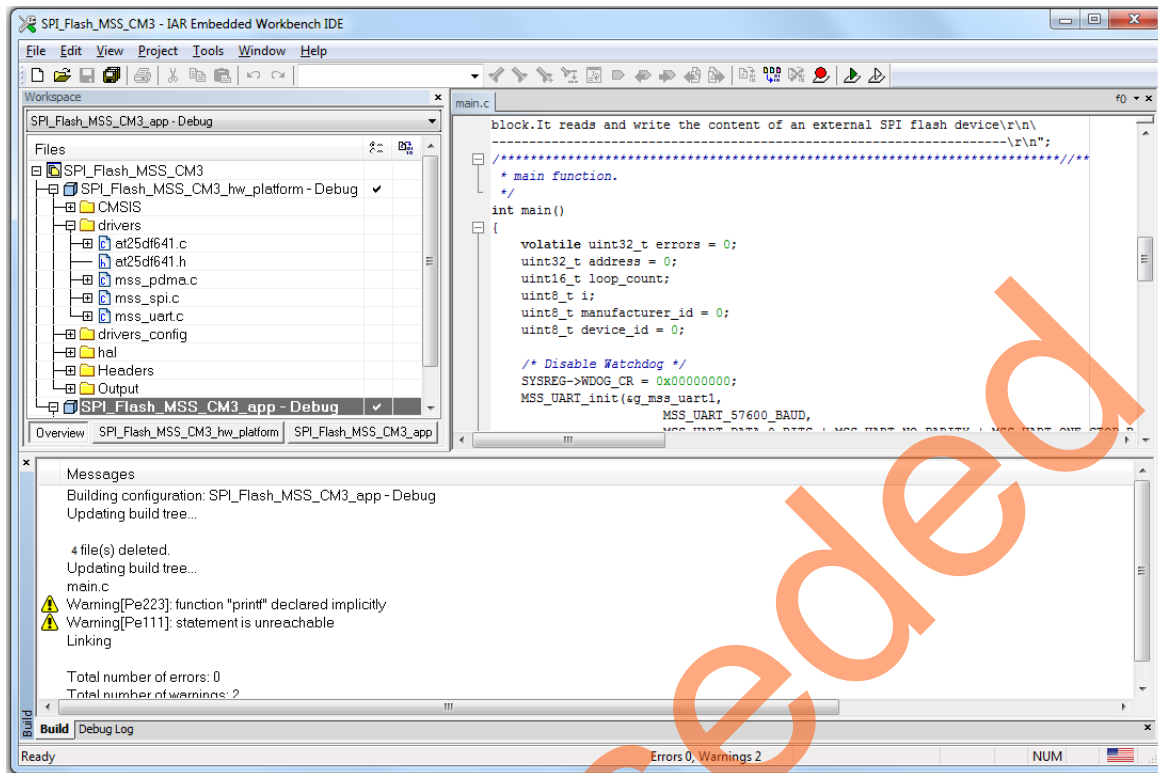


Figure 37 • IAR Workspace - Rebuild All

Step 5: Configuring Serial Terminal Emulation Program

1. Install the USB driver. For serial terminal communication through the FTDI mini USB cable, install the FTDI D2XX driver. Download the drivers and the installation guide from:
www.microsemi.com/soc/documents/CDM_2.08.24_WHQL_Certified.zip.

2. Connect the host PC to the J24 connector using the USB Mini-B cable. The USB to UART bridge drivers are automatically detected. Of the four COM ports, select the one with Location as **on USB Serial Converter D**. Figure 38 shows an example Device Manager window.

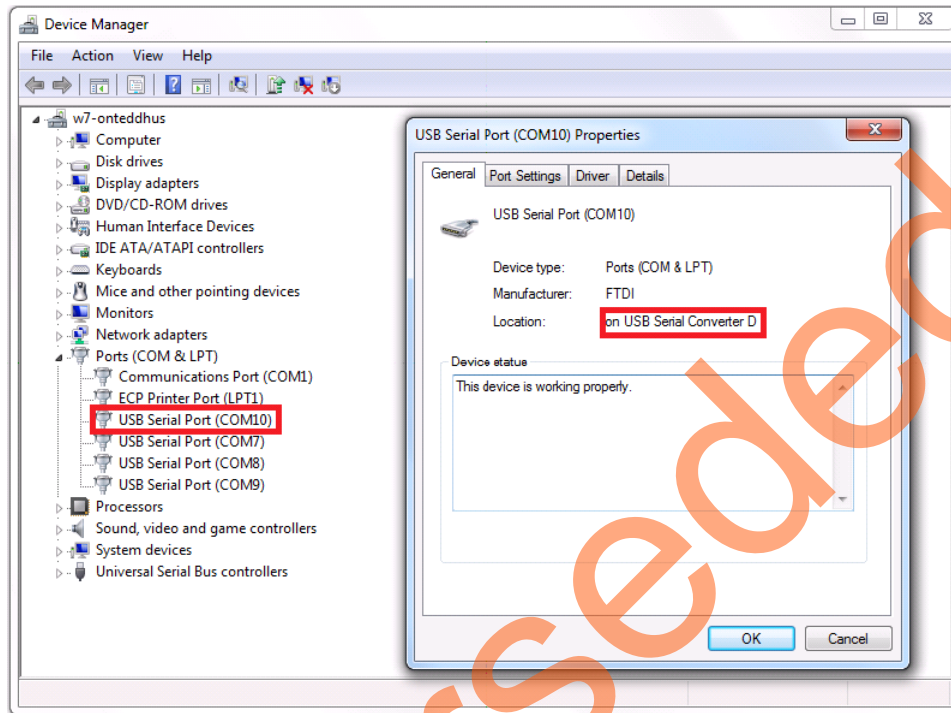


Figure 38 • Device Manager Window

3. Start the HyperTerminal session. If the HyperTerminal program is not available in the computer, any free serial terminal emulation program such as PuTTY or TeraTerm can be used. Refer to the [Configuring Serial Terminal Emulation Programs Tutorial](#) for configuring the HyperTerminal, TeraTerm, or PuTTY.

The HyperTerminal settings are as follows:

- 57,600 baud rate
- 8 data bits
- 1 stop bit
- No parity
- No flow control

Step 6: Debugging the Application Project using IAR Workbench

1. Switch to **SPI_Flash_MSS_CM3_app - Debug** tab from Overview tab as shown in Figure 39.

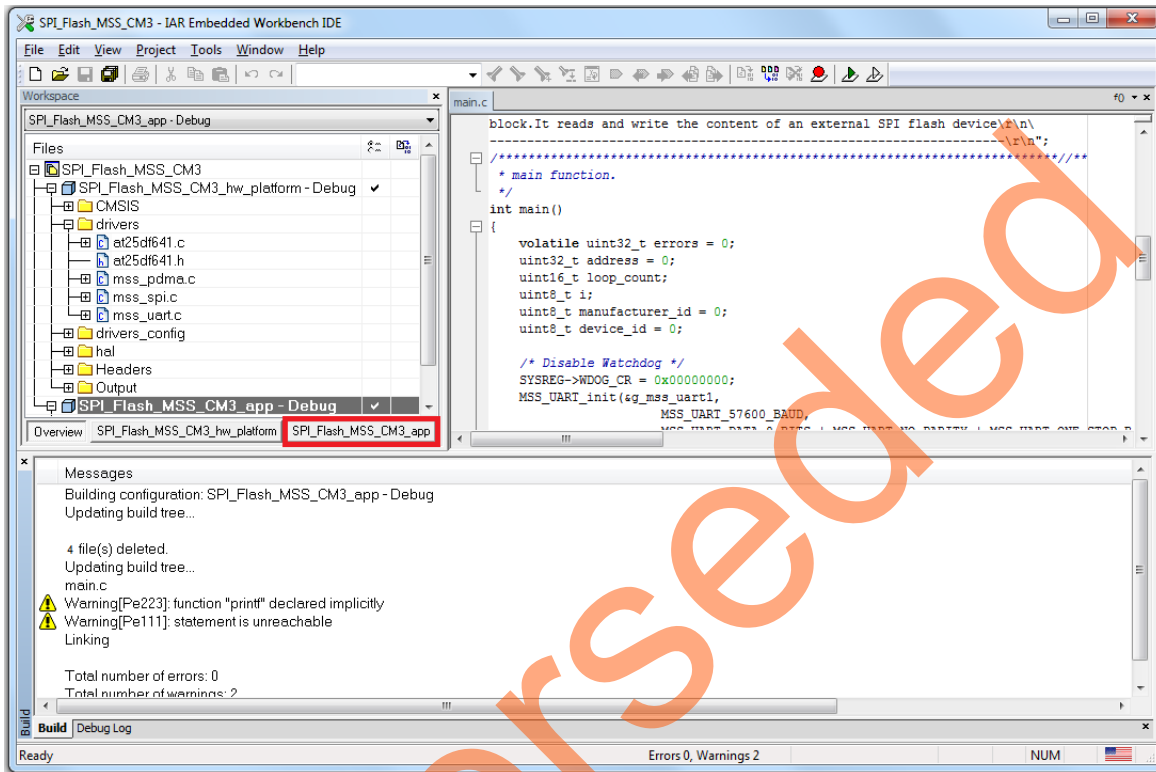


Figure 39 • Debug Window

2. In the IAR Workbench, click **Download and Debug** as shown in Figure 40.

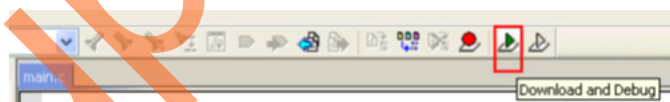


Figure 40 • IAR Workbench - Download and Debug Option

IAR Debugger Perspective window is opened, as shown in [Figure 41](#).

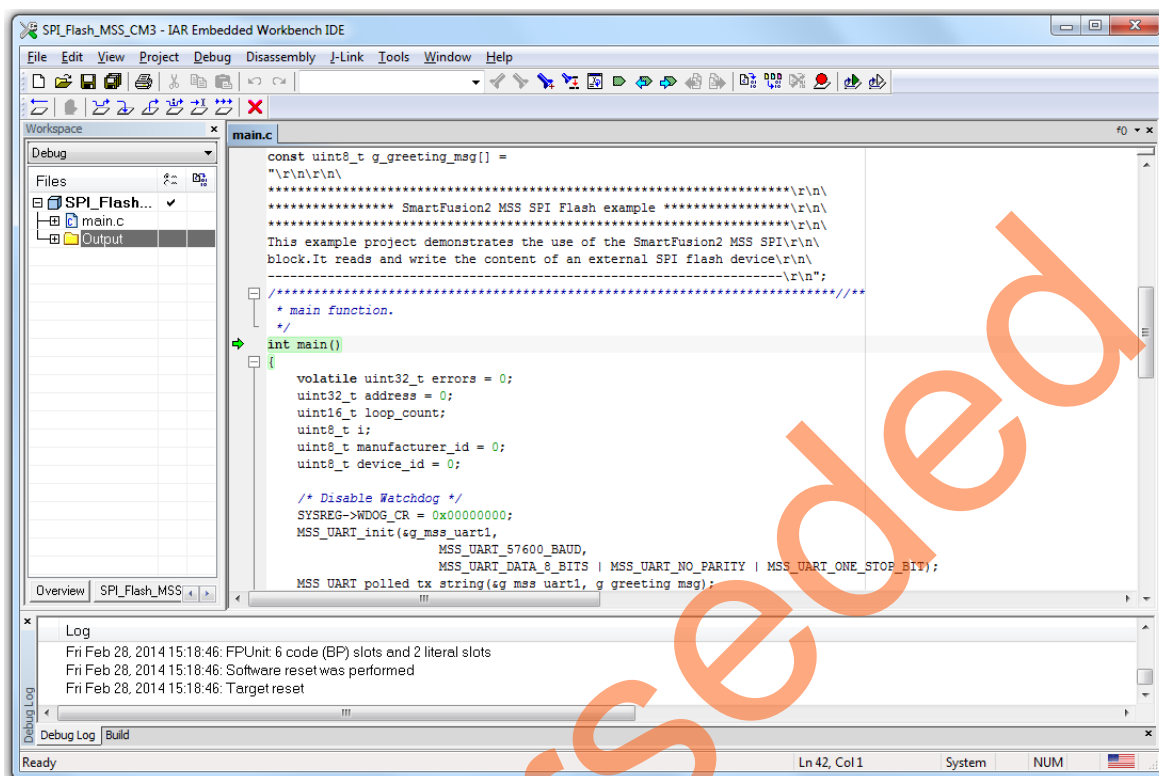


Figure 41 • IAR Workbench - Debugger Perspective

- Click **Go** on IAR workbench to run the application as shown in [Figure 42](#).

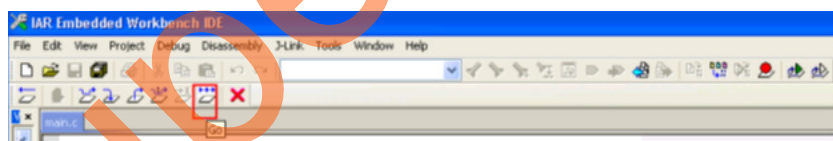


Figure 42 • IAR Workbench - Go Option

4. On successful operation, the HyperTerminal window displays a message as **Read Data From Flash** as shown in Figure 43.

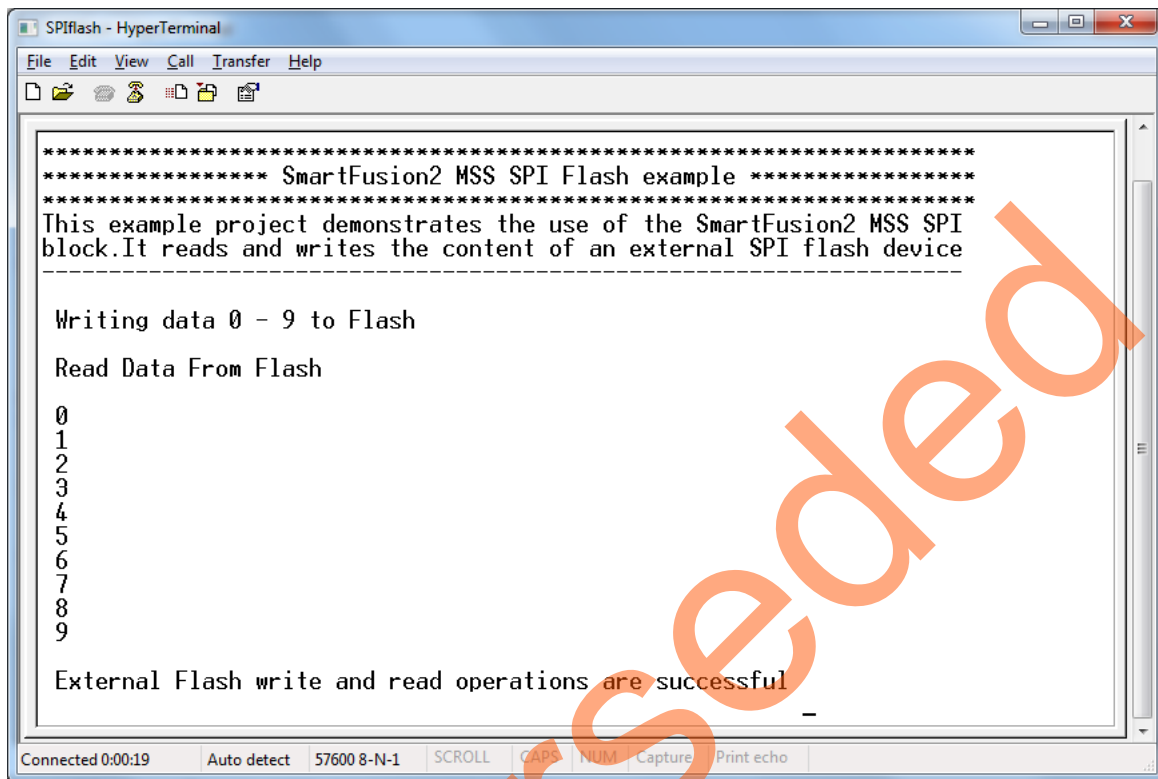


Figure 43 • HyperTerminal Window

- Click **View > Register** to view the values of the ARM[®] Cortex[™]-M3 processor internal registers as shown in Figure 44.

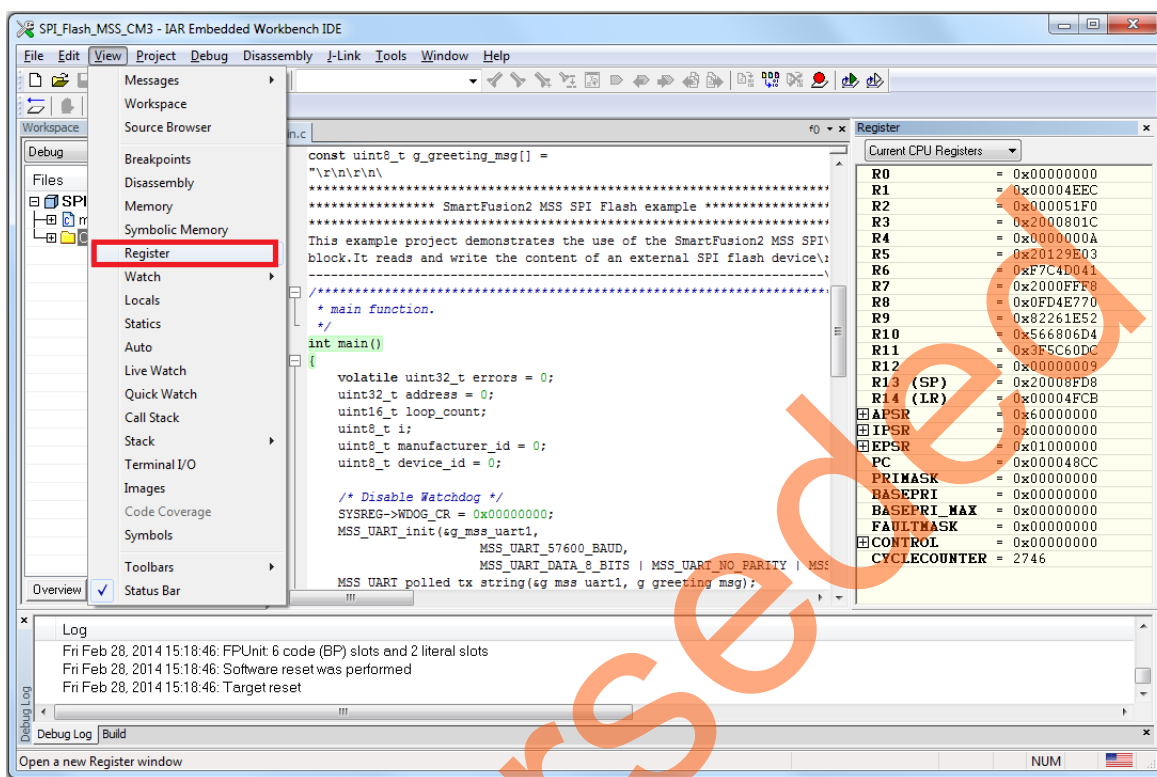


Figure 44 • Values of the Cortex-M3 Internal Registers

- Click **View > Statics** to view the values of variables in the source code as shown in Figure 45.

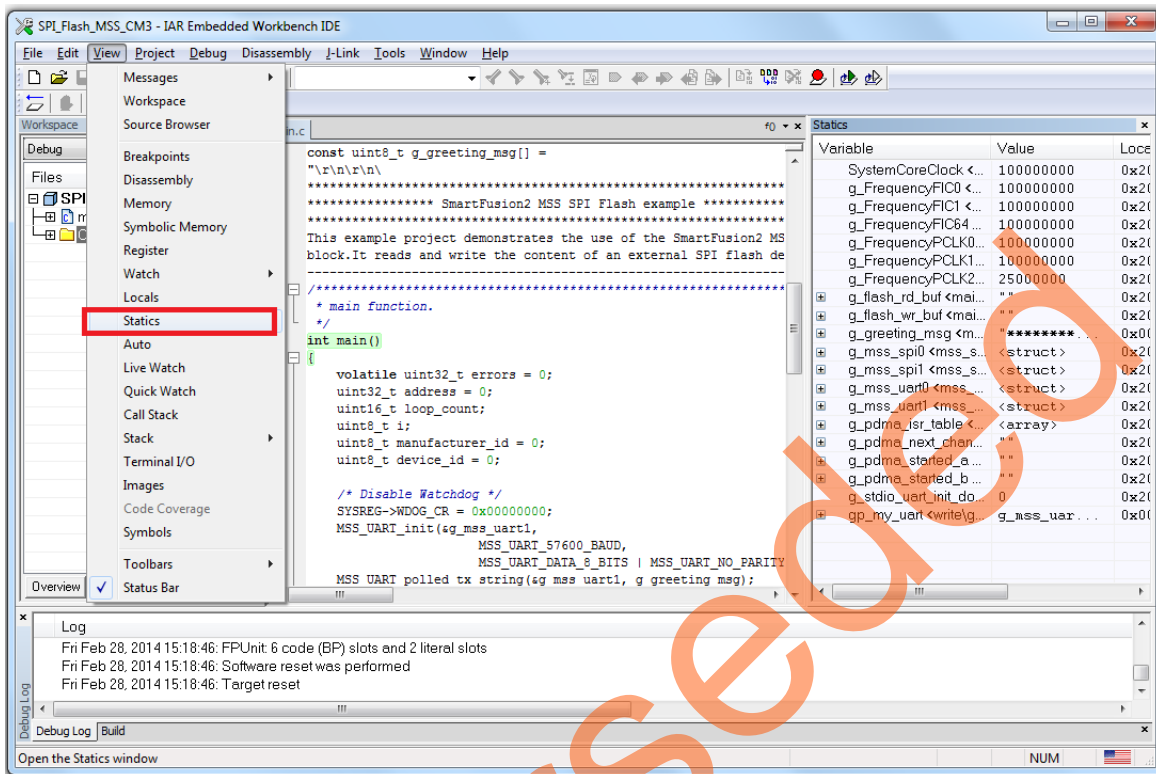


Figure 45 • Values of the Source Code Variables

7. Click **View > Disassembly** to view the values of variables in the source code as shown in Figure 46.

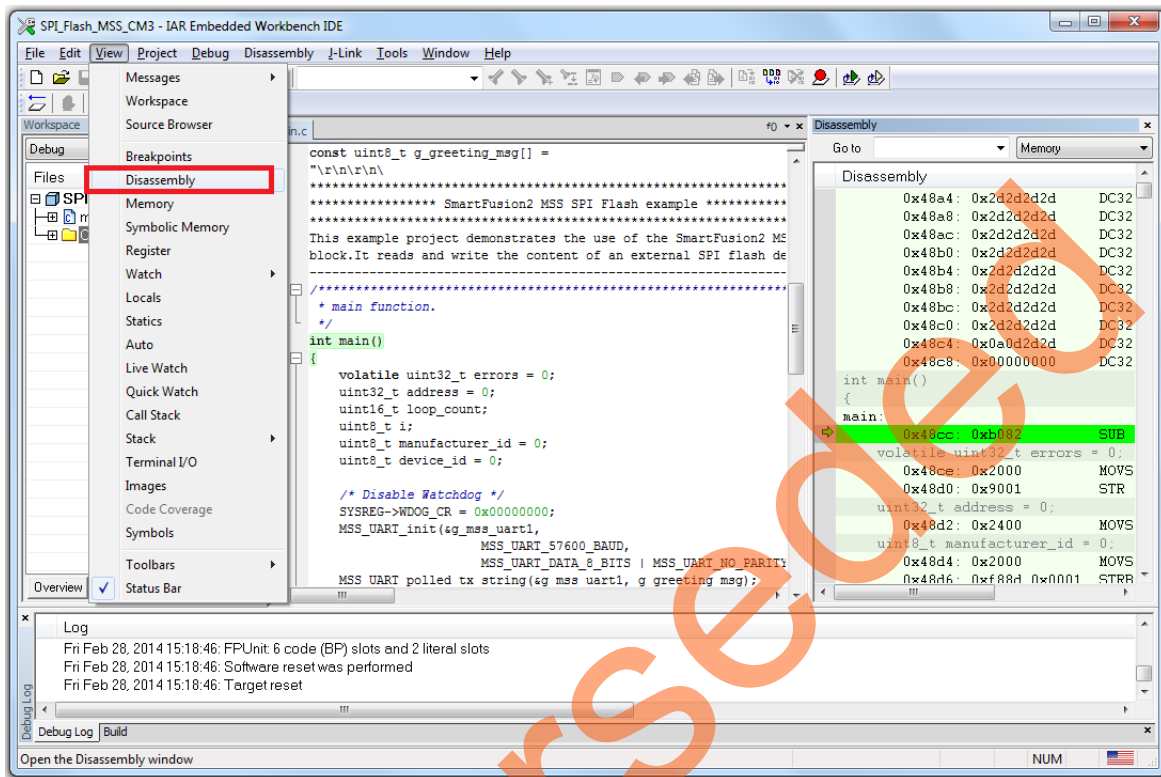


Figure 46 • Assembly Level Instructions

8. When debug process is finished, terminate execution of the code by choosing **Debug > Stop Debugging** as shown in Figure 47.

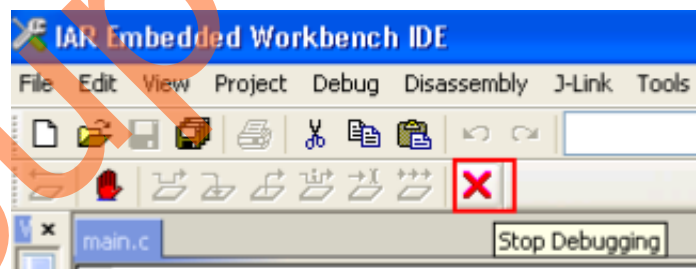


Figure 47 • IAR Workbench - Stop Debugging Option

9. The Step Level Debugging can be performed before running the application using Go. These can be accessed from the Debug menu or on the IAR workbench as shown in Figure 48:

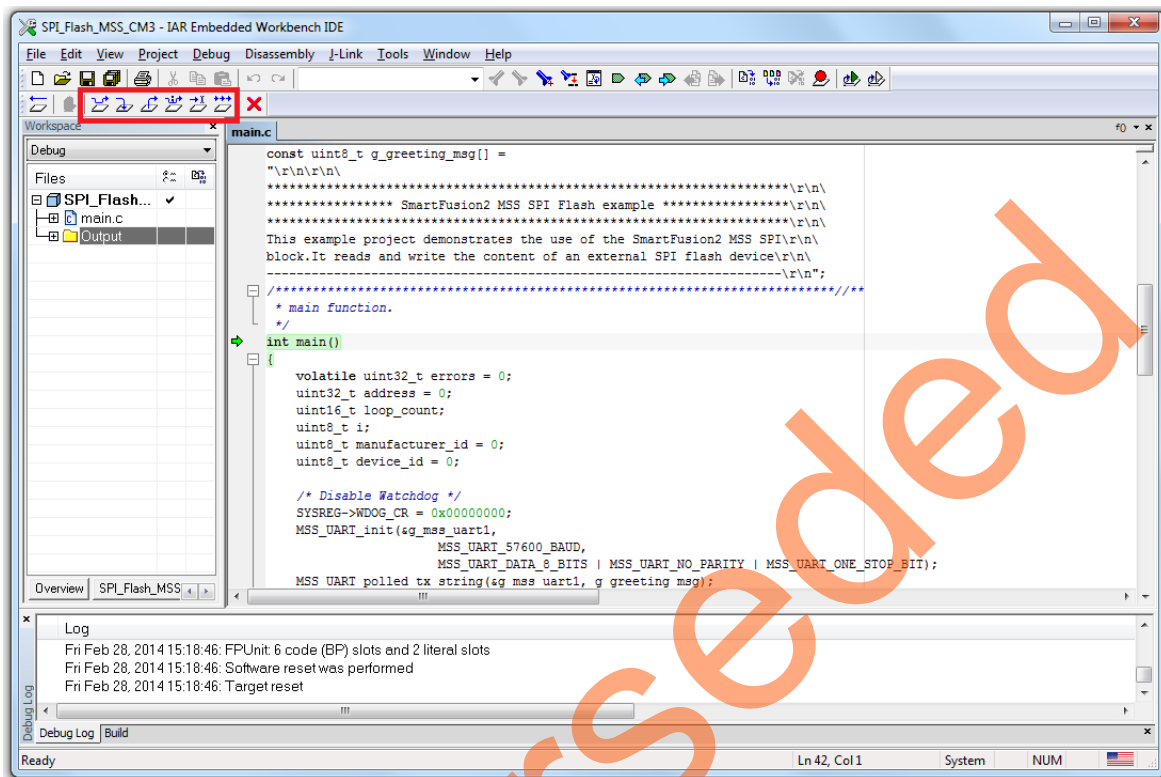


Figure 48 • IAR Workbench - Step Level Debugging

- Source code can be single-stepped by selecting from the Debug menu **Debug > Step Into**, **Debug > Step Out**, **Debug > Step Over** or selecting the respective options from the IAR workbench as shown in Figure 48. Observe the changes in the source code window and Disassembly view. Performing a Step Over provides an option for stepping over functions. The entire function is run but there is no need to single-step through each instruction contained in the function.
10. Close **Debug Perspective** by selecting **Close Perspective** from the Window menu.
 11. Close IAR Embedded Workbench using **File > Exit**.
 12. Close the HyperTerminal using **File > Exit**.

Conclusion

This tutorial provides steps to create a Libero SoC design using the System Builder. It describes the procedure to build, debug, and run an IAR Embedded Workbench application. It also provides a simple design to access the SPI flash.

Appendix A - Board Setup for Programming the Tutorial

Figure 1 shows the board setup for programming the tutorial on the SmartFusion2 Development Kit board.



Figure 1 • SmartFusion2 Development Kit Setup

Appendix B- Board Setup for Running the IAR Tutorial

Figure 1 shows the board setup for running and debugging the tutorial on the SmartFusion2 Development Kit board.



Figure 1 • SmartFusion2 Development Kit J-Link Programmer Connection

Appendix C - SmartFusion2 Development Kit Board Jumper Locations

Figure 1 shows the jumper locations on the SmartFusion2 Development Kit board.

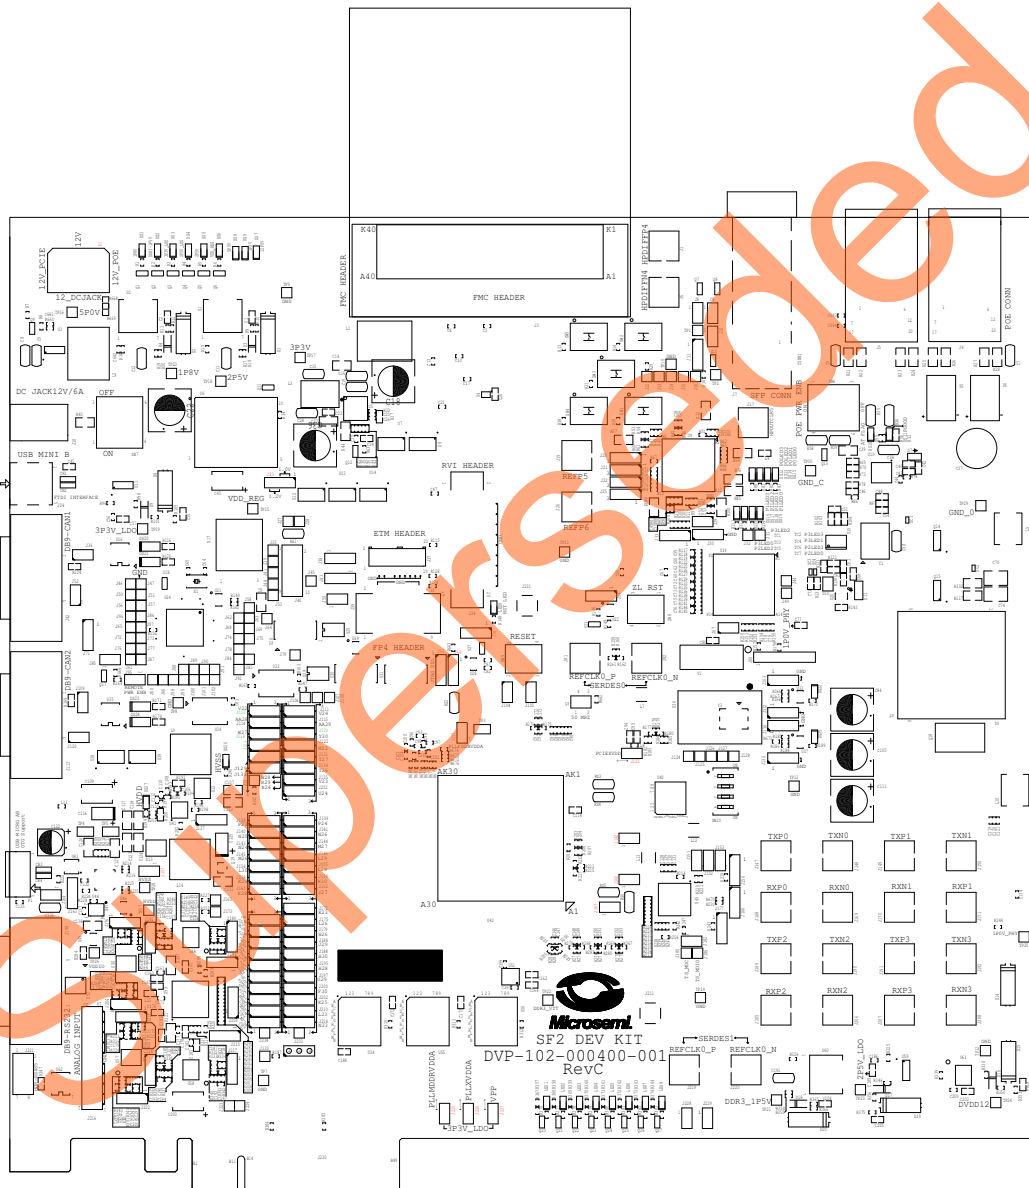


Figure 1 • SmartFusion2 Development Kit Board Jumper Locations

Note:

- Jumpers highlighted in red are set by default.
- Jumpers highlighted in green must be set manually.
- The location of the jumpers in Figure 1 are searchable.

Product Support

Microsemi SoC Products Group backs its products with various support services, including Customer Service, Customer Technical Support Center, a website, electronic mail, and worldwide sales offices. This appendix contains information about contacting Microsemi SoC Products Group and using these support services.

Customer Service

Contact Customer Service for non-technical product support, such as product pricing, product upgrades, update information, order status, and authorization.

From North America, call 800.262.1060

From the rest of the world, call 650.318.4460

Fax, from anywhere in the world, 408.643.6913

Customer Technical Support Center

Microsemi SoC Products Group staffs its Customer Technical Support Center with highly skilled engineers who can help answer your hardware, software, and design questions about Microsemi SoC Products. The Customer Technical Support Center spends a great deal of time creating application notes, answers to common design cycle questions, documentation of known issues, and various FAQs. So, before you contact us, please visit our online resources. It is very likely we have already answered your questions.

Technical Support

Visit the Customer Support website (www.microsemi.com/soc/support/search/default.aspx) for more information and support. Many answers available on the searchable web resource include diagrams, illustrations, and links to other resources on the website.

Website

You can browse a variety of technical and non-technical information on the SoC home page, at www.microsemi.com/soc.

Contacting the Customer Technical Support Center

Highly skilled engineers staff the Technical Support Center. The Technical Support Center can be contacted by email or through the Microsemi SoC Products Group website.

Email

You can communicate your technical questions to our email address and receive answers back by email, fax, or phone. Also, if you have design problems, you can email your design files to receive assistance. We constantly monitor the email account throughout the day. When sending your request to us, please be sure to include your full name, company name, and your contact information for efficient processing of your request.

The technical support email address is soc_tech@microsemi.com.

My Cases

Microsemi SoC Products Group customers may submit and track technical cases online by going to [My Cases](#).

Outside the U.S.

Customers needing assistance outside the US time zones can either contact technical support via email (soc_tech@microsemi.com) or contact a local sales office. [Sales office listings](#) can be found at www.microsemi.com/soc/company/contact/default.aspx.

ITAR Technical Support

For technical support on RH and RT FPGAs that are regulated by International Traffic in Arms Regulations (ITAR), contact us via soc_tech_itar@microsemi.com. Alternatively, within [My Cases](#), select **Yes** in the ITAR drop-down list. For a complete list of ITAR-regulated Microsemi FPGAs, visit the [ITAR](#) web page.

Superseded

Superseded



Microsemi®

Microsemi Corporate Headquarters
One Enterprise, Aliso Viejo CA 92656 USA
Within the USA: +1 (800) 713-4113
Outside the USA: +1 (949) 380-6100
Sales: +1 (949) 380-6136
Fax: +1 (949) 215-4996
E-mail: sales.support@microsemi.com

Microsemi Corporation (Nasdaq: MSCC) offers a comprehensive portfolio of semiconductor and system solutions for communications, defense and security, aerospace, and industrial markets. Products include high-performance and radiation-hardened analog mixed-signal integrated circuits, FPGAs, SoCs, and ASICs; power management products; timing and synchronization devices and precise time solutions, setting the world's standard for time; voice processing devices; RF solutions; discrete components; security technologies and scalable anti-tamper products; Power-over-Ethernet ICs and midspans; as well as custom design capabilities and services. Microsemi is headquartered in Aliso Viejo, Calif. and has approximately 3,400 employees globally. Learn more at www.microsemi.com.

© 2014 Microsemi Corporation. All rights reserved. Microsemi and the Microsemi logo are trademarks of Microsemi Corporation. All other trademarks and service marks are the property of their respective owners.